

**PARTS AND MAINTENANCE
MANUAL**

**HAULSTER[®] POLICE VEHICLE
MODEL 898488**

Part No. 2703045

1 GENERAL INFORMATION

1.1 GENERAL INFORMATION



IMPORTANT!

THIS MANUAL WILL AID YOU IN THE SAFE OPERATION AND PROPER MAINTENANCE OF YOUR EQUIPMENT. READ MANUAL THOROUGHLY BEFORE ATTEMPTING OPERATION. IF ANY PORTION IS NOT CLEARLY UNDERSTOOD, CONTACT AN AUTHORIZED DEALER FOR CLARIFICATION.

To make sure you are fully aware of safety and service information, the following two symbols are used throughout this manual.



This symbol is used throughout the manual to alert you to information about unsafe actions or situations, and will be followed by the word DANGER, WARNING, or CAUTION. DANGER indicates immediate hazards that may result in severe injury or death. WARNING indicates unsafe actions or situations that may cause severe injury, death and/or major equipment or property damage. CAUTION indicates unsafe actions or situations that may cause injury, and/or minor equipment or property damage.

NOTE: This appears next to information or instructions which will help you operate and maintain your equipment the right way.



WARNING

The information and instructions included in this manual alert you to certain things you should do very carefully. If you do not, you could:

- hurt yourself or others
- hurt the next person who operates the equipment
- damage the equipment.

This manual contains essential operation and safety information and must remain with the unit at all times, within easy access of any operator.

Additional manuals are available through your dealer.

IMPORTANT!

THIS EQUIPMENT SHOULD NOT BE MODIFIED OR ADDED TO WITHOUT THE MANUFACTURER'S AUTHORIZATION.



WARNING

Altering this equipment in any manner which adversely affects the equipments operation, performance, durability or use, may cause hazardous conditions.

Direct any inquiries to:

Textron Turf Care and Specialty Products
Attn: Director of Engineering Services
P.O. Box 82409
Lincoln, NE 68501-2409 USA

SPECIFICATION INFORMATION

All information contained in this manual is the latest available at the time of printing. Textron Turf Care and Specialty Products reserves the right to make changes at any time without notice.

Whenever a name brand product is specified, an equivalent product may be used unless stated otherwise.

CHANGE OF OWNERSHIP OR ADDRESS

Textron Turf Care and Specialty Products makes every effort to keep owners informed of all safety related information. Therefore, changes in ownership and/or address should be reported to the manufacturer.

Your dealer has REGISTRATION CHANGE FORMS which will be filled out and filed by the dealer for his records, and a copy will be sent to the manufacturer.

DEALER INFORMATION

For your nearest dealer location write to:

Textron Turf Care and Specialty Products
Attn: Sales Coordinator
P.O. Box 82409
Lincoln, NE 68501-2409 USA

In the USA and Canada call 1-888-922-8873 (dealer information only).

TABLE OF CONTENTS

SECTION	PAGE
1 General Information	Inside Front Cover
2 Identification	
2.1 Vehicle Identification	3
2.2 Serial & Model Number	3
2.3 Engine Serial Number	3
3 Specifications	
3.1 Vehicle	4
3.2 Dimensions	4
3.3 Capacities	4
3.4 Battery	4
3.5 Fuel	4
3.6 Brake Fluid	4
3.7 Engine Oil	4
3.8 Lubrication	4
3.9 Gear Ratios	5
3.10 Engine	5
4 Maintenance	
4.1 Maintenance	6
4.2 Maintenance Guide	6
4.3 Lubrication Chart	7
4.4 Bulbs, Fuses And Flasher	8
4.5 Fuses	8
4.6 Engine Maintenance	8
4.7 Engine Access	9
4.8 Engine Oil Level	9
4.9 Battery	10
4.10 Jump Starting With Booster Battery	10
4.11 Engine Cooling System	10
4.12 Draining The Cooling System	11
4.13 Filling The Cooling System	11
4.14 Air Cleaner	12
4.15 Servicing Air Cleaner Element	12
4.16 Checking Air Cleaner Element	12
4.17 Installing Air Cleaner Element	12
4.18 Lubricating Brake Pedal Bushings	12
4.19 Automatic Transmission	13
4.20 Differential	13
4.21 Jacks, Jacking Locations And Using A Hoist	13
4.23 Changing The Rear Wheel	14
4.24 Changing The Front Wheel	14
4.25 Tire Replacement	15
4.26 Extended Storage	15
4.27 Touch-Up Paint	15
5 Torque Chart	16
6 Parts	
6.1 Engine Gaskets	18–19
6.2 Cylinder Head	20–21
6.3 Cylinder Block	22–23
6.4 Crankshaft, Pistons	24–25
6.5 Camshaft	26–27
6.6 Timing Belt & Cover	28–29
6.7 Intake Manifold/Throttle Body	30–31
6.8 PVC Valve	32
6.9 Exhaust Manifold	33
6.10 Oil Pump	34–35
6.11 Water Pump & Outlet, Thermostat	36–37
6.12 Starter	38–39
6.13 Driveshaft, Torque Converter	40–41
6.14 Automatic Transmission	42–43

TABLE OF CONTENTS

SECTION	PAGE
6.15 Automatic Transmission Pan, Dipstick & Gaskets	44-45
6.16 Transmission Tubes, Oil Pump, Solenoids & Shift Switch	46-47
6.17 Transmission Input Shaft & Clutch	48-49
6.18 Trnsmission Planetary Gears & Output Shaft	50-51
6.19 Brake Band & Shift Shaft	52-53
6.20 Transmission Valve	54-55
6.21 Main Frame	56-57
6.22 Platform Frame	58-59
6.23 Body Front	60-61
6.24 Engine Cover & Seat	62-63
6.25 Rear Spring	64-65
6.26 Front Fork	66-67
6.27 Steering Gear, Steering Wheel & Horn	68-69
6.28 Throttle Pedal	70-71
6.29 Shifter & Shift Cable	72-73
6.30 Rear Brakes, Hub & Wheel Cylinder	74-75
6.31 Front Brakes, Hub & Axle	76-77
6.32 Hydraulic Brake System	78-79
6.33 Exhaust System	80-81
6.34 Fuel System	82-83
6.35 Differential	84-87
6.36 Cooling System	88-89
6.37 Alternator & Governor	90-91
6.38 Hoses & Air Filter	92-93
6.39 Oil Fill & Filter	94-95
6.40 Turn Signal Switch	96-97
6.41 Front Shock Absorber	98
6.42 Rear Bumper	99
6.43 Front & Rear Tires	100
6.44 Front Bumper	101
6.45 Heater/Defroster	102-103
6.46 Decals	104-105
6.47 Electrical Components (Front)	106-107
6.48 Electrical Components (Main)	108-109
6.49 REar Box & Sides (Side Opening)	110-111
6.50 Seat Belt	112-113
6.51 Clamps, Gromments, Bushings & Cable Ties	114-115
6.52 Cab with Sliding Doors	116-117
6.53 Cab	118-119
6.54 Sliding Doors	120-121
6.55 Modification Rear Box & Lid	122-123
6.56 Modification Traffic Light Bar	124
6.57 Modification Amber Flashing Light	125
6.58 Modification Flashing Light Bar	126
6.59 Modification Back Up Alarm	127
6.60 Turn Signal Flasher, Tire & Rim	128

2.1———VEHICLE IDENTIFICATION


NOTE: The following identification numbers MUST appear on all correspondence concerning this vehicle.

The Vehicle Identification Number (VIN), model number, and serial number are all printed on the Nameplate/Identification decal attached to the upper left portion of the kick panel.



Nameplate/Identification Decal


2.2———SERIAL & MODEL NUMBER

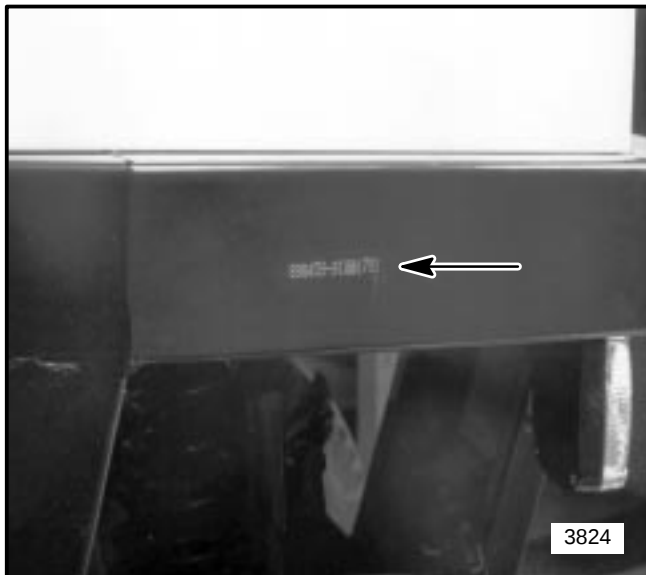

Serial Number And Model Number


2.3———ENGINE SERIAL NUMBER

The engine serial number is stamped into the right hand skirt of the cylinder block located directly below the air intake manifold.

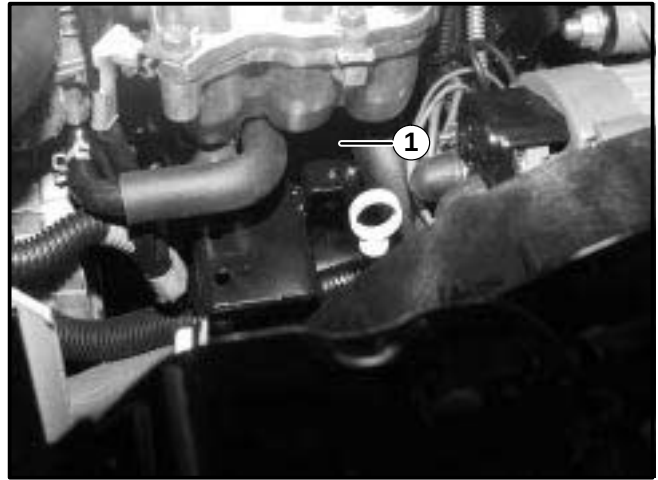

1. Stamped Engine Serial Number

A hand lettered engine serial number has been placed on the left side of the engine below the oil fill.

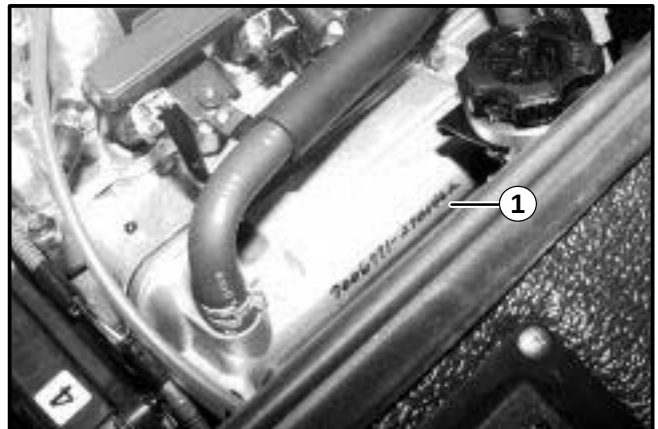

1. Hand Lettered Engine Serial Number

3 SPECIFICATIONS

3.1 VEHICLE

All specifications subject to change without prior notification.

Your Haulster is powered by a 3-cylinder, gasoline powered, liquid cooled, four cycle engine, with a single overhead camshaft, 12 valve, electronic ignition, automatic choke. The block is cast iron and the cylinder head is aluminum.

Power is transmitted to the rear wheels by a electronically controlled three speed automatic transmission, driveshaft with two universal joints and a worm gear differential.

3.2 DIMENSIONS

Rated Weight Capacity 1000 lbs. (455 kg)
Overall Height (w/cab) 80" (2.0 M)
Overall Length 119" (3.0 M)
Overall Width 54" (1.4 M)
Outside Clearance Circle 21.5' (6.6 M)
Inside Clearance Circle 8.4' (2.5 M)
Weight (w/fuel and battery) 1749 lbs. (794 kg)
Wheelbase 84" (2.1 M)
Rear Wheel Tread 42" (1.1 m)
Tires 145R12 Radial, Load Range C

3.3 CAPACITIES

Fuel Tank 7.5 gal. (28.5 L)
Transmission, automatic 3.7 qt. (4.2 L)
Differential (8.2:1 or 10.25:1) 12 oz. (0.4 L)
Cooling System 8 qts. (7.6 L)
Crankcase (including filter): 3.3 qts. (3.1 L)

3.4 BATTERY

Volts 12
BCI Group Size 24
Cold Cranking Amps Minimum 420
Reserve Capacity Minutes Minimum 70
Ground Terminal Polarity NEGATIVE

3.5 FUEL

Unleaded Gasoline 87 Octane or higher

NOTE: We DO NOT recommend the use of ALCOHOL bearing fuels in any of our products. The use of these fuels may create a potential safety hazard.



WARNING

Gasoline containing ALCOHOL can cause deterioration of some non-metallic materials in the fuel system.

Gasoline containing ALCOHOL will attract and hold moisture inside fuel tanks. Moisture may cause corrosion of metallic parts within the fuel system.

All fuel hoses **MUST** be inspected frequently and replaced if excessive stiffness, deterioration or fuel leakage is found.

Fuel leakage from a fuel system can occur while the system is in use, in transit or in storage. Such leakage can contribute to an explosion or fire, causing serious bodily injury or death.

NOTE: The use of alcohol bearing fuels can cause engine malfunction, particularly "vapor lock" at temperatures above 50° F (10° C).

3.6 BRAKE FLUID

Use Type DOT (3)



WARNING

CLEAN MASTER CYLINDER FILLER CAP BEFORE REMOVING. CONTAMINATES MAY CAUSE BRAKE FAILURE. USE ONLY D.O.T. 3 FLUID FROM A SEALED CONTAINER. 825622

3.7 ENGINE OIL

Recommended Viscosity SAE 10W40
(for all temperature ranges)

Use only oils recommended for service class SF, SG or SH.

NOTE: Using oil other than the service classes listed, or oil change intervals longer than recommended can reduce engine life. Damage to engines due to improper maintenance or use of incorrect oil quality and/or viscosity is not covered by the engine manufacturers warranty.

3.8 LUBRICATION

Automatic Transmission Fluid Mercon/Dexron II
Differential Oil SAE EP 80-90 Gear Lube
Pressure Gun Lubricant Lithium Based

4 MAINTENANCE

4.1 MAINTENANCE



WARNING

When replacement parts are required, use only genuine Cushman parts or parts with equivalent characteristics including type, strength and material. Failure to do so may result in product malfunction and possible injury to the operator and/or bystanders.

NEVER attempt to perform service or maintenance functions on this vehicle if you are **UNTRAINED** or **UNAUTHORIZED**. Improper maintenance can cause hazardous conditions. See your authorized Cushman dealer for necessary maintenance and service.

When it is necessary to raise the vehicle for any repair or service, use jackstands to provide adequate support. **DO NOT** rely on hydraulic or mechanical jacks for support.

To avoid unexpected vehicle movement, **ALWAYS** set the parking brake and make sure the transmission is in **PARK** (out of gear) before working on a running engine.

ALWAYS replace immediately any warning decals that become damaged or hard to read.

To reduce risk of fire, always keep the engine free of excessive grease. If fuel system leakage is detected, repair leak immediately. Fuel is flammable and explosive under certain conditions. **ALWAYS** stop engine and do not allow open flames or sparks when performing any maintenance function involving fuel.

4.2 MAINTENANCE GUIDE

The following maintenance charts have been compiled as a general guideline for service intervals, based on hours of operation.

AS REQUIRED

Service air cleaner element
(Severe conditions may require more frequent service – refer to Air Cleaner section.)

DAILY

Check engine oil level
Check cooling system levels
Clean radiator intake screen, fins, & oil cooler fins
Check fuel level
Check engine for loose parts, damage or leaks
Check for engine noise or vibration

FIRST 50 HOURS OR 500 MILES

Perform previous services
Change Engine Oil*
Change Engine Oil Filter*

EVERY 100 HOURS OR 1000 MILES

Perform previous services
Check automatic transmission fluid level
Lubricate chassis (see lube chart)
Check tire pressure
Check differential oil level**
Check hydraulic brake fluid
Check brake adjustment
Check governor oil level
Check valve clearance first 100 hours then yearly

EVERY 200 HOURS OR 2000 MILES

Perform previous services
Check spark plugs for fouling
(regap or replace spark plugs as necessary)

EVERY 600 HOURS, 6000 MILES OR YEARLY

Perform previous services

Clean battery and terminals
 Replace fuel filter
 Repack front wheel bearings
 Repack rear wheel bushings
 Check starter motor brushes
 Check brake linings
 Change differential oil
 Change transmission oil
 Check alternator
 Check fuel hoses and clamps
 Drain and replace radiator coolant
 Check radiator hoses and clamps
 Check and clean choke linkage
 Check valve clearance

EVERY 1500 HOURS OF OPERATION


Replace timing belt after every 1500 hours of operation

See Specifications section for recommended lubricants and brake fluid.

- * Depending on operating conditions, the engine oil and oil filter may need more frequent replacement to maintain engine performance and help avoid unnecessary repairs.
- ** The differential oil **MUST** be changed after the first 100 hours of operation.

4.3

LUBRICATION CHART

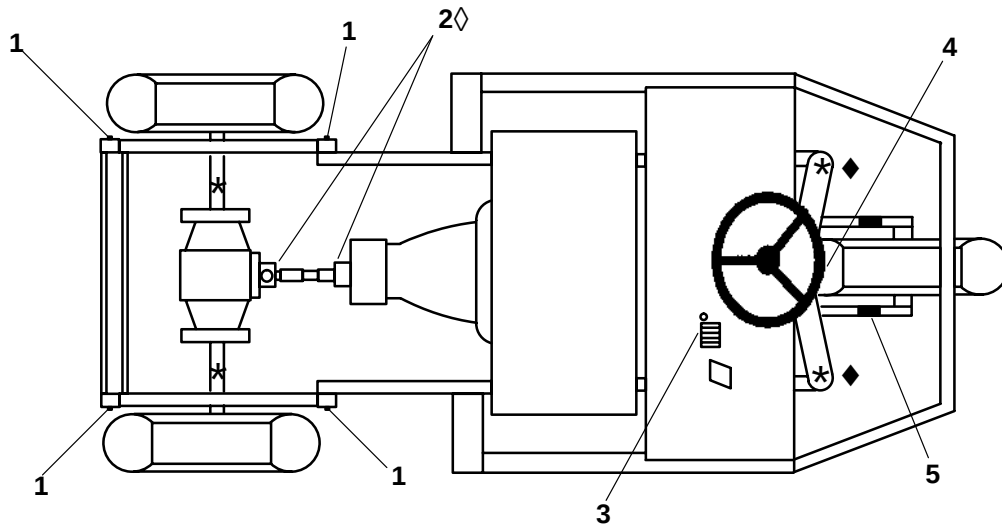

Lubricate all chassis fittings with lithium based lubricant every 100 hours or 1000 miles.

Ref. No.	Description	No. Req'd.	Ref. No.	Description	No. Req'd.
1	Rear Spring Shackles	6	4	Lower Fork Pivot Bearing	1
2	Drive Shaft	2	5	Leading Link Bushing	2
3	Brake Pedal Bellcrank Pivot Bushings	1			

◇ Too much lubricant can and will damage these seals.

* Indicates Jacking Locations

◆ Indicates Emergency Tow Line Attachment Locations

4 MAINTENANCE


4.4 BULBS, FUSES AND FLASHER

Description	Specification or Trade No.	Cushman Part No.
BULBS		
Ammeter light	1 CP No. 53	811953
Headlight	65-45 Watt No. H6545	837303
Taillight	32-4 CP No. 1157	822049
Turn Signal, front	21 CP No. 1156	837670
Oil pressure warning light	2 CP No. 1893	828473
EMS light	2 CP No. 1893	828473
Speedometer light	1 CP No. 53	811953
Water temperature gauge light	1 CP No. 53	811953
Fuel gauge light	1 CP No. 53	811953
FUSES	20 Amp	826000
.	30 Amp	833038
FLASHER , turn signal		825501


4.5 FUSES

Four fuses are located on the kick panel just below the instrument panel. They protect the lighting circuits and accessory circuits such as windshield wiper motor and heater/defroster blower. Remove fuses by pulling straight out.

A 30 Amp fuse for the fan motor is located on the fan wire harness, near the fan motor. Additional fuses are also located behind the dash panel for the turn signal rotating lights and transmission controller.

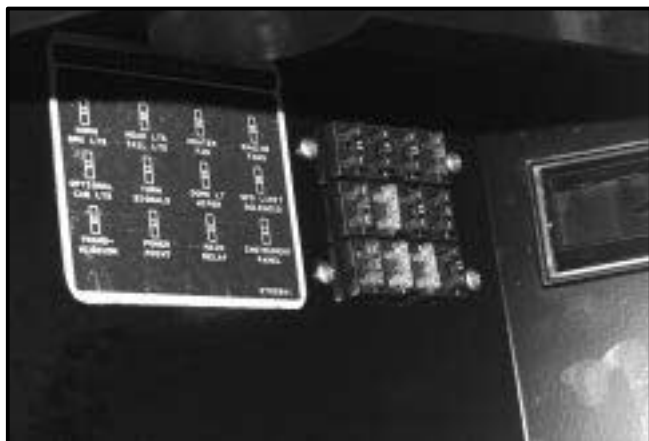

Fuse Block On Kick Panel

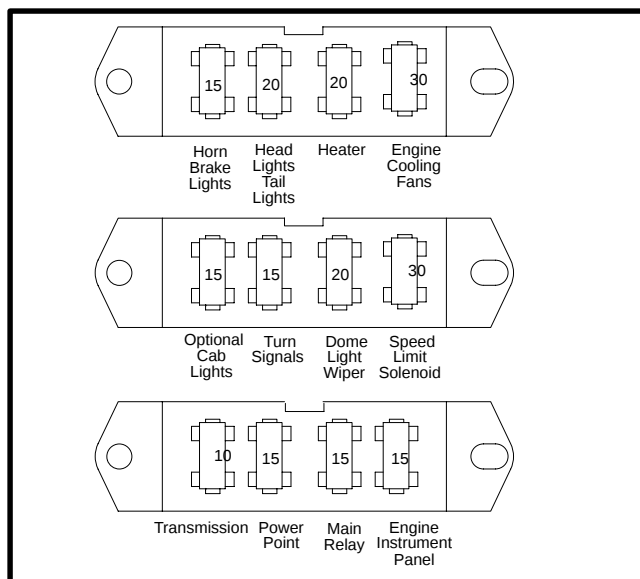

Fuse Box Panel

4.6 ENGINE MAINTENANCE

The following maintenance information covers basic engine service only. For more elaborate service and necessary repairs, we recommend you contact your authorized Cushman dealer.

Always keep your engine clean. If dirt has accumulated on the engine, it should be washed with a non-flammable solvent or a strong detergent. When washing becomes necessary, it can be carried out simultaneously with serv-

icing and will maintain cool and efficient operation. In order to maintain reliable service from your engine, a regular check-up schedule should be carried out. Proper maintenance will prolong the engines life and avoid premature overhaul.

NOTICE

- DO NOT wash the engine while it is running. Water vapor may enter the engine through the air intake causing serious engine damage.

4.7 ENGINE ACCESS




WARNING

NEVER remove or install the engine cover while the engine is running. The engine cover is a machinery guard and its removal exposes you to moving parts. Keep hands, hair and loose clothing away from flywheel, radiator cooling fan, alternator fan, belts, pulleys, air intake, etc


The seat cushion may be raised by pivoting forward to provide engine access for minor service work.

For major repair or air cleaner servicing, the engine cover assembly may be removed. To remove engine cover, loosen the engine cover latch, pivot the engine cover forward and lift upward.

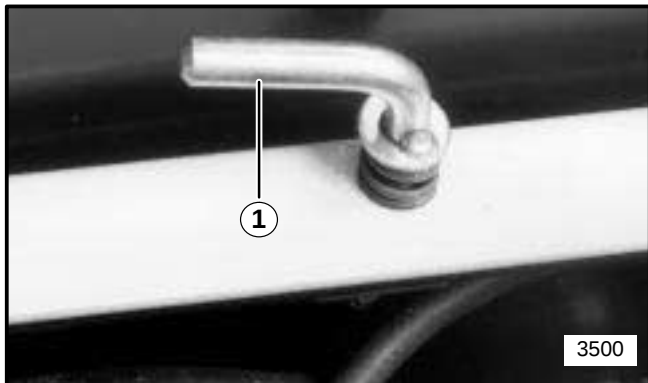

1. Engine Cover Latch

When replacing the cover, make sure the retaining tabs, located at the front corners of the engine cover are inserted into the slots in the floorboard.

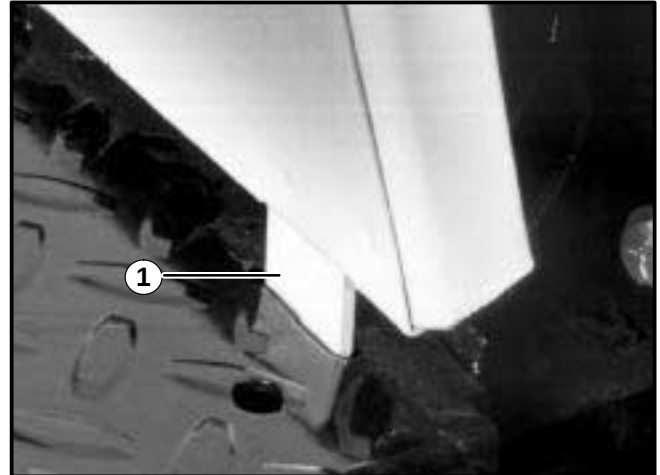


1. Engine Cover Retaining Tab

Resecure the engine cover latch.

Failure to follow instructions will allow the seat and engine cover assembly to move out of proper position.

4.8 ENGINE OIL LEVEL

NOTE: When checking engine oil level, BE SURE vehicle is resting on a level surface. A correct reading can not be made if the vehicle is not on a level surface.

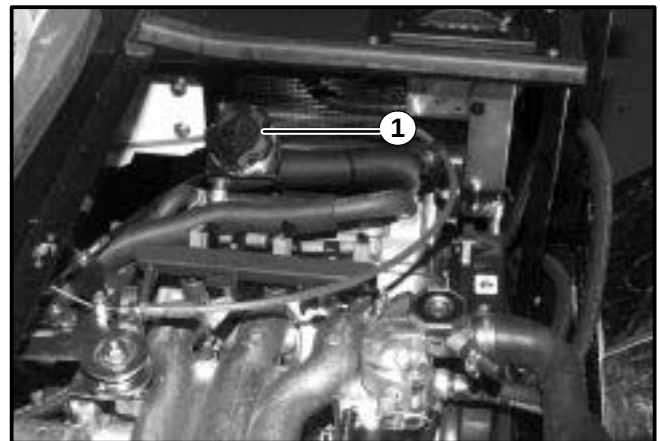

1. Engine Oil Fill

The engine oil level should be between the two marks (FULL and ADD) marks on the dipstick. Either too much OR too little oil can cause the engine to overheat. Engine overheating can cause severe engine damage.

4 MAINTENANCE

4.9 BATTERY



CAUTION

UNTRAINED or UNAUTHORIZED persons should **NEVER** attempt to service or recharge the battery in this vehicle.

Battery electrolyte is an acidic solution and should be handled with care. If electrolyte is spilled or splashed on any part of the body, immediately flush the exposed area with liberal amounts of water and obtain immediate medical aid.

ALWAYS wear adequate eye protection when working on or around a vehicle battery.

The battery is located in the side opening box located at the rear of the vehicle.

The battery in this vehicle is a “low maintenance”. Add distilled water whenever required.

NOTE: Keep the top of battery clean and free of corrosion by washing with a solution of baking soda and water or ammonia and water. Rinse with clean water. Terminals with heavy corrosion should be removed and cleaned with solution. Replace terminal and resecure.

To contact your nearest Trojan battery dealer for warranty or other information, call Trojan battery at 1-800-423-6569 and ask for customer service.

4.10 JUMP STARTING WITH BOOSTER BATTERY



WARNING

DO NOT allow open flames or sparks near a battery when connecting for jump starting or while recharging the battery with a charger

Hydrogen gas is produced during the charging process and can be very explosive. Provide adequate ventilation to prevent possible explosion.

Both booster battery and discharged battery should be treated carefully when using jumper cables.

Follow **exactly** the procedure outlined, being careful not to cause sparks.

1. Apply parking brake, put transmission in PARK and turn off all electrical loads.
2. Attach one end of one jumper cable to the positive terminal of the booster battery and the other end to the positive terminal of the discharged battery. **DO NOT permit vehicles to touch each other at any time.**
3. Attach one end of remaining cable to the negative terminal of the booster battery and the other end to a good ground on the vehicle or engine, away from the discharged battery. **DO NOT lean over the battery when making this connection.**
4. Reverse this sequence **exactly** when removing the jumper cables.

NOTE: This is a negative ground wiring system, reversing battery connection **WILL** damage the alternator rectifier.

Booster batteries used for starting **MUST** be connected with correct polarity.

Vehicle battery cables should be disconnected before using a “Fast Charger”.

4.11 ENGINE COOLING SYSTEM



WARNING

The cooling fan is thermostatically controlled and may start at any time. **DO NOT** attempt to service the fan without first disconnecting it.



WARNING

KEEP HANDS CLEAR, ELECTRIC FAN MAY ENGAGE WITHOUT WARNING, EVEN WITH IGNITION OFF!

833607

NEVER attempt to clean or service the cooling system with the engine running.

ALWAYS allow the engine to “cool” before servicing the cooling system.

The vehicle is equipped with a cooling radiator and electric fan located below the right side (from operators position) of the engine cover. To provide proper engine cooling:


- **DO NOT** obstruct or cover the air intake screen in front of the radiator.

- ALWAYS keep the screen, radiator and oil cooler fins clean.

NOTE: Clean the radiator and oil cooler fins with compressed air. If water is used to clean the radiator or oil cooler use compressed air to blow ALL the water from the radiator or oil cooler fins. Water left between the fins will collect dirt and clog the radiator.

Keep the proper amount of coolant in the cooling system.

Check coolant level in radiator and reservoir bottle. The coolant should be up to the filler port of the radiator, and between the FULL and LOW lines in the reservoir bottle. Level should not be higher than the FULL line.

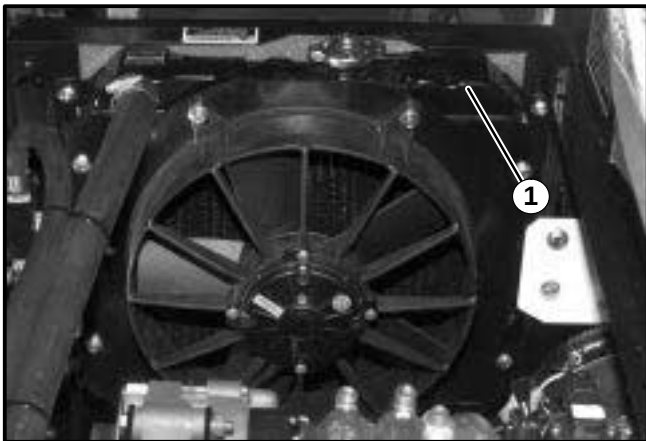

1. Radiator

NOTE: If the coolant level is low, check for leaks and repair as necessary. If additional coolant is required, a 50/50 mixture of a good grade of ethylene glycol antifreeze and clean water is recommended. This will provide protection to -34°F (-37°C).

It is extremely important that the antifreeze and water be mixed in a separate container before adding to radiator. NEVER add straight antifreeze to the radiator. The mixture must NEVER be more than 50% antifreeze.

4.12— DRAINING THE COOLING SYSTEM

NOTE: Drain the cooling system every 600 hours and refill with a 50/50 mixture of water and ethylene glycol antifreeze.

Drain the cooling system using the following procedure:



WARNING

DO NOT attempt to remove radiator cap until engine is allowed to “cool”. Radiator contents are under pressure which can cause spraying of scalding hot water. Hot water spray can cause serious injuries.

1. Remove radiator cap when engine is cool. Disconnect radiator cooling fan. Open drain cock on bottom of radiator.



WARNING

TO PREVENT POSSIBLE SEVERE BURNS TO YOU OR OTHERS. DO NOT REMOVE PRESSURE CAP WHEN HOT. CONTENTS UNDER PRESSURE. CHECK AND ADD FLUID AT RESERVOIR.

832130

2. Remove bottom radiator hose from radiator to completely drain engine block.
3. Disconnect hose from water overflow tank and drain tank. Close radiator drain cock tightly and reinstall overflow tank hose when both have finished draining.


NOTICE

- ALWAYS recycle or dispose of used antifreeze in a responsible manner. Used antifreeze can be harmful to the environment.

4.13— FILLING THE COOLING SYSTEM

1. Fill radiator to the base of the filler neck and the overflow tank to the “FULL” mark with a 50/50 water and antifreeze mixture. Reinstall reservoir tank cap.
2. Loosen the air bleeding bolt (shown below) until coolant comes out through the air bleeding hole of bolt. Resecure the bleeding bolt.

4 MAINTENANCE

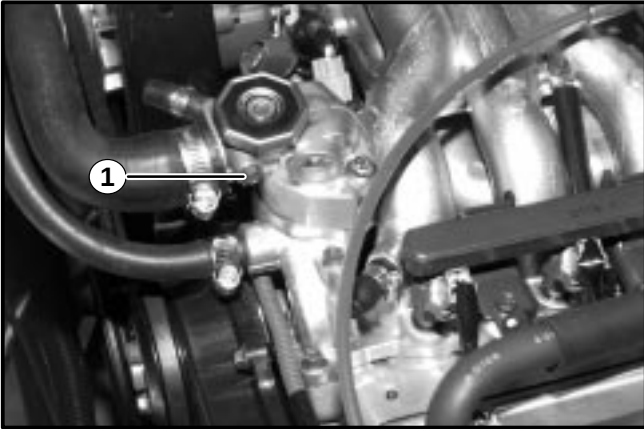


1. Air Bleeding Bolt

3. Run engine with radiator cap removed, until upper radiator hose is warm (thermostat has opened).
4. With engine idling, add coolant mixture to radiator until level reaches the bottom of the filler neck. Install radiator cap. Reconnect radiator cooling fan.

4.14 — AIR CLEANER

This is a large capacity dry type air cleaner with a replaceable paper element. The air cleaner assembly is located under the right side cover panel directly behind the cab.

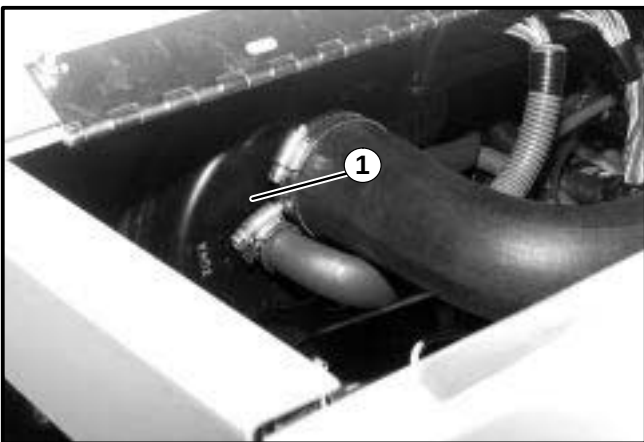

1. Air Cleaner Assembly

4.15 — SERVICING AIR CLEANER ELEMENT

NOTE: DO NOT use a damaged air cleaner assembly.

DO NOT use bent or damaged air cleaner elements.

Use **ONLY** Cushman approved air cleaner replacement elements.

We recommend the air cleaner element be replaced before engine performance is affected. This may occur at 250 hours of service in very dirty operating conditions or at 500 hours in normal operating conditions.


We **DO NOT** recommend cleaning the air cleaner element because of the possibility of damaging the element.

4.16 — CHECKING AIR CLEANER ELEMENT

Check the element for damage, pin holes, etc. by placing a light source such as a flashlight inside the element.

4.17 — INSTALLING AIR CLEANER ELEMENT


1. Loosen wing nut screw securing air cleaner halves and remove element.
2. Clean dust from inside of housing with damp cloth, making sure dust **DOES NOT** enter the air intake.
3. Check all gaskets to be sure they are **NOT** damaged.
4. Insert element in housing.
5. Apply a light grease film to the wing nut screw.
6. Resecure the housing halves with the wing nut screw.

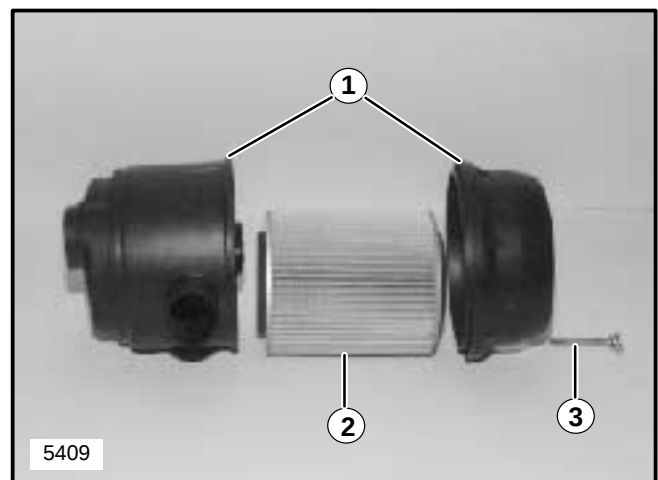

1. Air Cleaner Halves
2. Air Cleaner Element
3. Wing Nut Screw

4.18 — LUBRICATING BRAKE PEDAL BUSHINGS

The pedal pivot lubrication fitting is located just below the hole in the floorboard, near the pedal. Refer to following illustration.

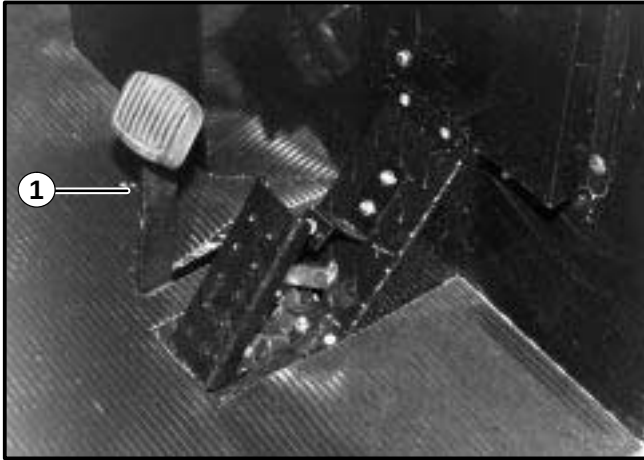


1. Lubrication Access Hole

4.19 — AUTOMATIC TRANSMISSION

The transmission filler tube and dipstick are located beneath the left access panel directly behind the cab.

TRANSMISSION FLUID LEVEL
CHECK UNDER THIS COVER
— REFER TO SERVICE MANUAL
FOR PROPER PROCEDURE


840395

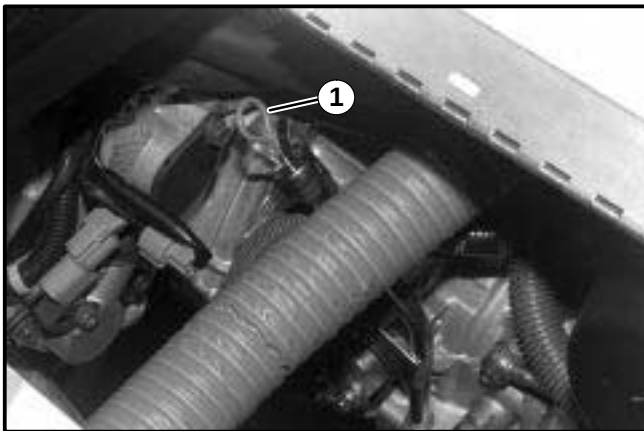

1. Transmission Dipstick

The engine must be running with the transmission in PARK (or neutral) when checking the transmission fluid level. The level should be kept between the two marks on the dipstick. Capacity is 3.7 quarts (4.2L). DO NOT over-fill transmission.


The drain plug is on the bottom of the transmission case in the left rear corner of the pan.

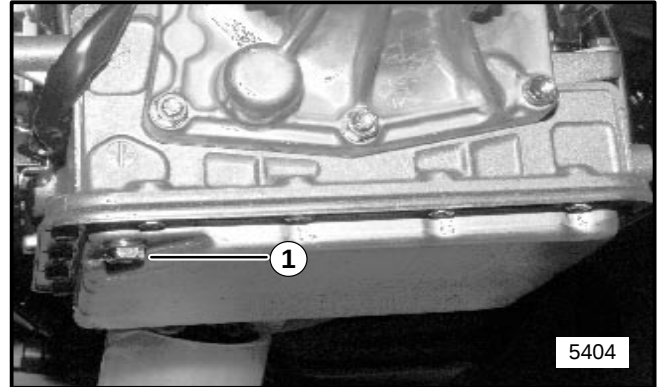

1. Transmission Drain Plug

4.20 — DIFFERENTIAL

The worm gear differential filler plug and drain plug are shown in the following photograph. Oil should always be up to the level of the filler hole.

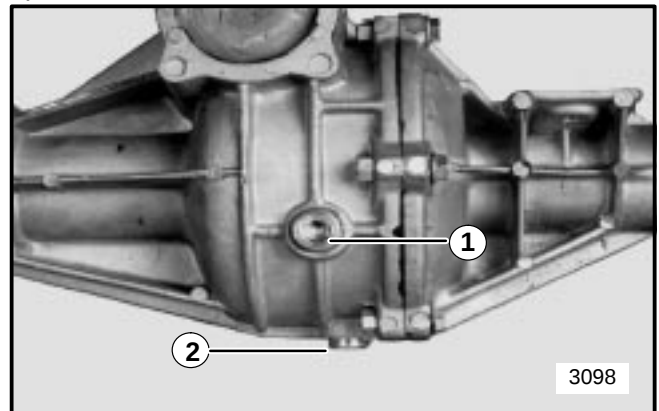

1. Filler Plug
2. Drain Plug

IMPORTANT!

DIFFERENTIAL LUBRICANT **MUST** BE CHANGED ACCORDING TO THE MAINTENANCE GUIDE SCHEDULE TO AVOID EXPENSIVE REPAIR.

4.21 — JACKS, JACKING LOCATIONS AND USING A HOIST

A scissors or hydraulic type jack with a 1 1/2 ton (minimum) capacity that can be lowered to 3 3/8" (86 mm) is required to jack up the vehicle.

The jacking locations are shown on the Chassis Lubrication Chart. Raise the vehicle **ONLY** enough to place jack-stands under vehicle when performing required maintenance.

NOTE: To prevent damage to the vehicle or attached accessory, **NEVER** use a hoist to raise one corner of the vehicle. **ALWAYS** raise **BOTH** front or rear corners equally.

4 MAINTENANCE

4.23—— CHANGING THE REAR WHEEL

1. Raise rear of vehicle with a hydraulic jack and place on jackstands.
2. Remove and retain the wheel retaining nuts and remove wheel from the hub.
3. Reinstall the wheel with the valve stem on the outside of the wheel.
4. Torque the wheel retaining nuts to 70 to 100 ft. lbs. (95 to 140 N·m).

4.24—— CHANGING THE FRONT WHEEL

IMPORTANT!


BE SURE TO READ THIS ENTIRE SECTION BEFORE ATTEMPTING FRONT TIRE REMOVAL.

To remove the front wheel and hub:

1. Remove the cotter pins, washers and castle nuts attaching the brake anchor link to the front fork and brake arm.

NOTE: DO NOT disconnect the front brake hose.

2. Pull the link straight off the mounting studs. Retain the bushings located in the holes at each end of the brake anchor link.

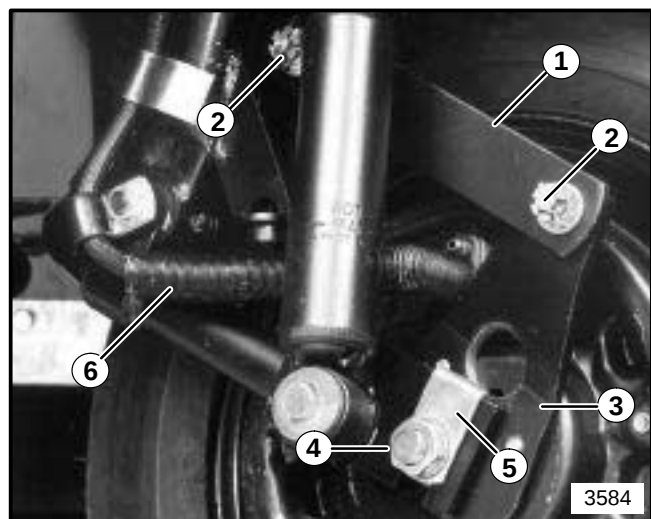


Front Fork (Right Side)

1. Brake Anchor Link
2. Cotter Pin, Washer And Castle Nut
3. Brake Arm
4. Axle Nut

5. Axle Lock

6. Brake Hose And Protector

3. Disconnect the bottom of the LEFT shock absorber. Retain and note the position of the attaching hardware.
4. Loosen the axle nuts on both sides of the axle until the axles locks (both sides) will clear the fork arms and lower the entire axle, brake and wheel assembly from the fork.

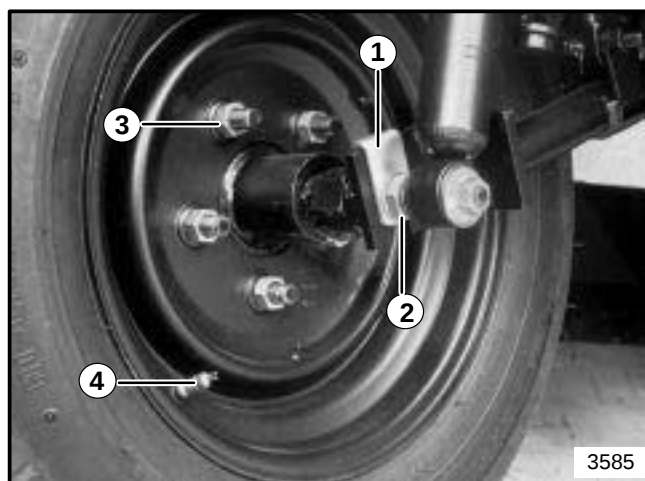

Front Fork (Left Side)

1. Axle Lock
2. Axle Nut
3. Wheel Retaining Nut
4. Valve Stem

5. Support the brake assembly so that the brake hose and protector will not be damaged.
6. Remove the wheel retaining nuts and remove the wheel from the hub.

To reinstall the front wheel and hub:

1. Reassemble the wheel to the hub (be sure valve stem is on side opposite the brake). Torque the wheel retaining nuts to 70 to 100 ft. lbs. (95 to 140 N·m).
2. Reinstall the hub assembly into the fork with the two (2) large washers at either end of the axle inside the fork arms, and the axle locks hooked over the top of the fork arms. Torque the axle nuts to 70 to 100 ft. lbs. (95 to 140 N·m).
3. Reconnect the left shock absorber.
4. Reinstall the brake anchor link using **NEW** cotter pins to secure the castle nuts. Make sure the bushings are in place in both ends of the brake anchor link



CAUTION

The brake link bushings **MUST** be in place in brake anchor link and the link reinstalled to prevent the brake stator and drum from turning when the brakes are applied. Turning could result in brake hose damage and sudden brake failure.

ALWAYS use NEW cotter pins when reinstalling brake anchor link castle nuts to make sure they are secure.

Your vehicle is equipped with 145 R 12 radial tires (load range C) mounted on 4.80 x 12 rims. Always keep tires inflated according to the following specifications.

Cold Inflation Pressure

Front 32 PSI (220 kPa)

Rear 32 PSI (220 kPa)

NOTE: NEVER exceed the maximum pressure indicated on the tire.

Improper inflation will considerably shorten the life of your tires. Fill tires with care. Use a pressure gauge before connecting an air hose to a partly inflated tire. Due to the low air volume needed, over-inflation may be reached in a matter of two or three seconds.

4.25 TIRE REPLACEMENT

Always use replacement tires equivalent to or exceeding original equipment specifications.

4.26 EXTENDED STORAGE

If the vehicle must be stored with fuel in the fuel system, **DO NOT** store the vehicle in an enclosure with open flame (Example: Furnace or water heater pilot light).



WARNING

Storing unit in an enclosed area with an open flame may result in an explosion or fire.

Perform the following steps when putting the vehicle back into operation after an extended storage period exceeding 30 days:

- Fill the vehicle fuel tank.
- Check engine oil level.
- Check engine for loose parts.
- Start the engine and check for fuel or oil leaks and check the operation of all controls.

4.27 TOUCH-UP PAINT

Off-White

- 16 oz. (0.5L) spray can Part No. 843311
- 1 qt. (0.95L) can Part No. 843312

TORQUE CHART 5

TORQUE SPECIFICATIONS HEX HEAD CAP SCREWS

The torque values shown should be used as a general guideline when specific torque values are not given.

U.S. Standard Hardware

Grade	Shank Size (Diameter in inches, fine or coarse thread)														
		1/4	5/16	3/8	7/16	1/2	9/16	5/8	3/4	7/8	1	1 1/8			
SAE grade 5 *	ft.-lbs.	9	18	31	50	75	110	150	250	378	583	782			
	N·m	12	24	42	68	102	150	203	339	513	790	1060			
SAE grade 8 **	ft.-lbs.	13	28	46	75	115	165	225	370	591	893	1410			
	N·m	18	38	62	108	156	224	305	502	801	1211	1912			
Flangelock Screw w/ Flangelock Nut	ft.-lbs.		24	40											
	N·m		33	54											

* Grade 5 marking –  Minimum commercial quality (Lower quality not recommended).

** Grade 8 marking – 

Metric Standard Hardware


Grade	Shank Size (Diameter in millimeters, fine or coarse thread)														
		M4	M5	M6	M7	M8	M10	M12	M14	M16	M18	M20	M22	M24	M27
Grade 8.8*	ft.-lbs.	1.5	3	5.2	8.2	13.5	24	43.5	70.5	108	142	195	276	353	530
	N·m	2	4	7	11	18	32	58	94	144	190	260	368	470	707
Grade 10.9**	ft.-lbs.	2.2	4.5	7.5	12	18.8	35.2	62.2	100	147	202	275	390	498	747
	N·m	3	6	10	16	25	47	83	133	196	269	366	520	664	996
Grade 12.9 ***	ft.-lbs.	2.7	5.2	8.2	15	21.8	43.5	75	119	176	242	330	471	596	904
	N·m	3.6	7	11	20	29	58	100	159	235	323	440	628	794	1205

* Grade 8.8 marking –  ** Grade 10.9 marking –  *** Grade 12.9 marking – 

SERVICE AND MAINTENANCE RECORD

[illegible]


6.1 ENGINE GASKETS

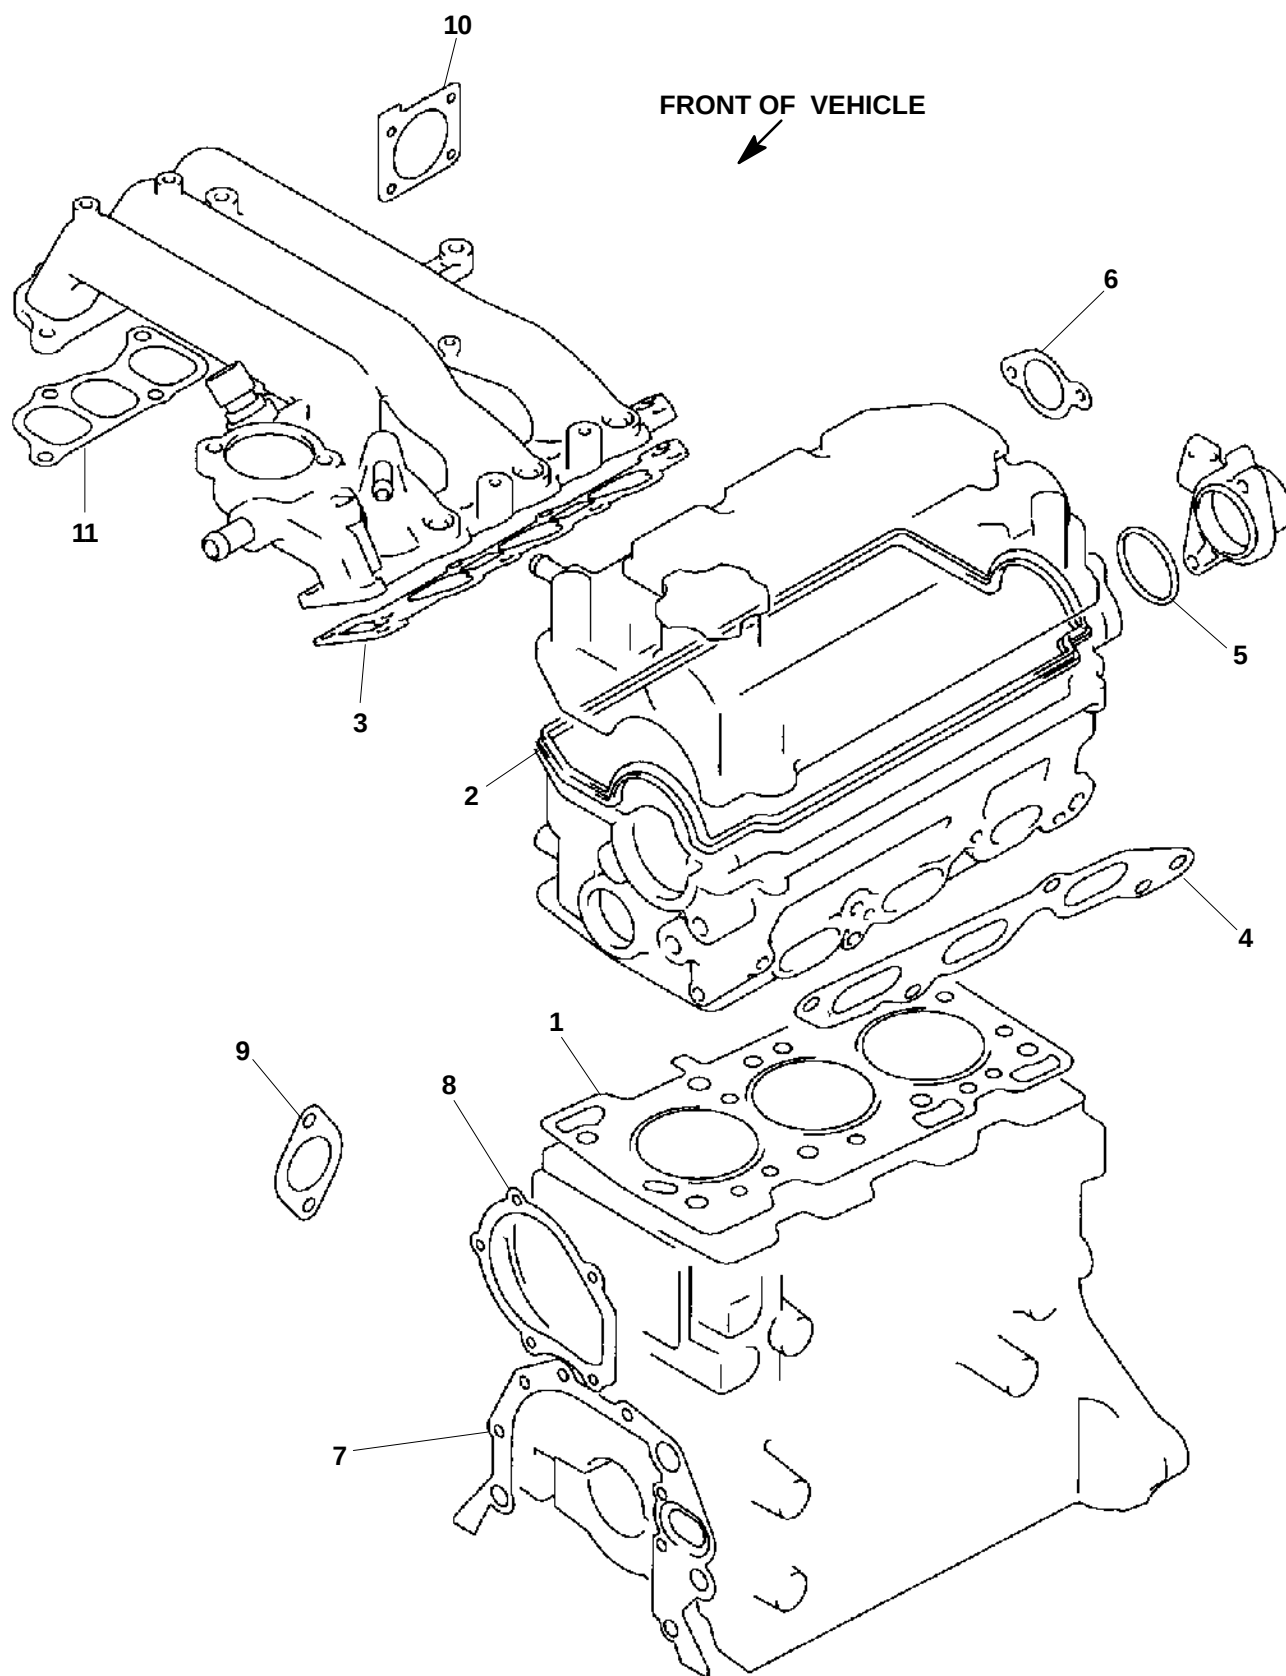

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701775	Gasket set	1	
2	2701776	•Gasket, cylinder head	1	
3	2701795	•Gasket, cylinder head cover	1	
4	2701796	•Gasket, intake manifold	1	
5	2701797	•Gasket, exhaust manifold	1	
6	2701798	•O' ring, cam position sensor	1	
7	2701799	•Gasket, cylinder plate	1	
8	2701800	•Gasket, oil pump case	1	
9	2701801	•Gasket, water pump	1	
10	2701802	•Gasket, water inlet	1	
11	2701803	•Gasket, throttle body	1	
	2701804	•Gasket, surge tank	1	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.


6.2 CYLINDER HEAD

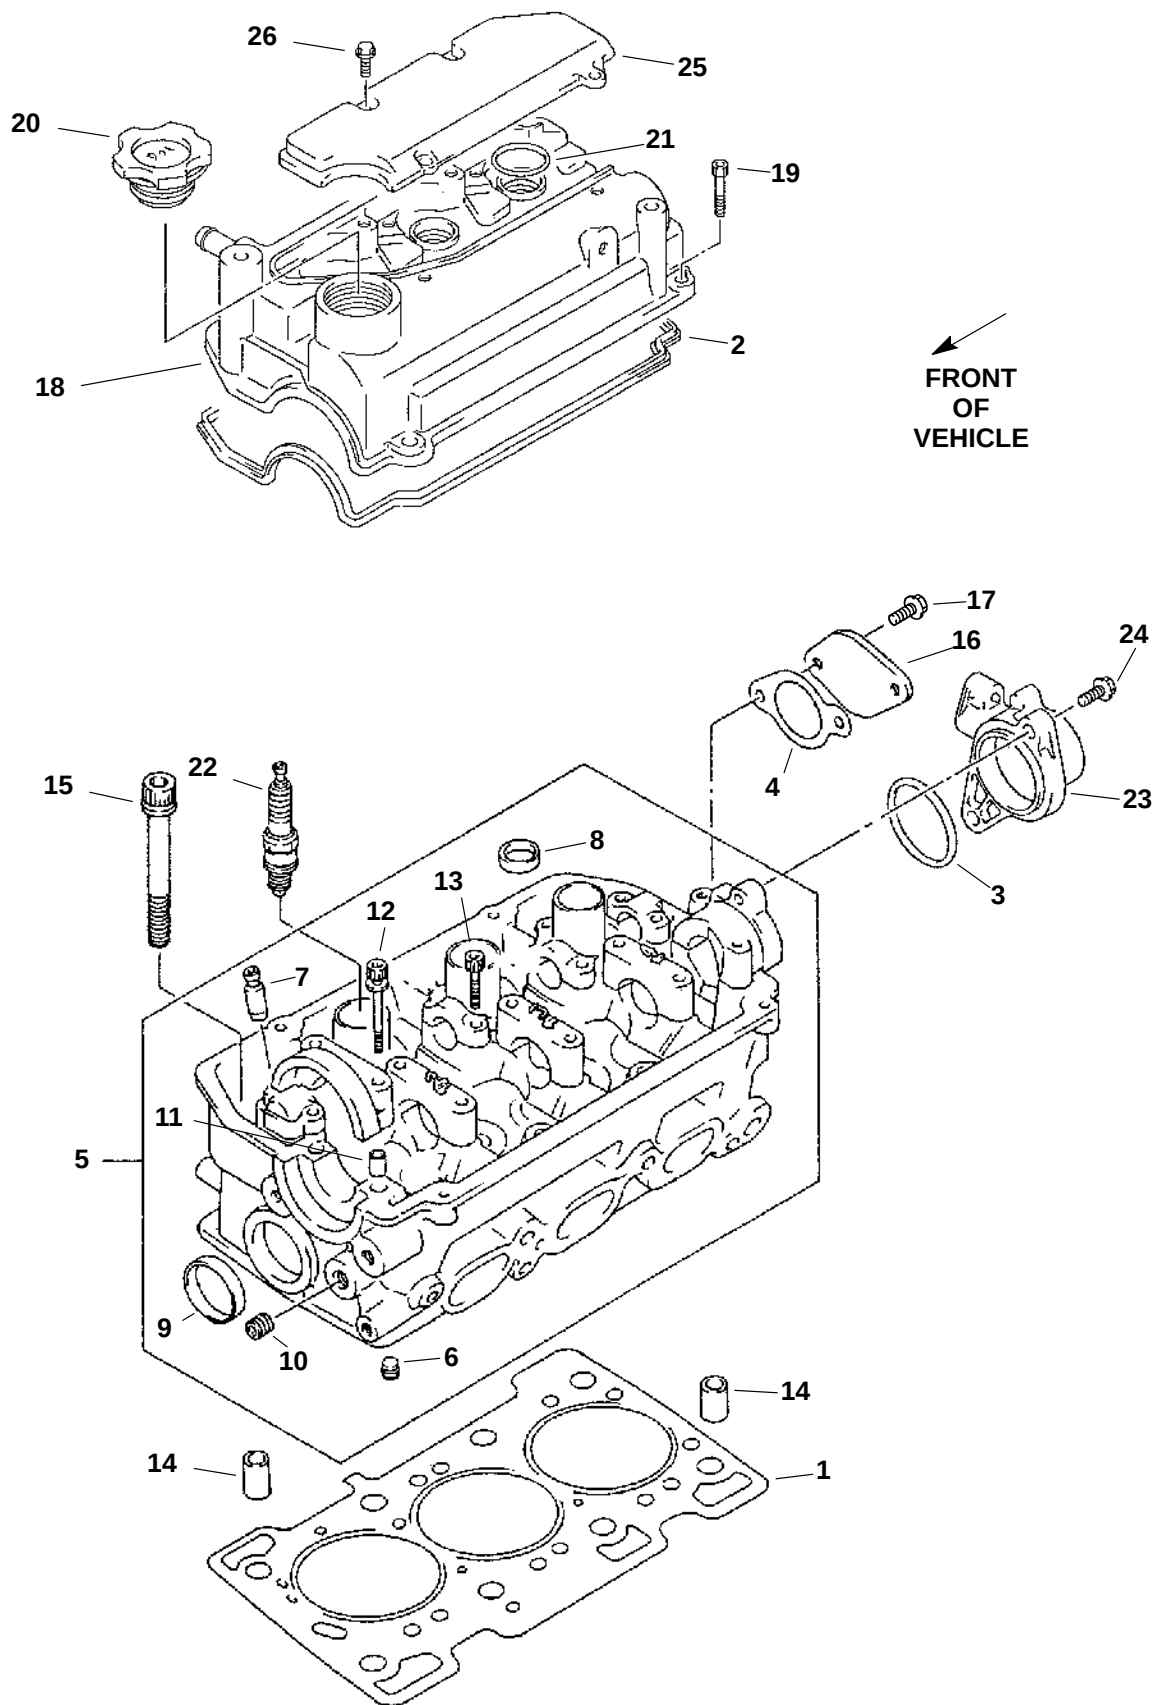

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701776	Gasket, head	1	
2	2701795	Gasket, valve cover	1	
3	2701798	O-ring, distributor drive	1	
4	2701799	Gasket	1	
5	2701813	Head, cylinder	1	
6	2701814	Plug , oil venturi	1	
7	2701815	Guide , valve	12	
8	2701816	Seal	2	
9	2701819	Seal	1	
10	2701820	Plug	4	
11	2701821	Pin	10	
12	2701822	Bolt	11	
13	2701823	Bolt	13	
14	2701824	Pin	2	
15	2701825	Bolt, cylinder head	8	
16	2701826	Plate, cylinder head	1	
17	2701827	Screw	2	
18	2701828	Cover, cylinder head	1	
19	2701829	Bolt	4	
20	2701830	Cap, oil filler	1	
21	2701831	O-ring, spark plug pipe	3	
22	2701832	Plug, spark Nippon Denso XU22EPR-U	3	
23	2701833	Case, distributor	1	
24	2701834	Bolt	2	
25	2701835	Cover, cylinder	1	
26	2701836	Bolt	4	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.


6.3 CYLINDER BLOCK

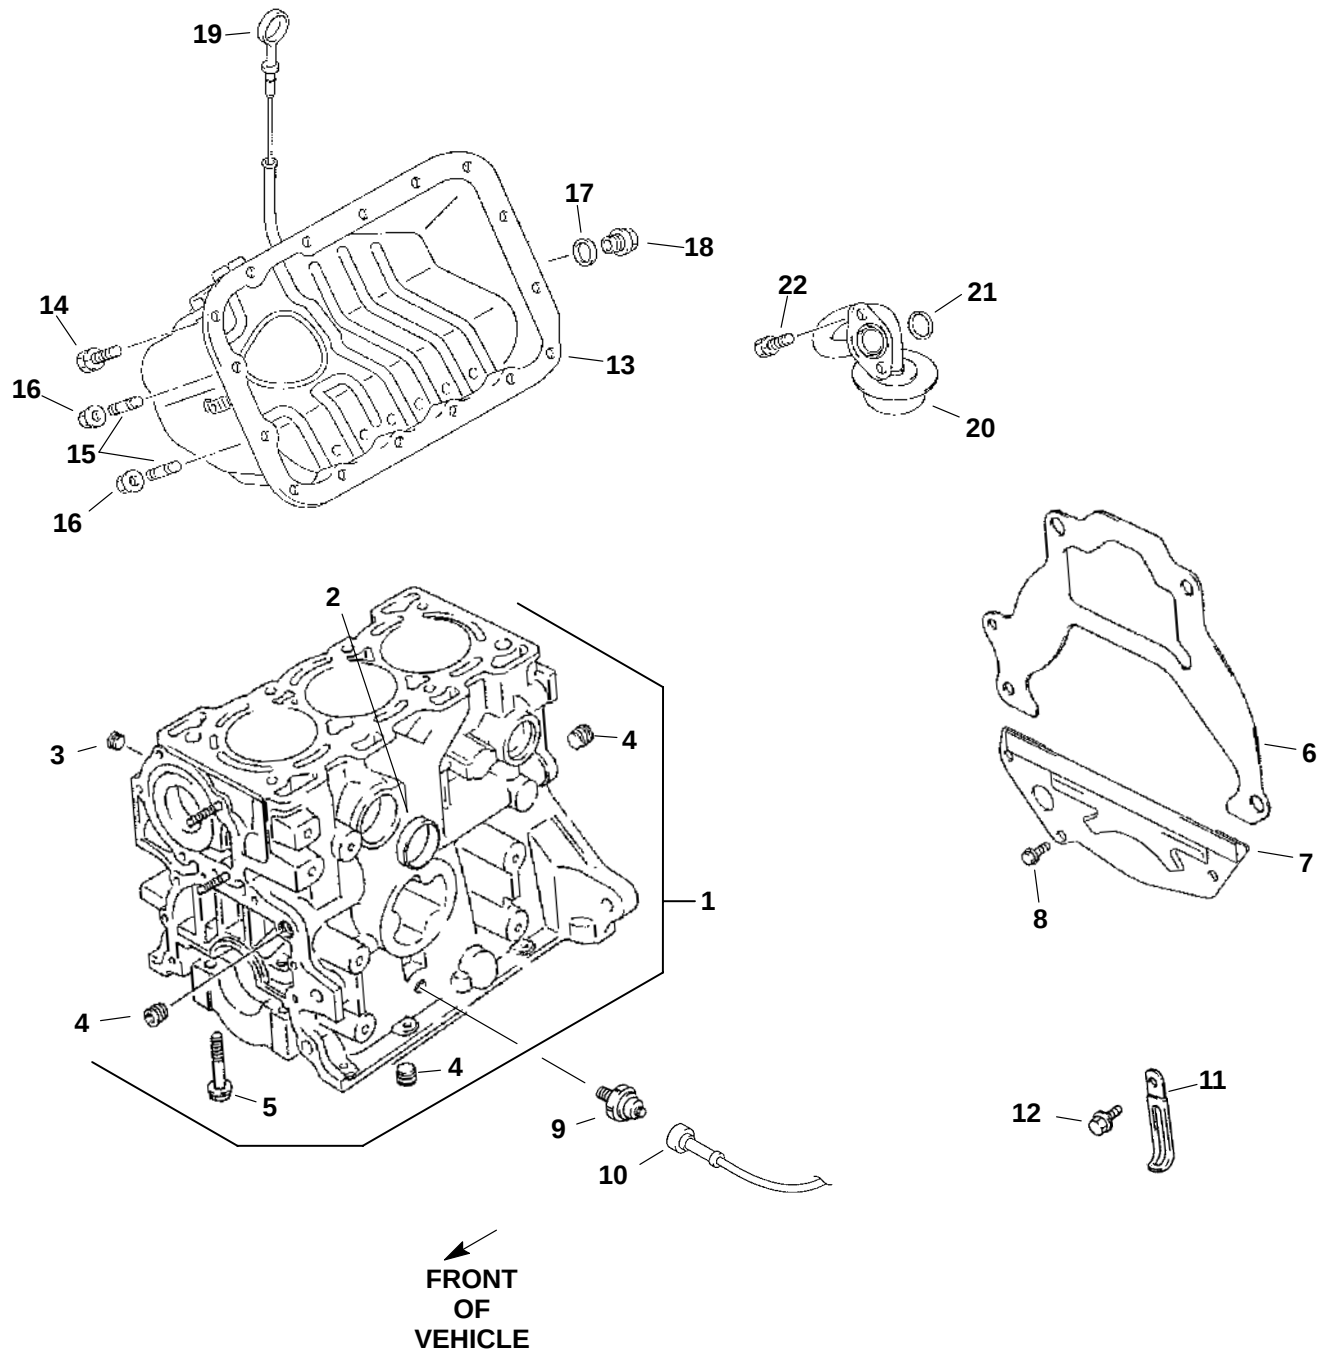

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701837	Block, cylinder	1	
2	2701819	Seal	2	
3	2701820	Plug	1	
4	2701838	Plug	3	
5	2701839	Bolt	8	
6	2701900	Plate, clutch hsng. upper	1	
7	2701902	Plate, clutch hsng. lower	1	
8	2701903	Bolt	1	
9	2701904	Sender, oil pressure	1	
10	2701905	Wire, oil pressure	1	
11	2701906	Clamp	1	
12	2701907	Bolt	1	
13	2701911	Pan, oil	1	
14	2701912	Bolt	14	
15	2701913	Stud	2	
16	2701914	Nut	2	
17	2701915	Plug, oil drain	1	
18	2701916	Gasket, oil drain plug	1	
19	2701918	Dipstick, oil level	1	
20	2701919	Strainer, oil pump	1	
21	2701920	O-ring	1	
22	2701921	Bolt	2	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.


6.4 CRANKSHAFT, PISTONS

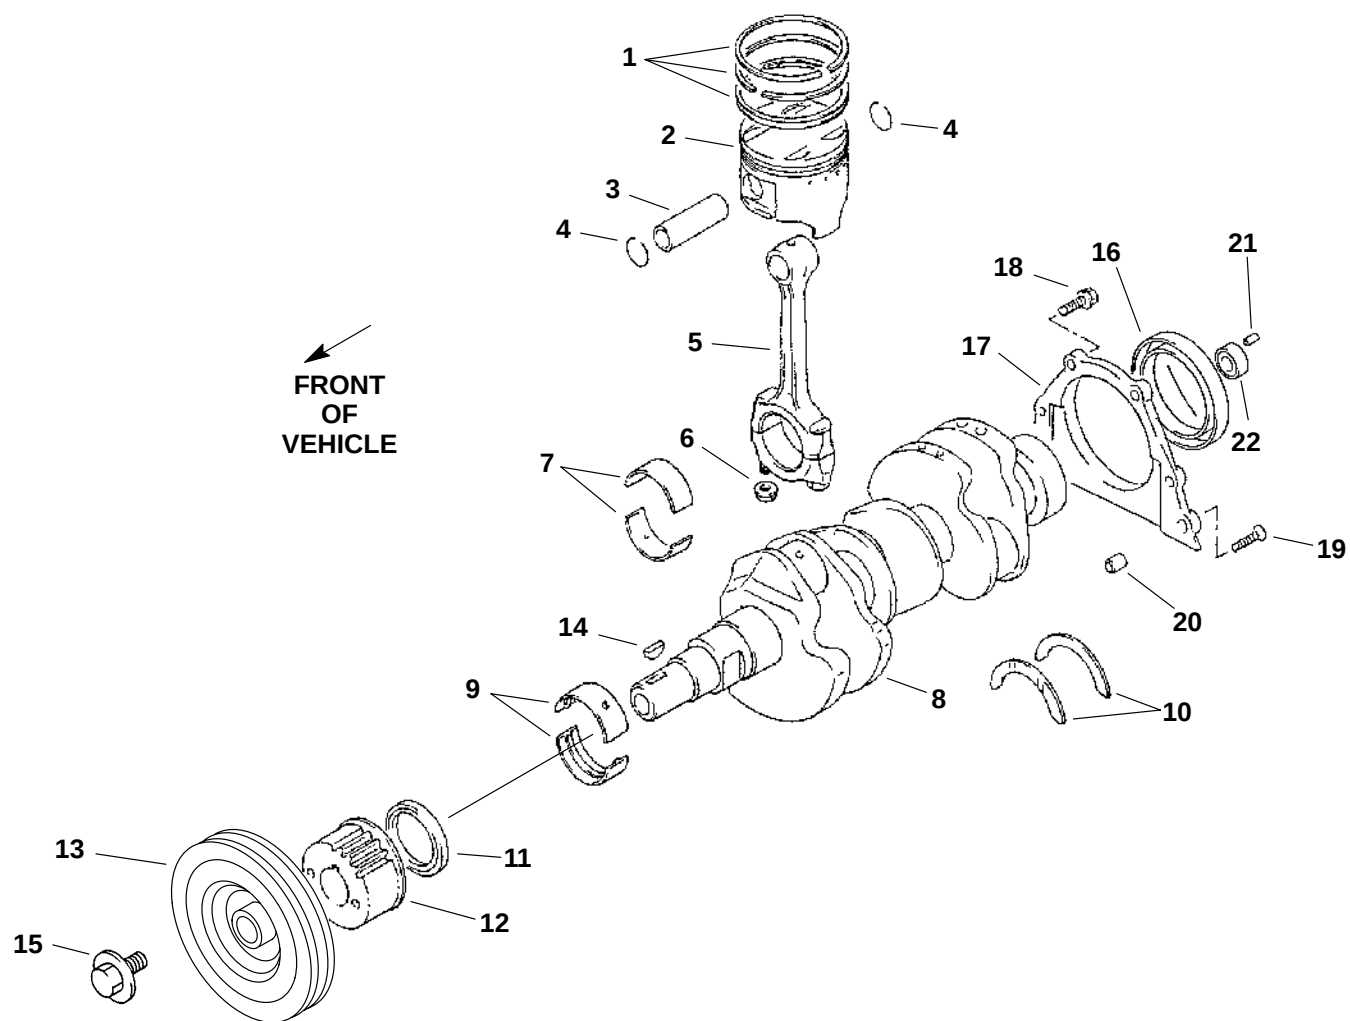

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701922	Ring, piston (standard)	3	
2	2701923	Ring, piston (OS:0.25)	3	
3	2701924	Ring, piston (OS:0.50)	3	
4	2701925	Piston (standard)	3	
	2701926	Piston (OS:0.25)	3	
	2701927	Piston (OS:0.50)	3	
5	2701928	Pin, piston	3	
6	2701929	Ring, snap	6	
7	2701930	Rod, connecting	3	
8	2701931	Pin ut, connecting rod	2	
9	2701932	Bearing, connecting rod	6	
	2701933	Bearing, connecting rod (US:0.25)	6	
10	2701934	Crankshaft	1	
11	2701935	Bearing set, crankshaft	1	
	2701936	Bearing set, crankshaft (US:0.25)	1	
12	2701937	Bearing set, crank thrust	1	
	2701938	Bearing set, crank thrust (US:0.25)	1	
13	2701939	Seal, front	1	
14	2701940	Pulley, timing belt	1	
15	2701942	Pulley, crankshaft	1	
16	2701943	Key	1	
17	2701944	Bolt	1	
18	2701945	Seal, rear main	1	
19	2701946	Plate, rear	1	
20	2701834	Bolt	4	
21	2701948	Bolt	2	
22	2701949	Pin	2	
23	2701954	Pin	1	
24	2701952	Bearing, input shaft	1	


• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.5 CAMSHAFT

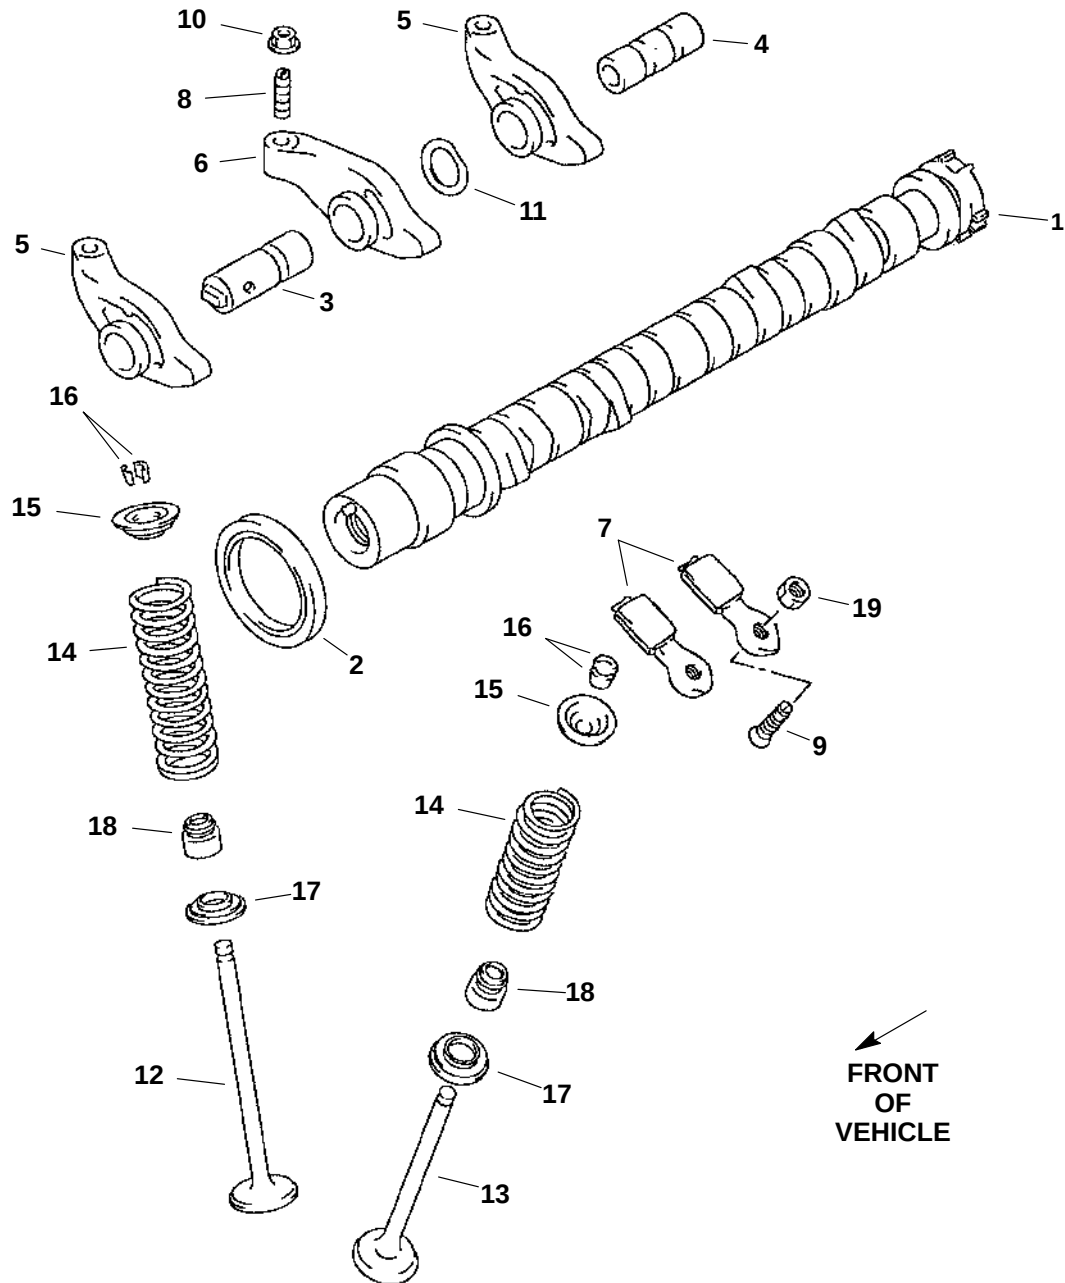


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701947	Camshaft	1	
2	2701955	Seal, camshaft	1	
3	2701956	Shaft, rocker arm (No. 1)	2	
4	2701957	Shaft, rocker arm (No. 2)	2	
5	2701958	Arm, valve rocker intake No. 1	3	
6	2701959	Arm, valve rocker intake No. 2	3	
7	2701960	Arm, rocker exhaust	6	
8	2701961	Screw, adjusting	6	
9	2701962	Screw, valve adjusting	6	
10	2701963	Nut, adjusting (intake)	12	
11	2701965	Washer, wavy	4	
12	2701966	Valve, intake	6	
13	2701967	Valve, exhaust	6	
14	2701968	Spring, valve	12	
15	2701969	Retainer, valve spring	12	
16	2701970	Cotter, valve	24	
17	2701971	Seat, valve spring	12	
18	2701972	Seal, valve stem	12	
19	2701964	Nut, adjusting (exhaust)	6	

6.6 TIMING BELT & COVER

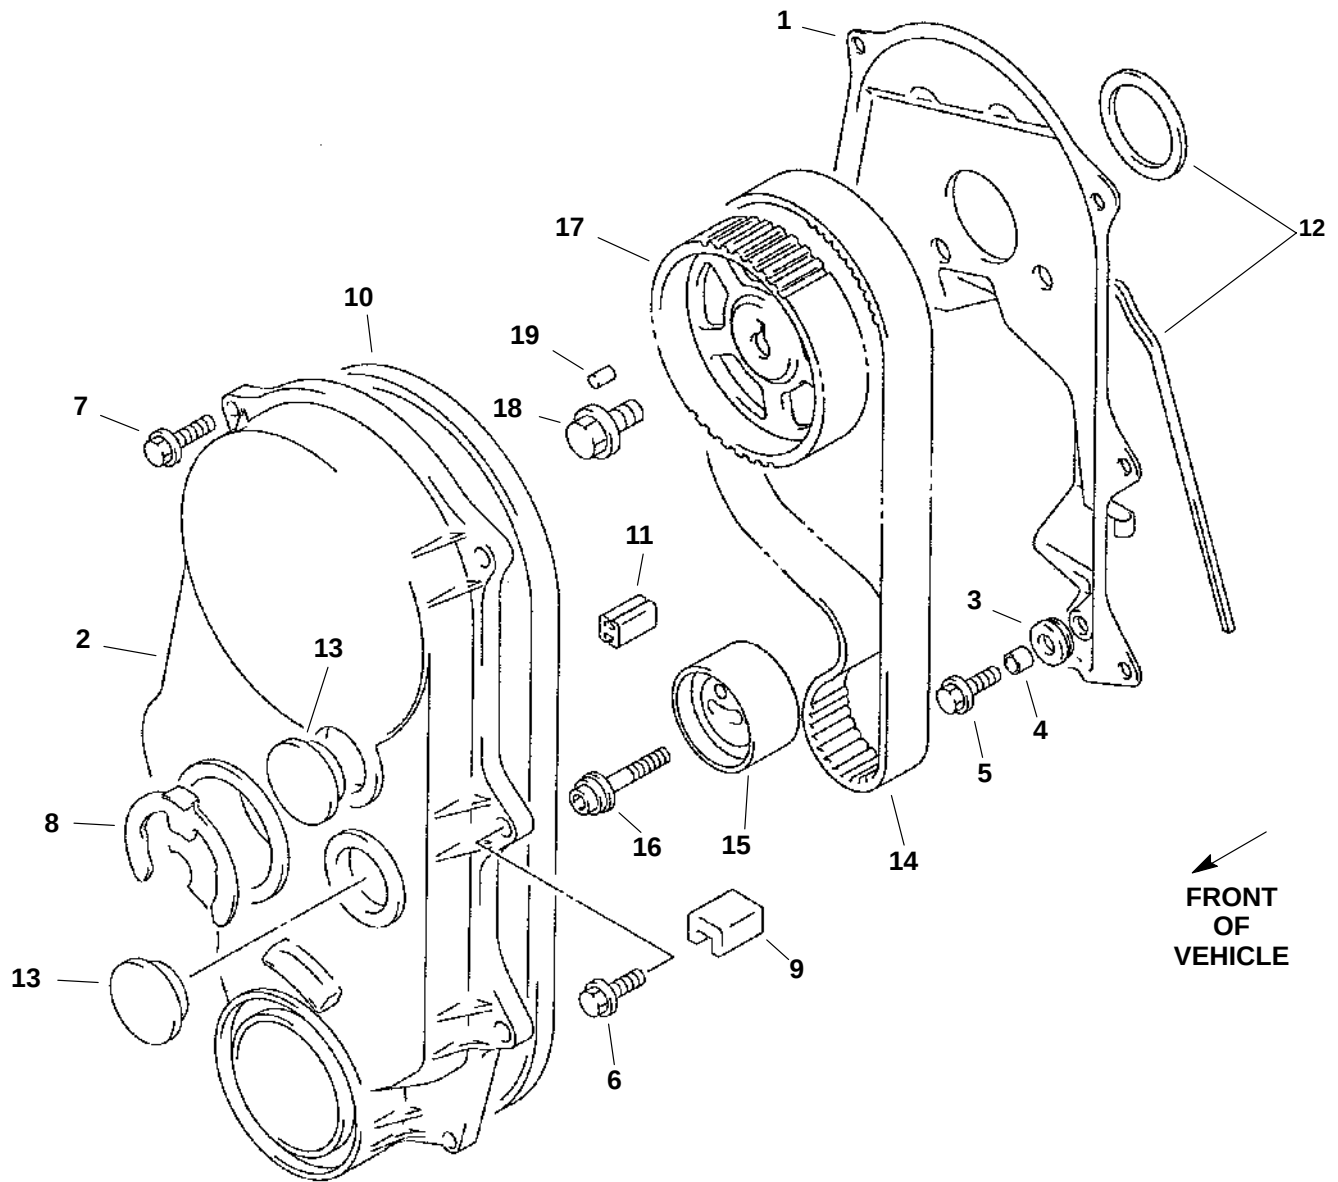

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701973	Cover, timing belt (inside)	1	
2	2701974	Cover, timing belt (outside)	1	
3	2701975	Grommet	4	
4	2701976	Spacer	4	
5	2701977	Bolt	4	
6	2701978	Bolt	5	
7	2701834	Bolt	3	
8	2701980	E-ring	1	
9	2701981	Seal	1	
10	2701979	Seal, cover outside	1	
11	2701982	Seal	1	
12	2701983	Seal set	1	
13	2701984	Cap	2	
14	2701985	Belt, timing	1	
15	2701986	Tensioner assembly	1	
16	2701987	Bolt	1	
17	2701988	Pulley, cam shaft timing	1	
18	2701989	Bolt	1	
19	2701990	Pin	1	

6.7 INTAKE MANIFOLD/THROTTLE BODY

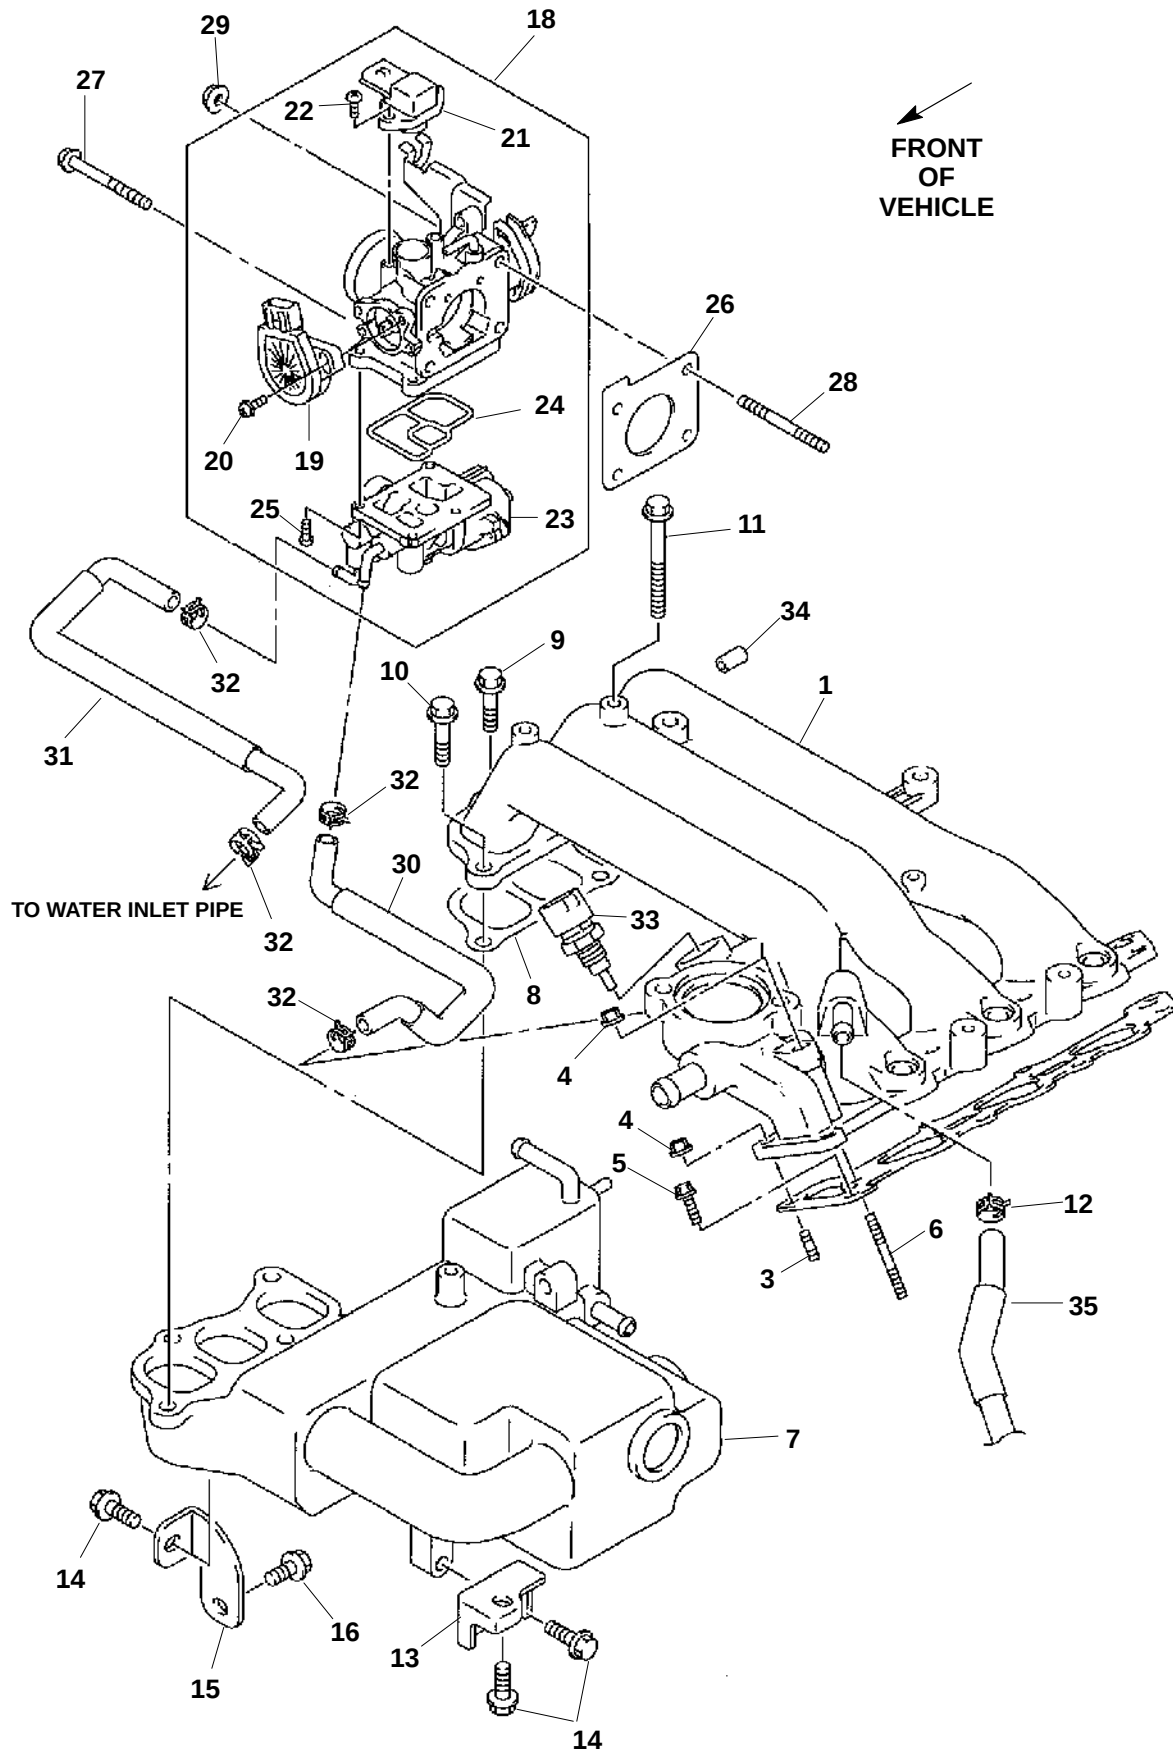


INTAKE MANIFOLD/THROTTLE BODY 6.7


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702467	Manifold, intake	1	
2	2701796	Gasket	1	
3	2701992	Stud bolt	2	
4	2701914	Nut	3	
5	2701834	Bolt	6	
6	2701993	Stud bolt	1	
7	2702468	Tank, surge	1	
8	2701804	Gasket	1	
9	2702469	Bolt	1	
10	2702470	Bolt	2	
11	2702471	Bolt	1	
12	2702433	Clamp	2	
13	2702473	Bracket, intake manifold No. 2	1	
14	2701827	Bolt	2	
15	2702474	Bracket, surge tank	1	
16	2702475	Bolt	1	
17	2701827	Bolt	1	
18	2702476	Body, throttle	1	
19	2701995	•Sensor, throttle position	1	
20	2701996	•Screw	2	
21	2702477	•Sensor, pressure	1	
22	2701998	•Screw	2	
23	2702478	•Valve, isc	1	
24	2702000	•Gasket	1	
25	2701998	•Screw	4	
26	2701803	Gasket	1	
27	2702001	Bolt	2	
28	2702426	Stud bolt	2	
29	2701914	Nut	2	
30	2702479	Hose, water inlet	1	
31	2702480	Hose, water outlet	1	
32	2702429	Clip	4	
33	2702481	Sensor, water temperature	1	
34	2702431	Plug	1	
35	2702432	Hose, brake vacuum	1	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.8 PVC VALVE

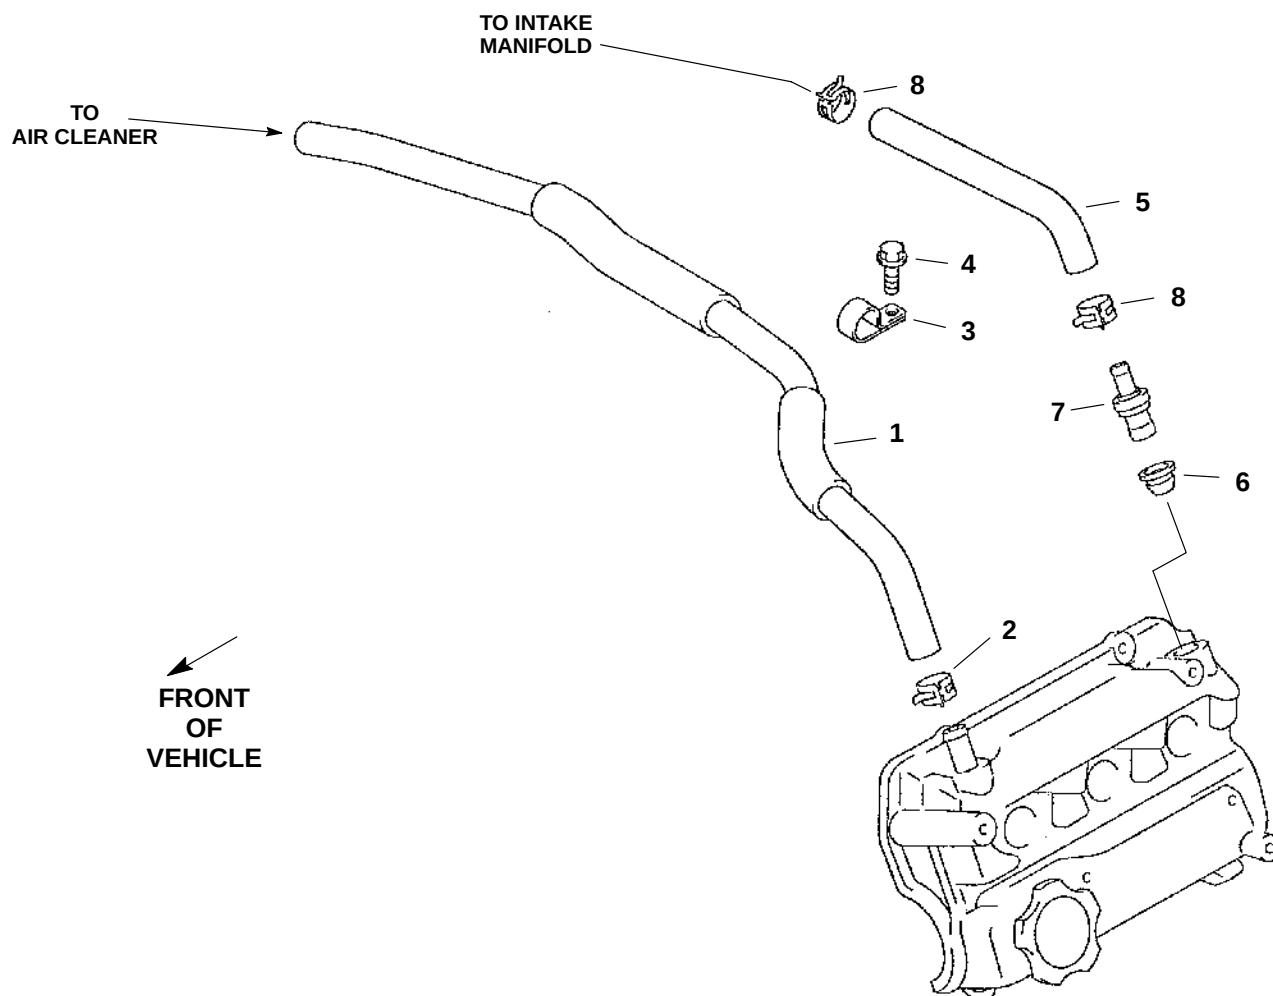


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702488	Hose, breather	1	
2	2702484	Clip, hose	1	
3	2702485	Clamp	1	
4	2702486	Bolt	1	
5	2702488	Hose, PVC	1	
6	2702489	Seal	1	
7	2702490	Valve, PCV	1	
8	2702491	Clip	2	

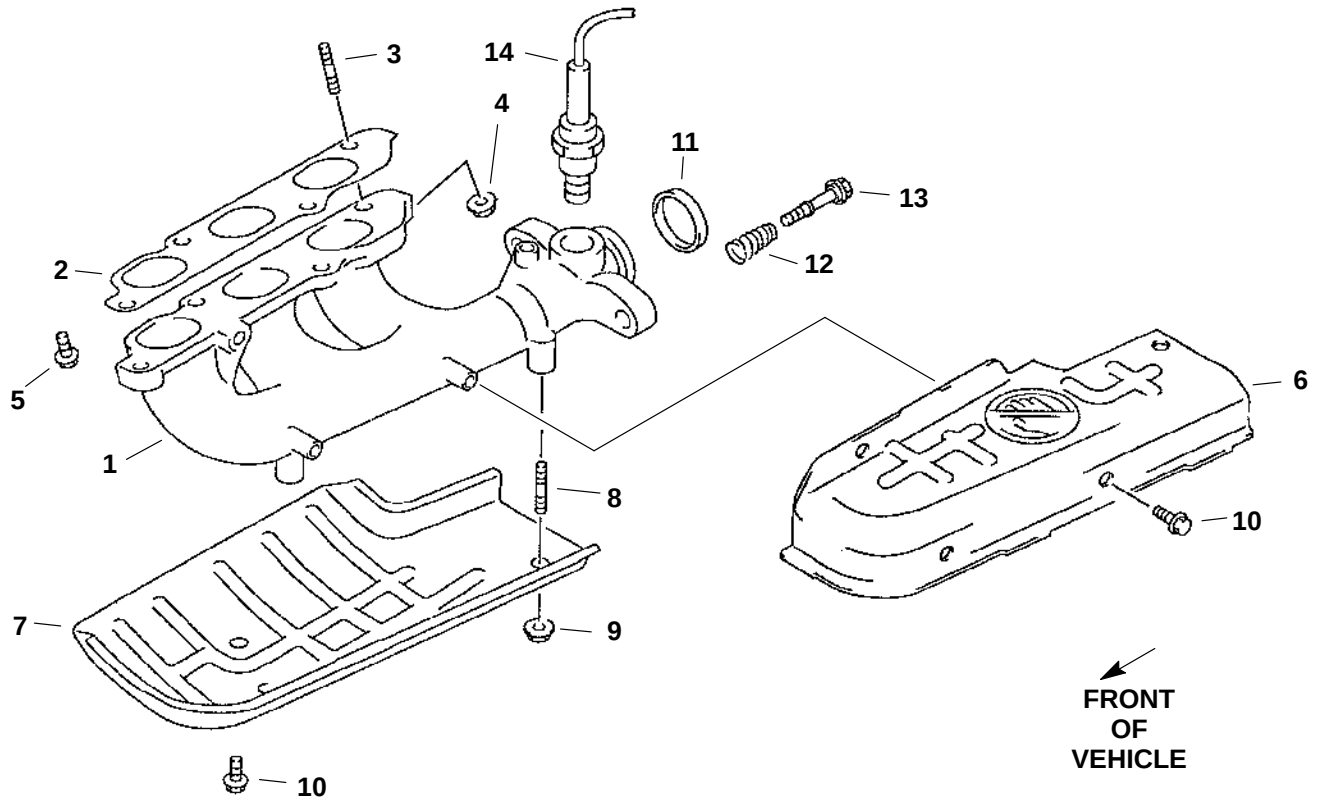

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702492	Maniflod, exhaust	1	
2	2701797	Gasket	1	
3	2702493	Stud bolt	3	
4	2702494	Nut	3	
5	2702495	Bolt	1	
6	2702496	Cover, manifold upper	1	
7	2702497	Cover, manifold lower	1	
8	2701913	Stud bolt	2	
9	2702498	Nut	2	
10	2702499	Bolt (6x10)	5	
11	2702500	Ring, seal	1	
12	2702501	Spring	2	
13	2702502	Bolt (10x65)	2	


6.10 OIL PUMP

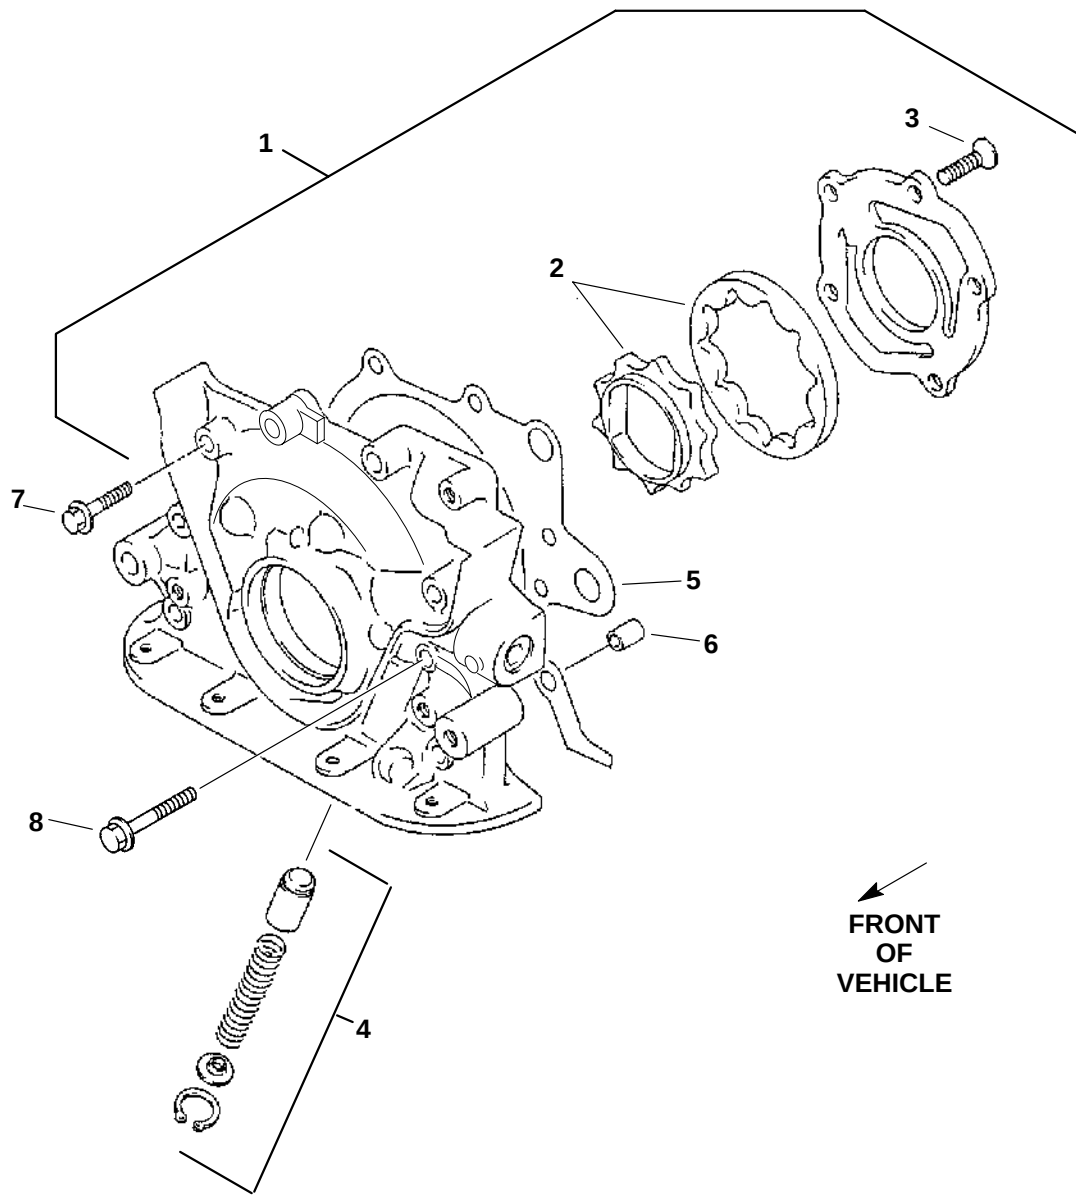


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702515	Pump, oil	1	
2	2702516	R otor, oil pump	1	
3	2702517	S crew	5	
4	2702518	V alve, oil relief	1	
5	2701800	Gasket, oil pump cover	1	
6	2701949	Pin	2	
7	2702519	Bolt	4	
8	2702520	Bolt	4	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.11 WATER PUMP & OUTLET, THERMOSTAT

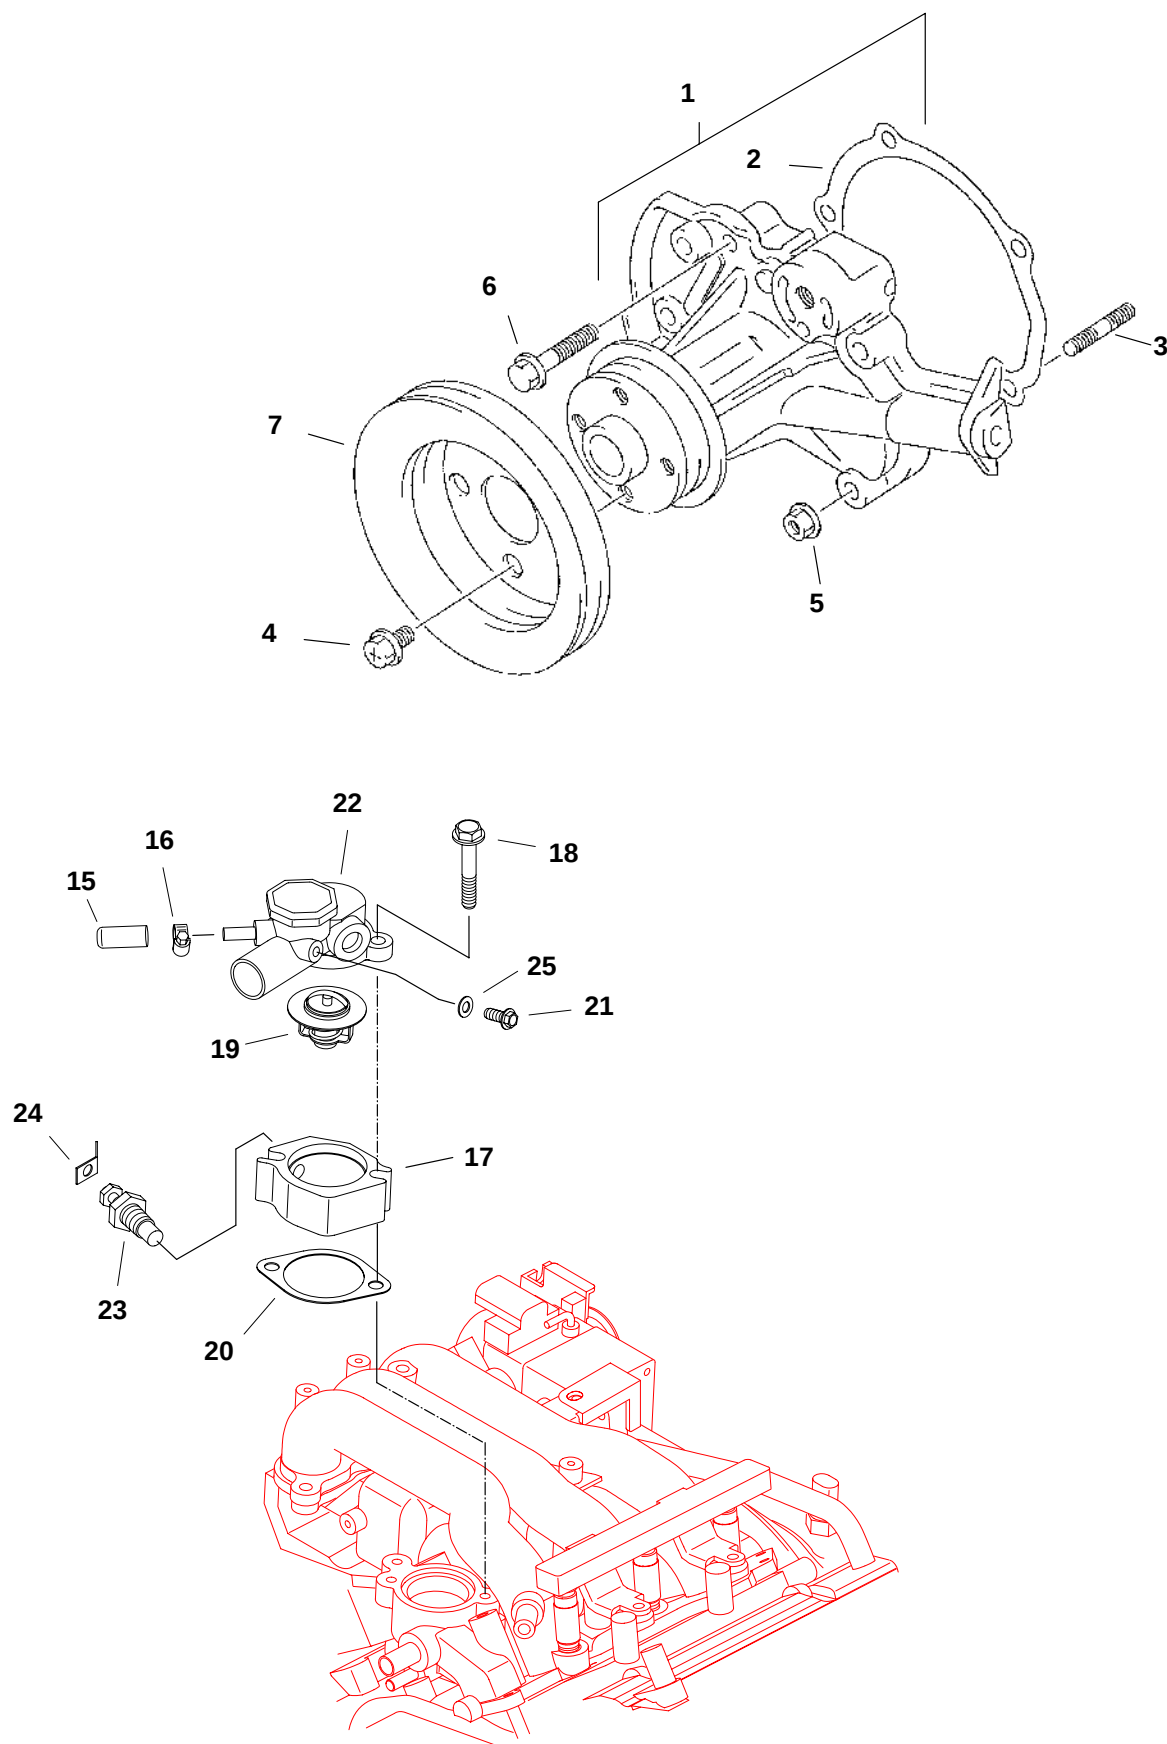


WATER PUMP & OUTLET, THERMOSTAT 6.11

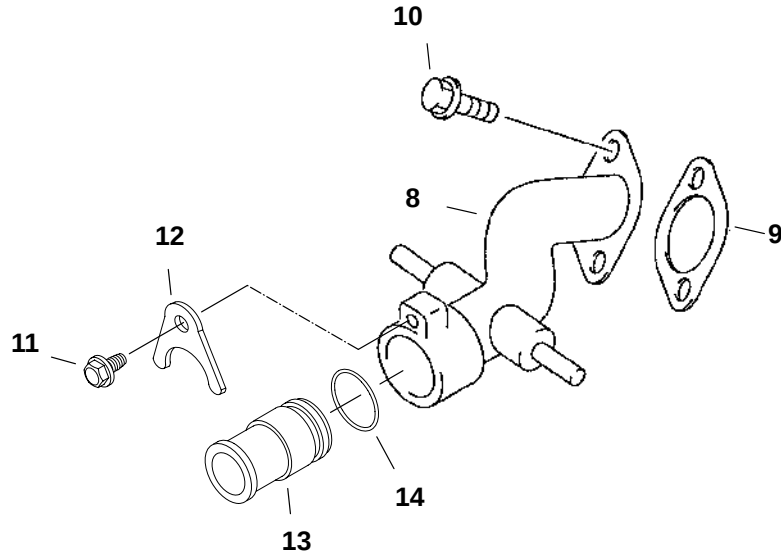

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702522	Pump, water	1	
2	2701801	Gasket, water pump	1	
3	2702523	Stud	2	
4	2702537	Bolt	3	
5	2701914	Nut	2	
6	2702519	Bolt	3	
7	2702525	Pulley, water pump	1	
8	2702543	Case, water inlet	1	
9	2701802	Gasket	1	
10	2701834	Bolt	2	
11	452378	Screw, M6-1.00 x 20	1	
12	845409	Bracket, u-water inlet	1	
13	845365	Tube, water inlet	1	
14	2700031	O-ring	1	
15	845224	Cap, .313 x 1	1	
16	825624	Clamp, hose	1	
17	2701637	Housing, thermostat	1	
18	452392	Screw, M8-1.25 x 50	3	
19	2702542	Thermostat (82° C)	1	
20	2701513	Gasket, thermostat spacer	1	
21	2702540	Bolt, bleed valve	1	
22	2702539	Cap, thermostat	1	
23	843857	Sender, water temperature	1	
24	829787	Terminal, 45°, 1/4 male	1	
25	2702541	Washer, bleed valve	1	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.


6.12 STARTER

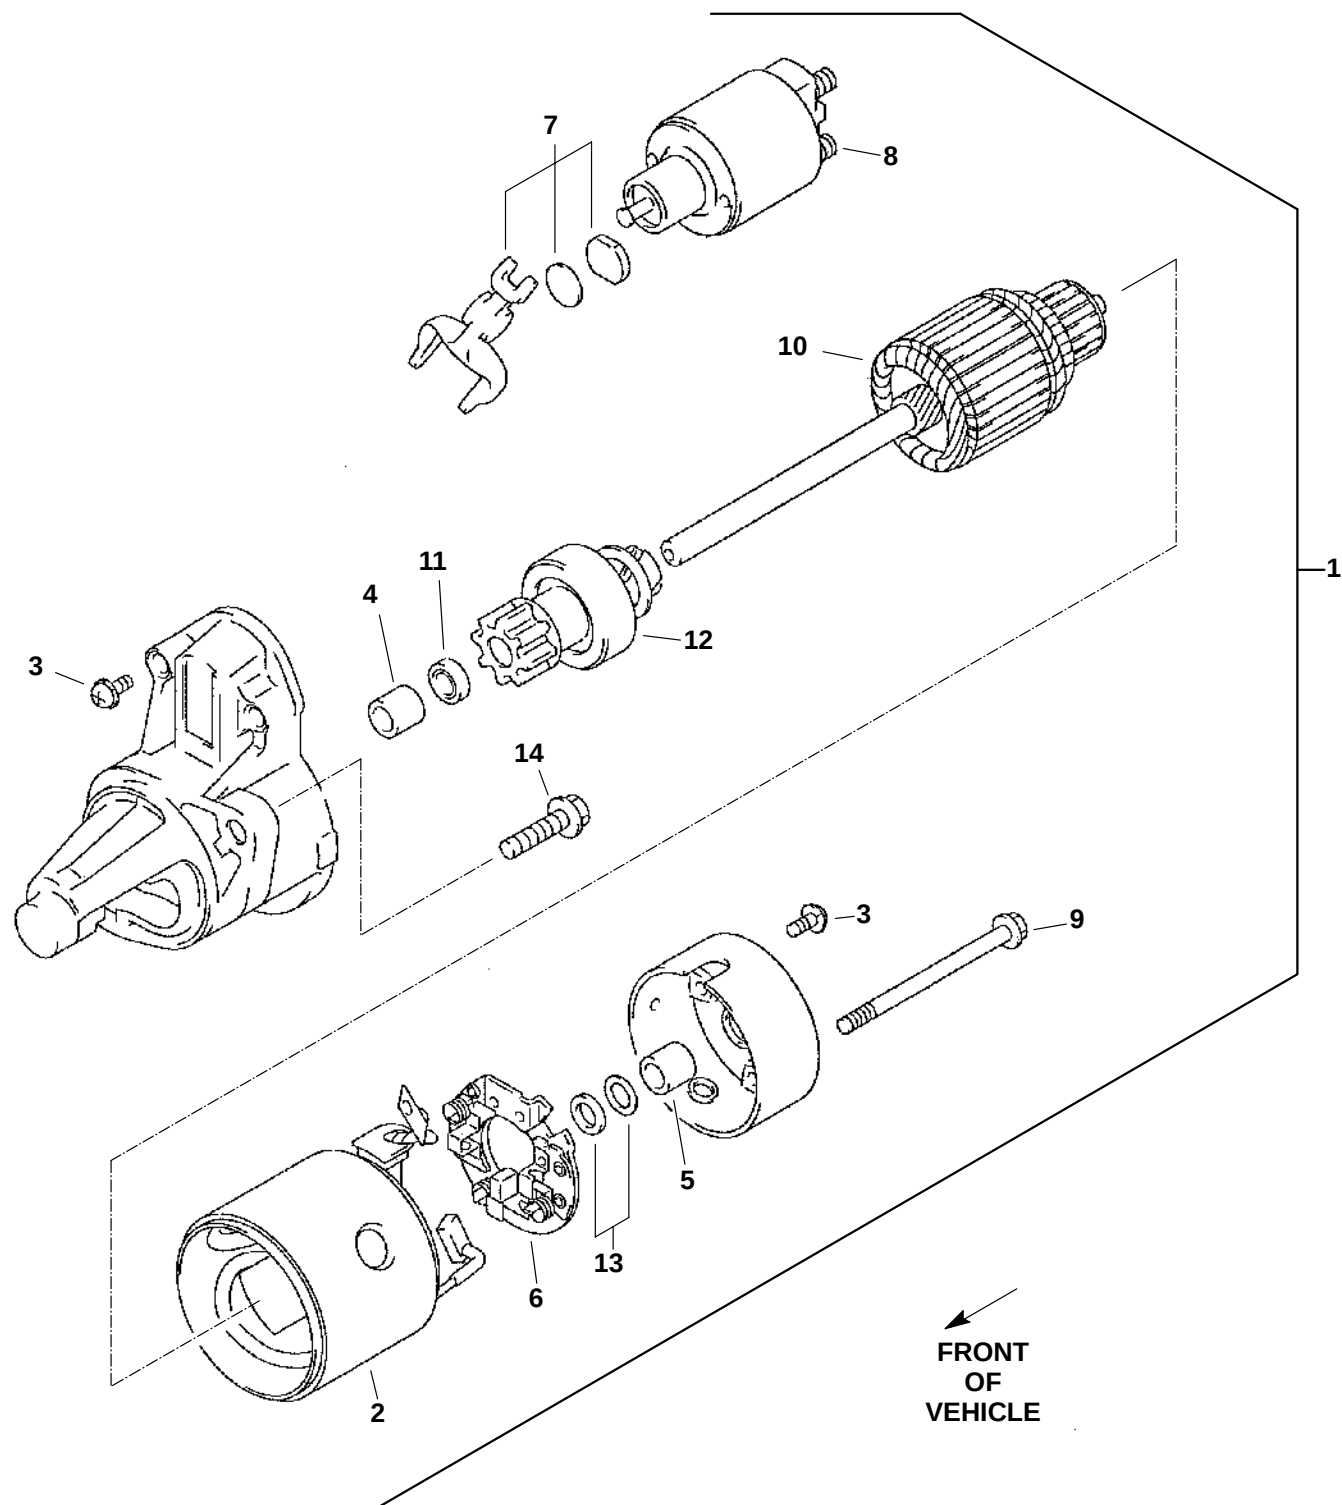

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702906	Motor assembly, starting	1	
2	2702907	Y oke assembly	1	
3	2702895	S crew assembly	1	
4	2702896	B ushing	1	
5	2702897	B ushing	1	
6	2702898	H older assembly, brush	1	
7	2702899	L ever assembly	1	
8	2702900	S witch assembly	1	
9	2702908	B elt	2	
10	2702909	A rmature	1	
11	2702903	R ing assembly	1	
12	2702904	C lutch assembly	1	
13	2702905	W asher	1	
14	2702470	B elt	2	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.13 DRIVESHAFT, TORQUE CONVERTER

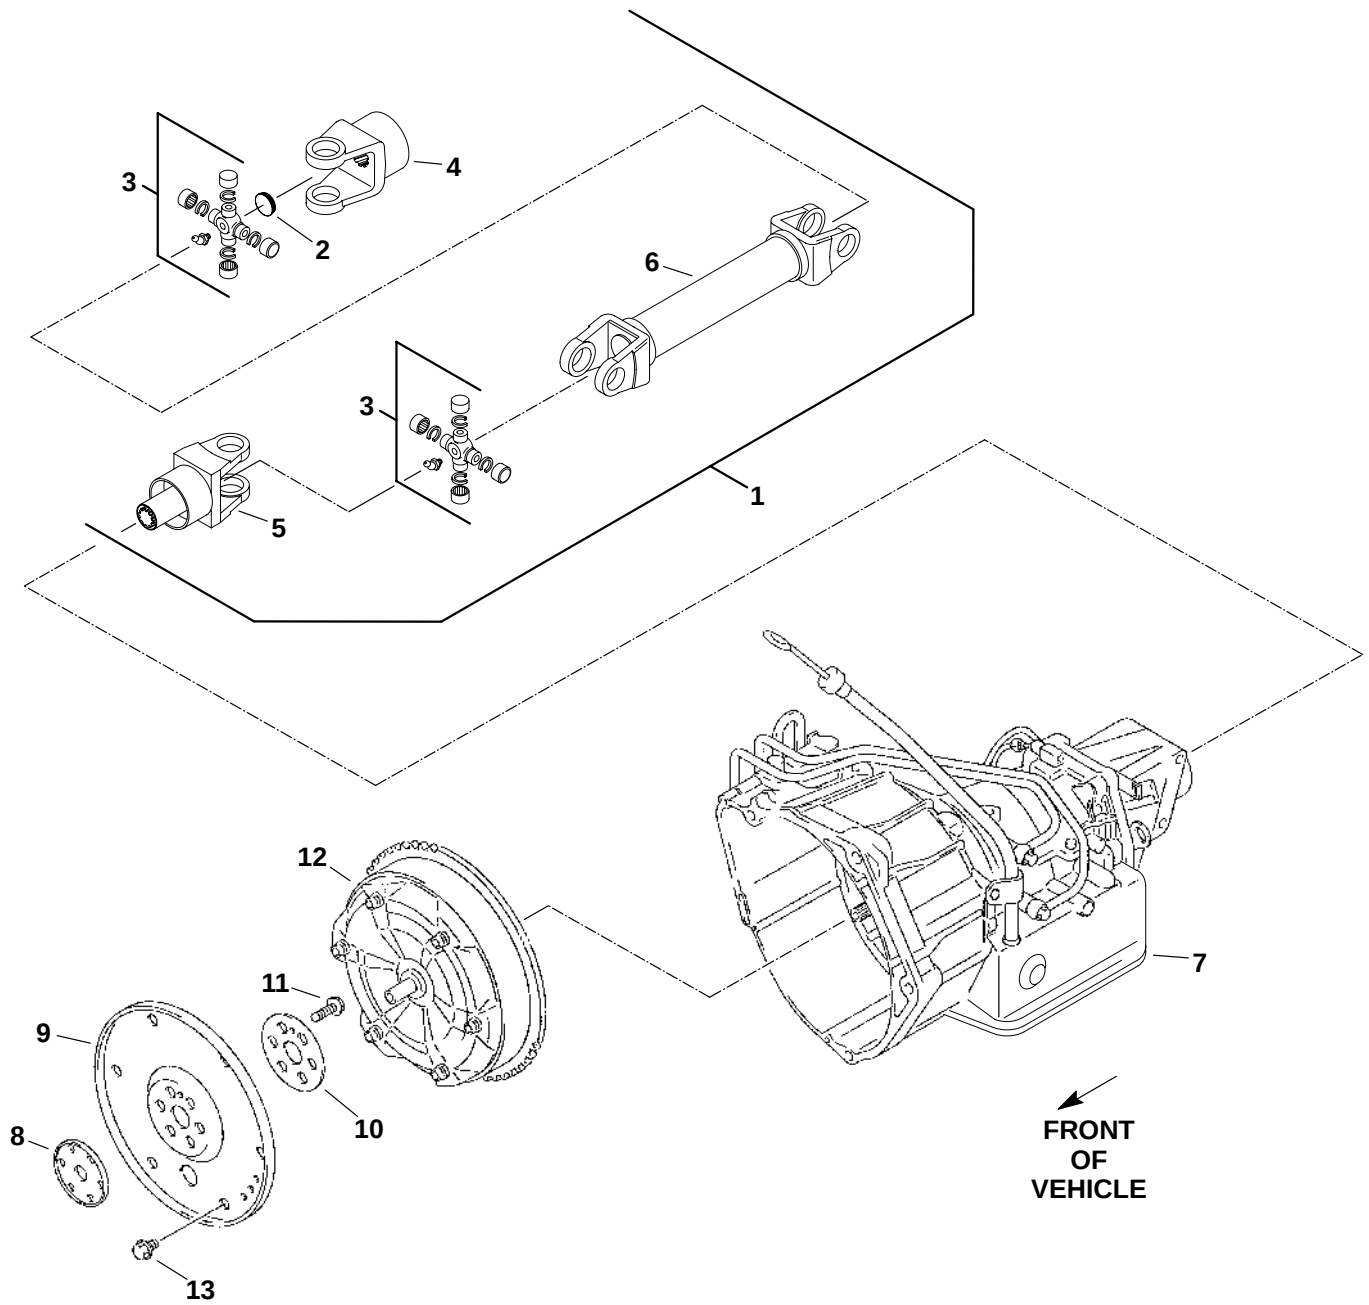


DRIVESHAFT, TORQUE CONVERTER 6.13

Ref. No.	Part No.	Description	No. Req'd	Notes
1	895112.7	Driveshaft, complete	1	
2	548482	Plug , expansion	3	
3	826284	Cross , u-joint	2	
4	826285	Yoke , universal	1	
5	895125	Yoke , front	1	
6	895126	Shaft , drive	1	
7	2702697	Transmission, complete	1	
8	2702698	Flange, drive plate	1	
9	2702699	Plate, drive (flywheel)	1	
10	2702700	Plate, drive rear	1	
11	2701951	Bolt	6	
12	2702701	Converter, torque	1	
13	2702702	Bolt	6	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.


6.14 AUTOMATIC TRANSMISSION

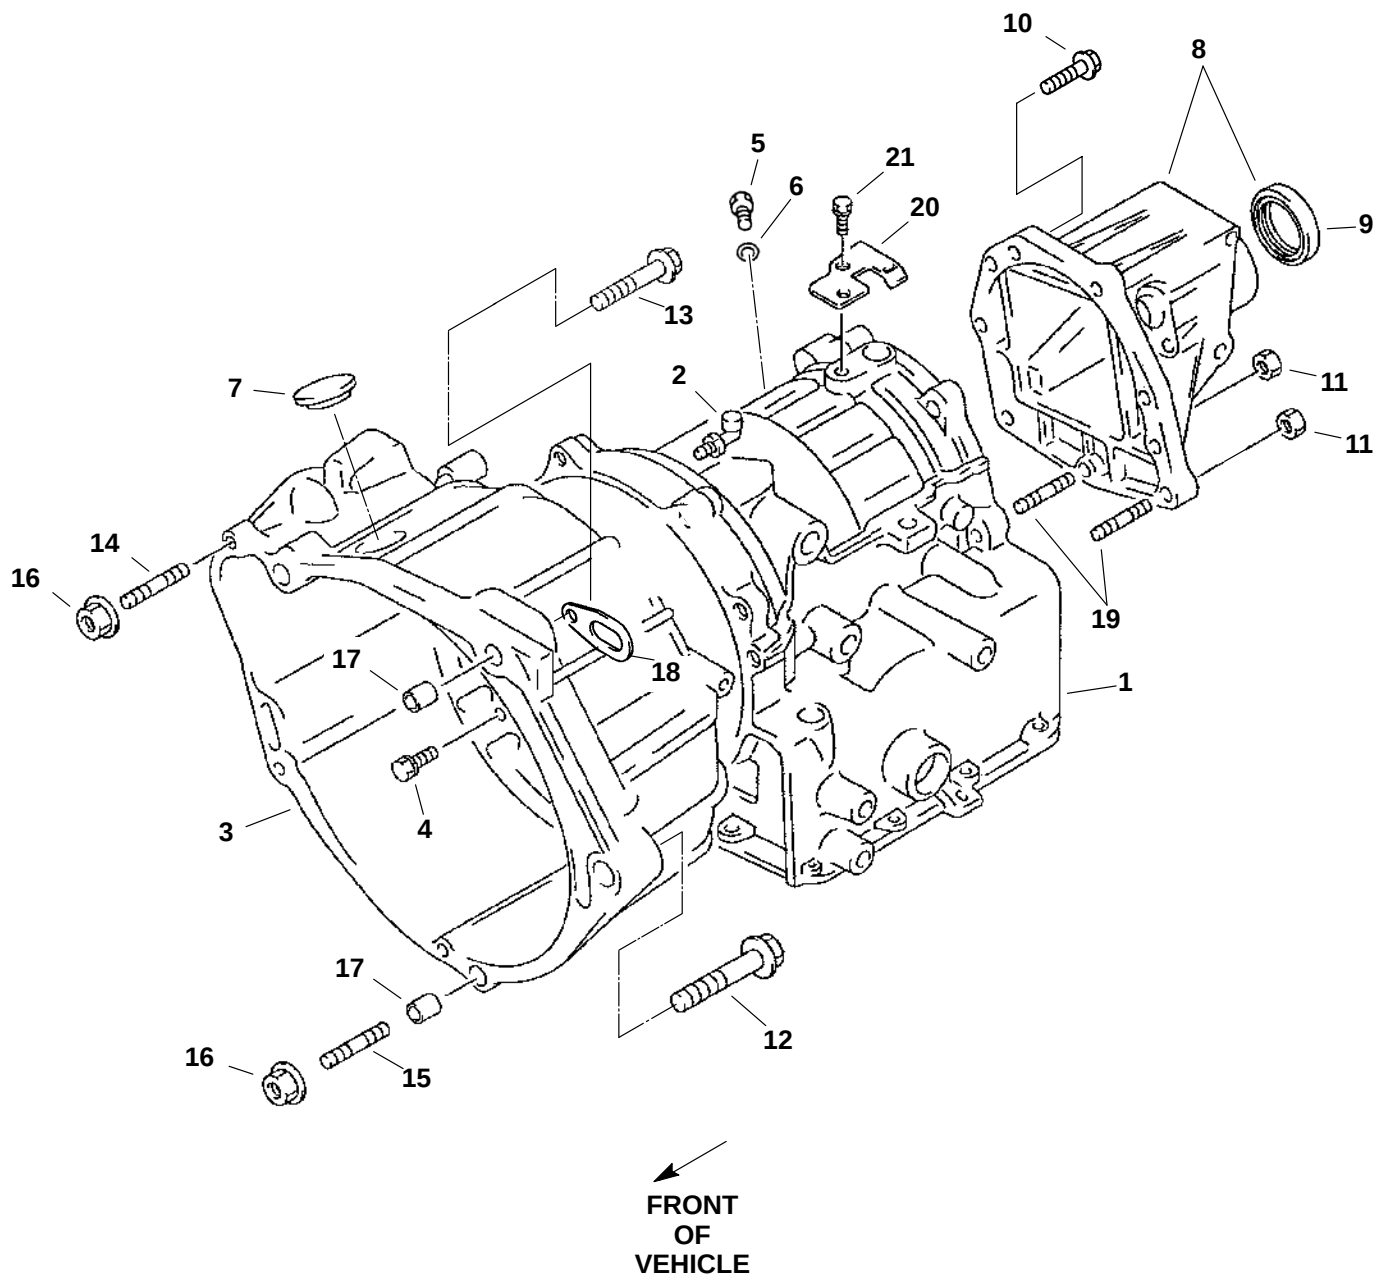

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702750	Case, transmission	1	
2	2702751	B reather	1	
3	2702752	Housing, torque converter	1	
4	2702753	Bolt	6	
5	2702760	Plug, booster	1	
6	2702761	O ring	1	
7	2702662	Cap	1	
8	2702754	Housing, extension	1	
9	2702683	S eal, extension case	1	
10	2702755	Bolt	5	
11	2702494	Nut	2	
12	2702756	Bolt	1	
13	2702686	Bolt	1	
14	2702757	Stud	1	
15	2702758	Stud	1	
16	2702689	Nut	2	
17	2702690	Collar	2	
18	2702759	Hook, engine	1	
19	2702762	Bolt, transmission case	2	
20	2702763	Bracket, connector clamp	1	
21	2702764	Bolt	1	

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.15 AUTOMATIC TRANSMISSION PAN, DIPSTICK & GASKETS

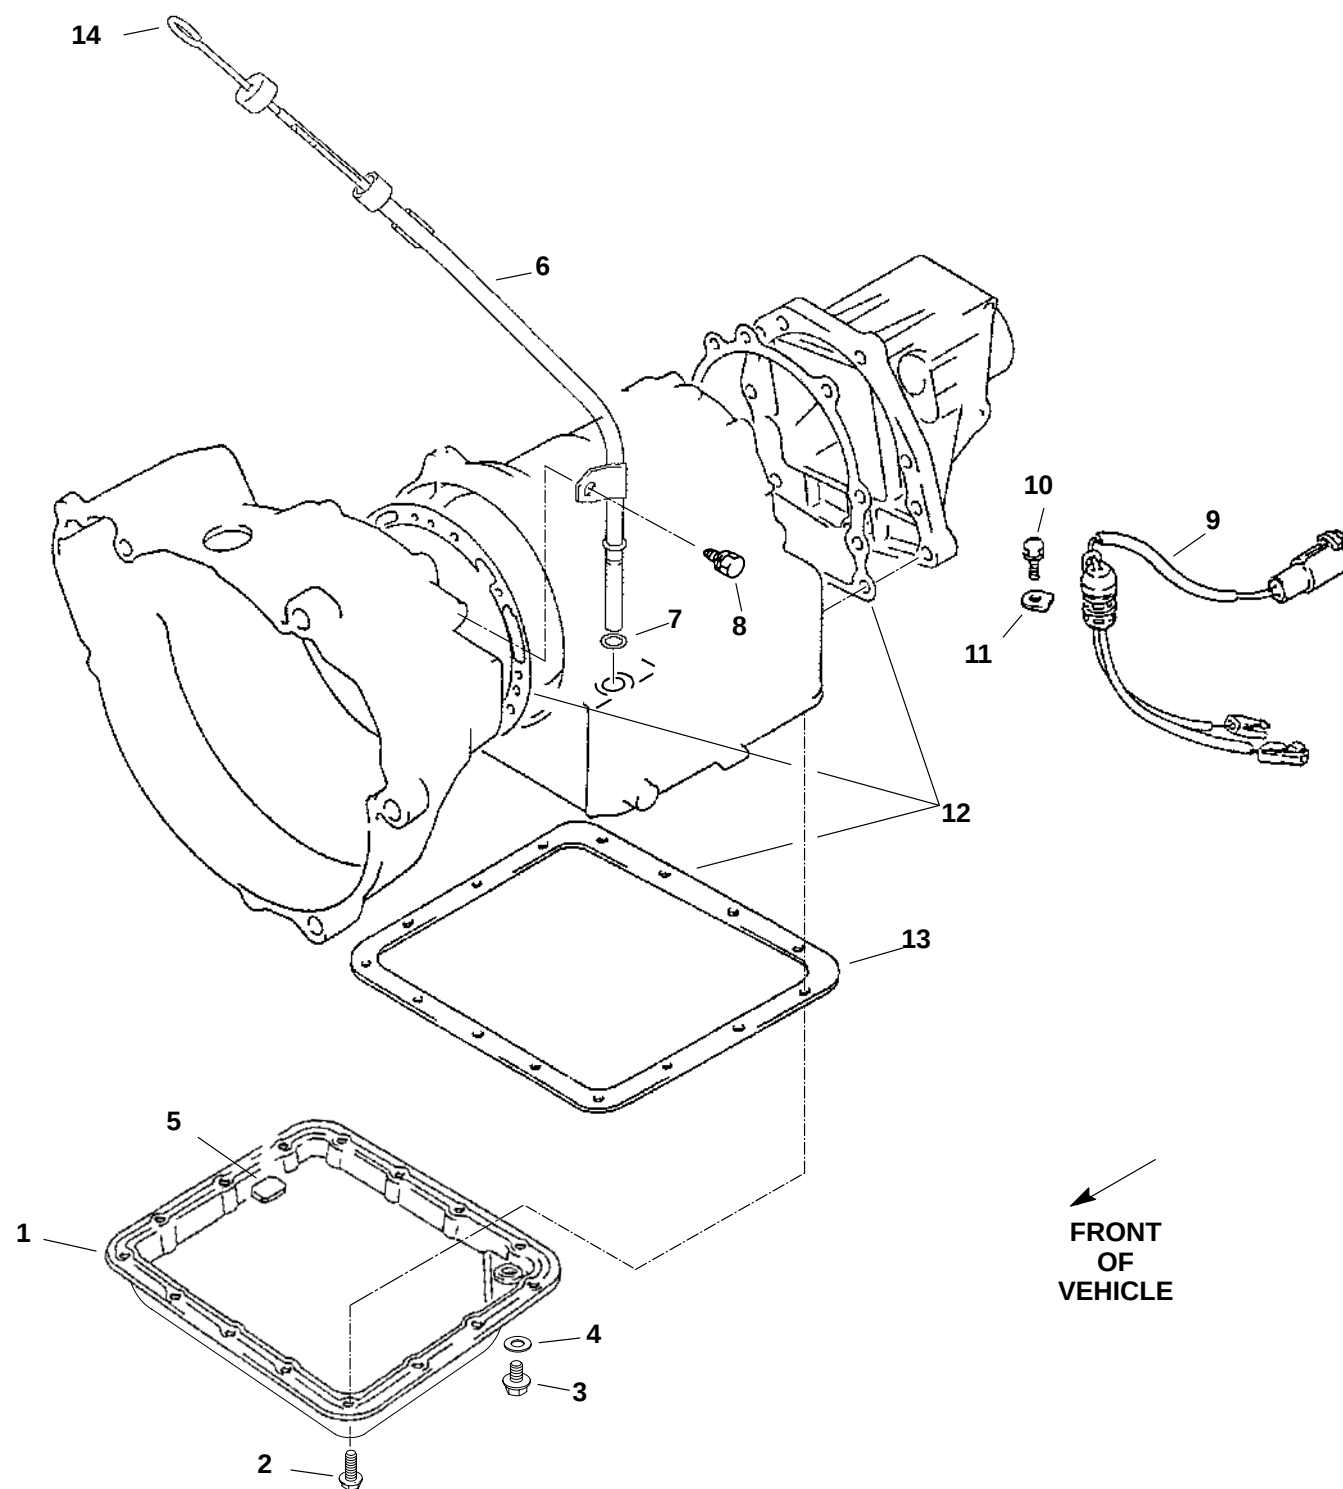


AUTOMATIC TRANSMISSION PAN, DIPSTICK & GASKETS 6.15

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702806	Pan, transmission	1	
2	2702807	Bolt	15	
3	2702808	Plug, transmission drain	1	
4	2702809	Gasket, plug	1	
5	2702810	Magneto, fluid cleaner	1	
6	2702811	Tube, transmission dipstick	1	
7	2702813	⊗ ring	1	
8	2702475	Bolt	1	
9	2702816	Harness, solenoid wire	1	
10	2701921	Bolt	1	
11	2702817	Plate, solenoid harness	1	
12	2702748	Set, transmission gasket	1	
13	2702749	⊗ gasket, transmission pan	1	
14	2702814	Dipstick, transmission	1	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.16 TRANSMISSION TUBES, OIL PUMP, SOLENOIDS & SHIFT SWITCH

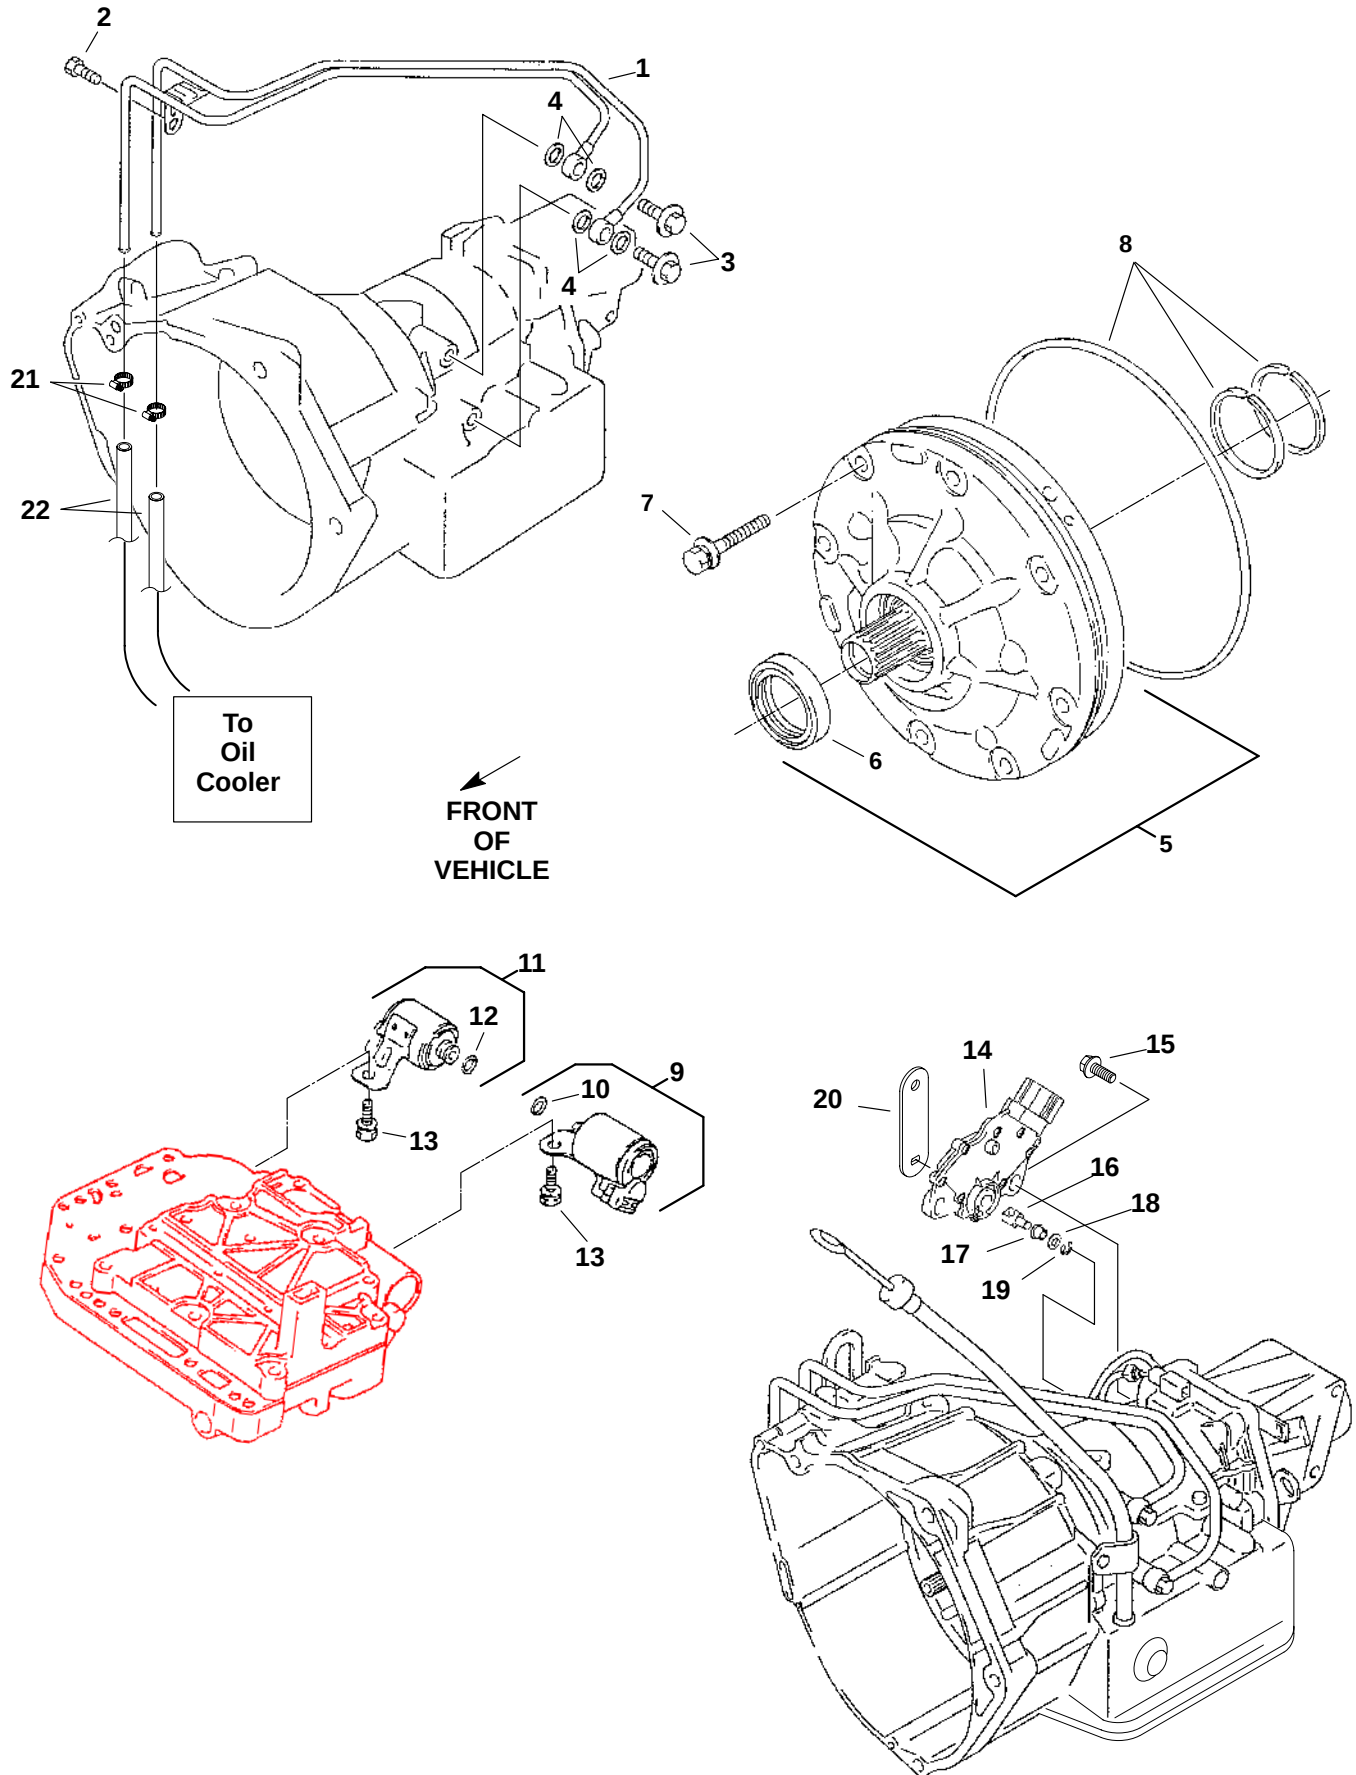


TRANSMISSION TUBES, OIL PUMP, SOLENOIDS & SHIFT SWITCH 6.16

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702843	Pipe assembly, oil	1	
2	2702849	Bolt	1	
3	2702847	Union bolt	2	
4	2702845	Gasket	4	
5	2702765	Pump, oil	1	
6	2702766	Seal , oil pump	1	
7	2702767	Bolt, oil pump	8	
8	2702768	Ring set, oil pump seal	1	
9	2702822	Solenoid, direct clutch	1	
10	2702823	O -ring	1	
11	2702824	Solenoid, 2nd brake	1	
12	2702823	O -ring	1	
13	2702764	Bolt	2	
14	2702885	Switch, shift	1	
15	2702886	Bolt	1	
16	2702881	Joint, transmission shifter	2	
17	2702882	Bushing	1	
18	2702883	Washer	1	
19	2702884	E-ring	1	
20	842740	Lever, shifter	1	
21	825624	Clamp, hose	2	
22	826590	Hose, 5/16 i.d.	As Req'd.	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.17 TRANSMISSION INPUT SHAFT & CLUTCH

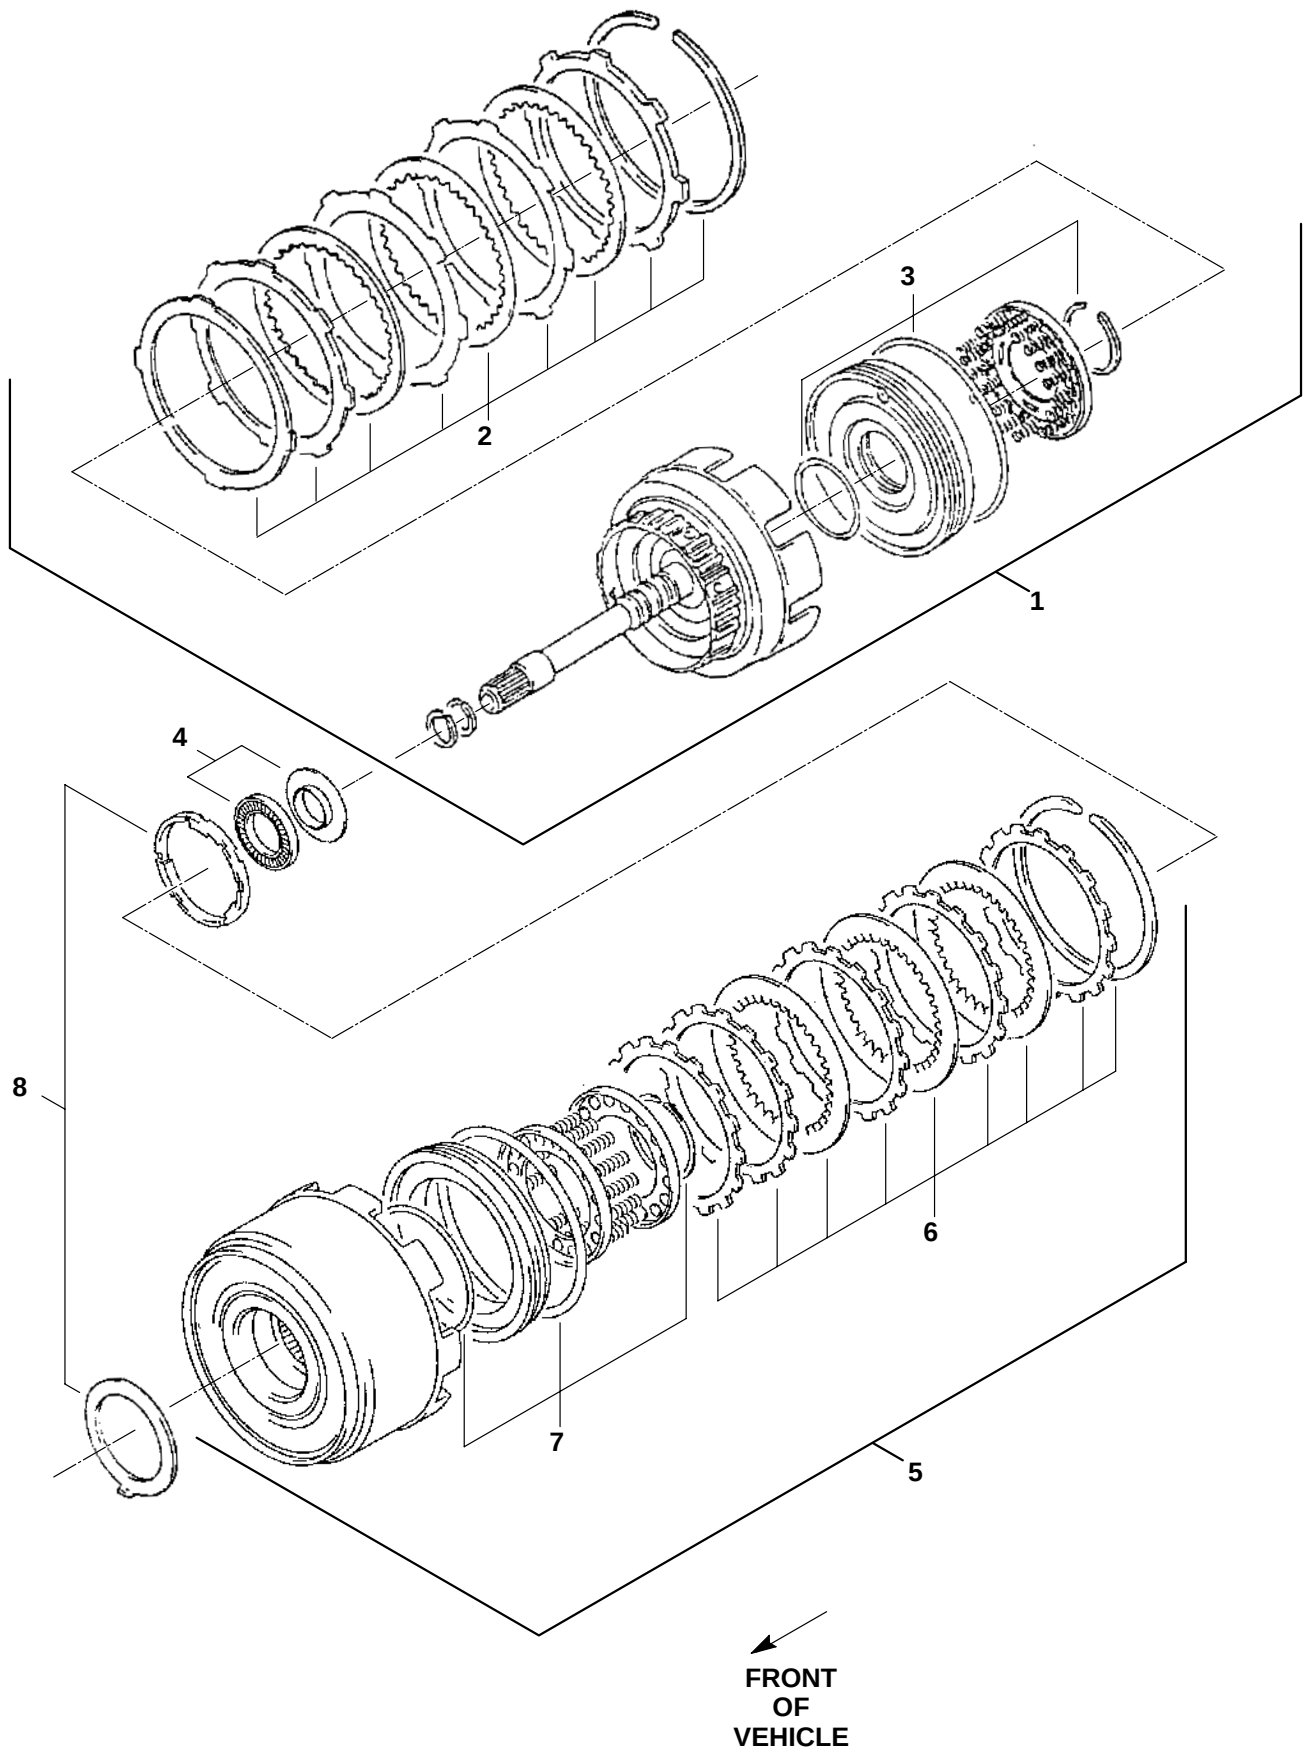


TRANSMISSION INPUT SHAFT & CLUTCH 6.17

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702769	Shaft set, input	1	
2	2702770	Plate set, forward clutch	1	
3	2702771	 ring set, forward clutch	1	
4	2702772	Bearing set, thrust (No. 1)	1	
5	2702773	Clutch assembly, direct	1	
6	2702774	Plate set, direct clutch	1	
7	2702775	 ring set, direct clutch	1	
8	2702776	Washer set, direct clutch	1	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.18 TRANSMISSION PLANETARY GEARS & OUTPUT SHAFT

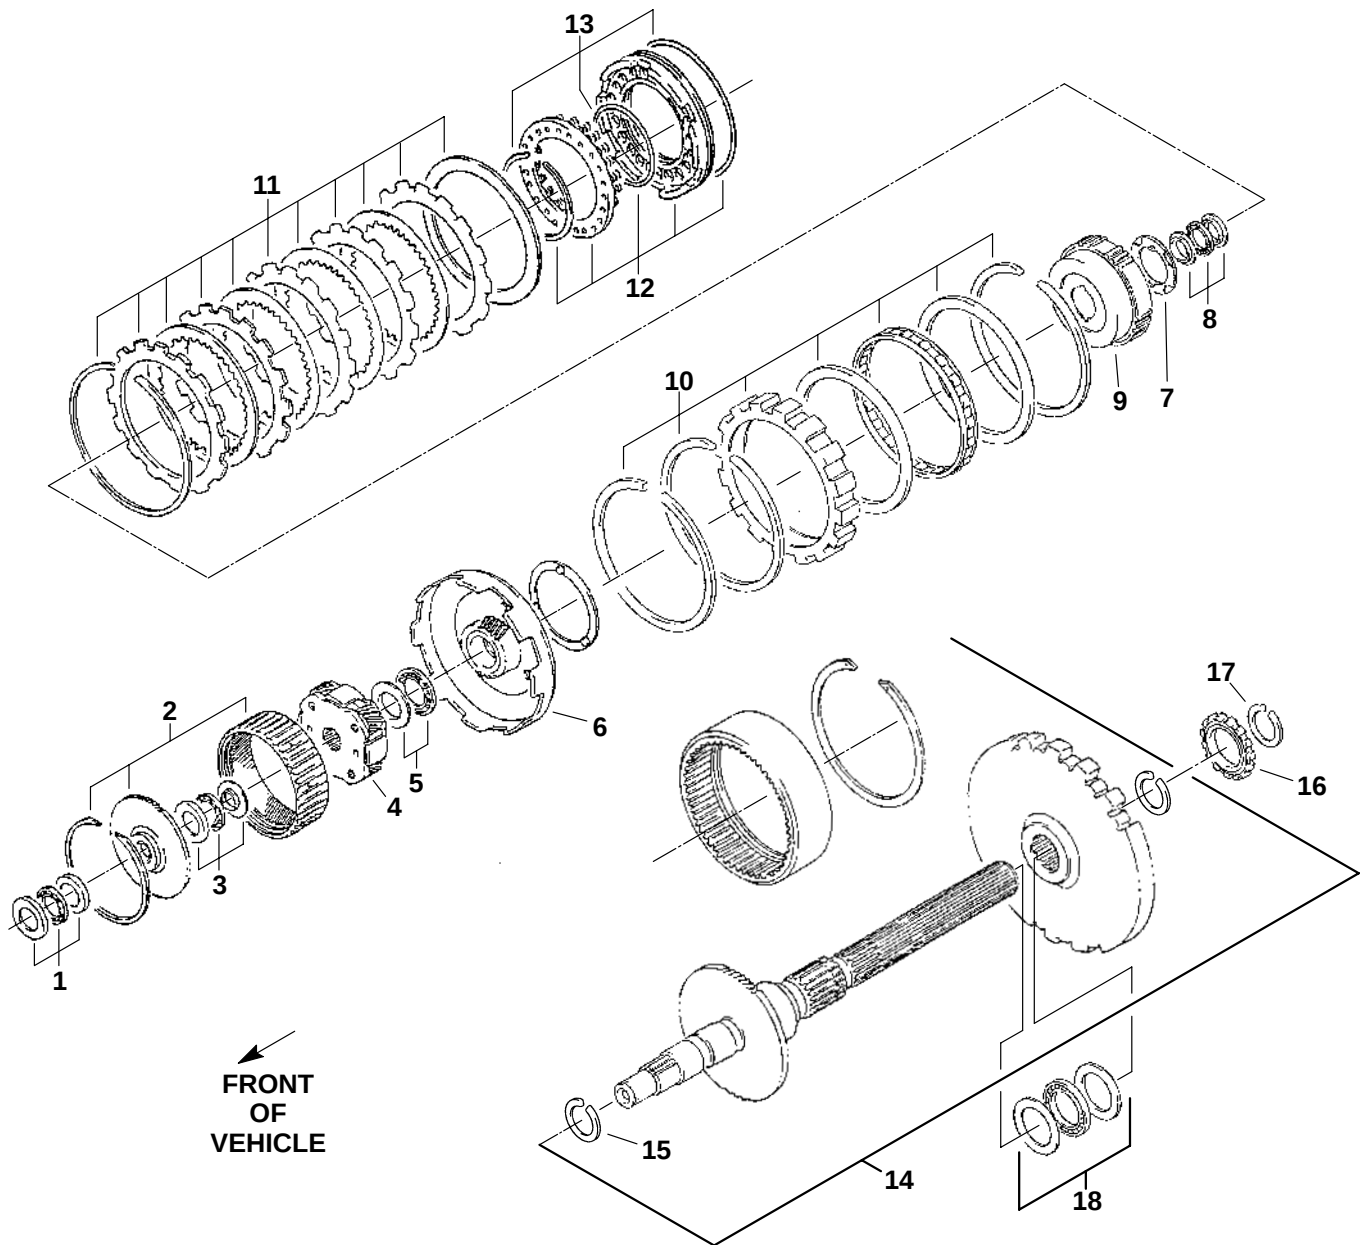



TRANSMISSION PLANETARY GEARS & OUTPUT SHAFT 6.18

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702778	Bearing set, thrust (No. 3)	1	
2	2702777	Gear assembly, forward planetary link	1	
3	2702780	Bearing set, thrust (No. 4)	1	
4	2702779	Gear assembly, front	1	
5	2702781	Bearing set, thrust (No. 5)	1	
6	2702782	Gear, planetary sun	1	
7	2702783	Washer set, thrust	1	
8	2702785	Bearing set, thrust (No. 1)	1	
9	2702784	Gear, rear planetary	1	
10	2702786	Clutch set, 1-way	1	
11	2702787	Plate set, 1st/reverse	1	
12	2702788	Piston set, 1st/reverse	1	
13	2702789	⊗ring set, 1st/reverse	1	
14	2702790	Shaft, output	1	
15	2702792	Ring, snap	1	
16	2702793	Ring, speedometer exciter	1	
17	2702794	Cir-clip, exciter ring	1	
18	2702795	Bearing, thrust (Set No. 6)	1	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.19 BRAKE BAND & SHIFT SHAFT

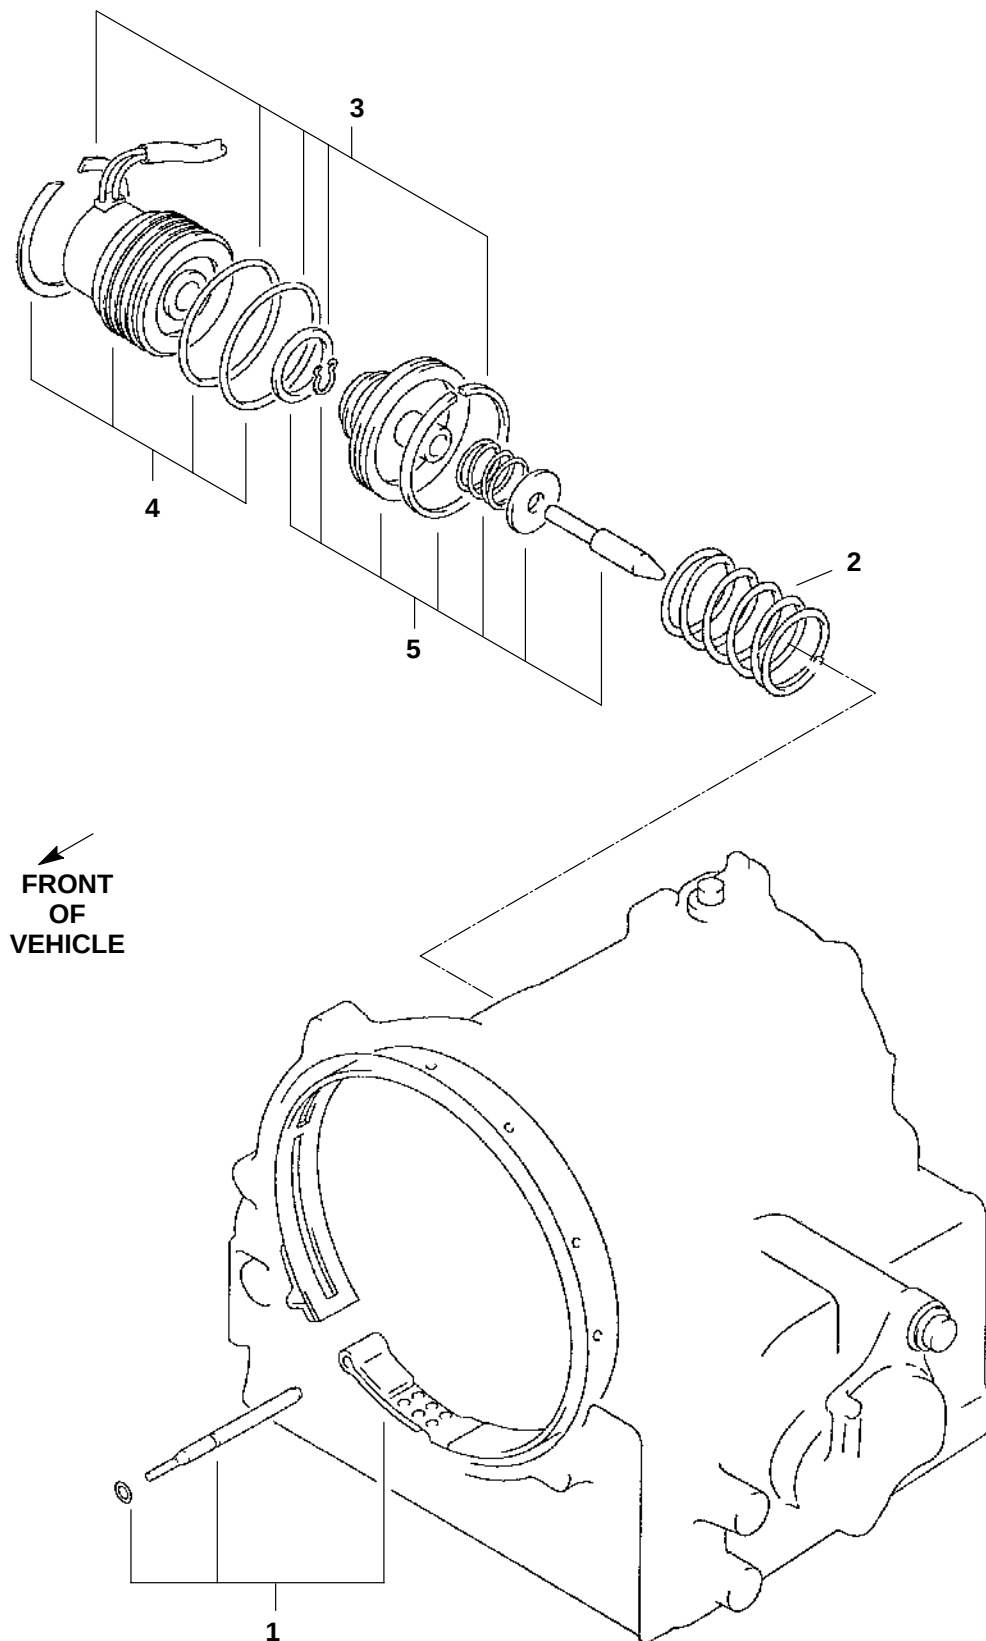


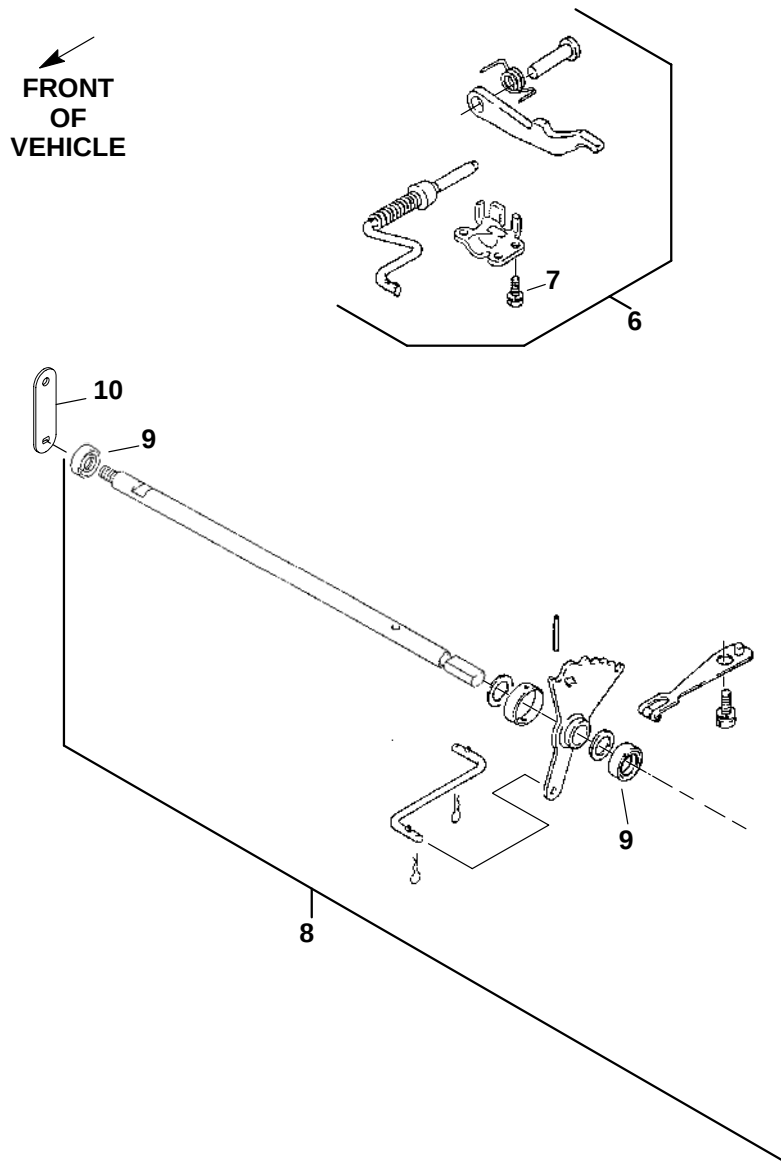

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702800	Band set, second brake	1	
2	2702805	Spring, second brake piston return	1	
3	2702801	Piston assembly, second brake	1	
4	2702804	Cover set, 2nd brake	1	
5	2702801	Ring set, 2nd brake seal	1	
6	2702796	Pole set, parking	1	
7	2701921	Bolt	3	
8	2702797	Shaft set, lever	1	
9	2702798	Seal	2	
10	842740	Lever, shifter	1	


•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN THE PRECEDING ASSEMBLY.

6.20 TRANSMISSION VALVE

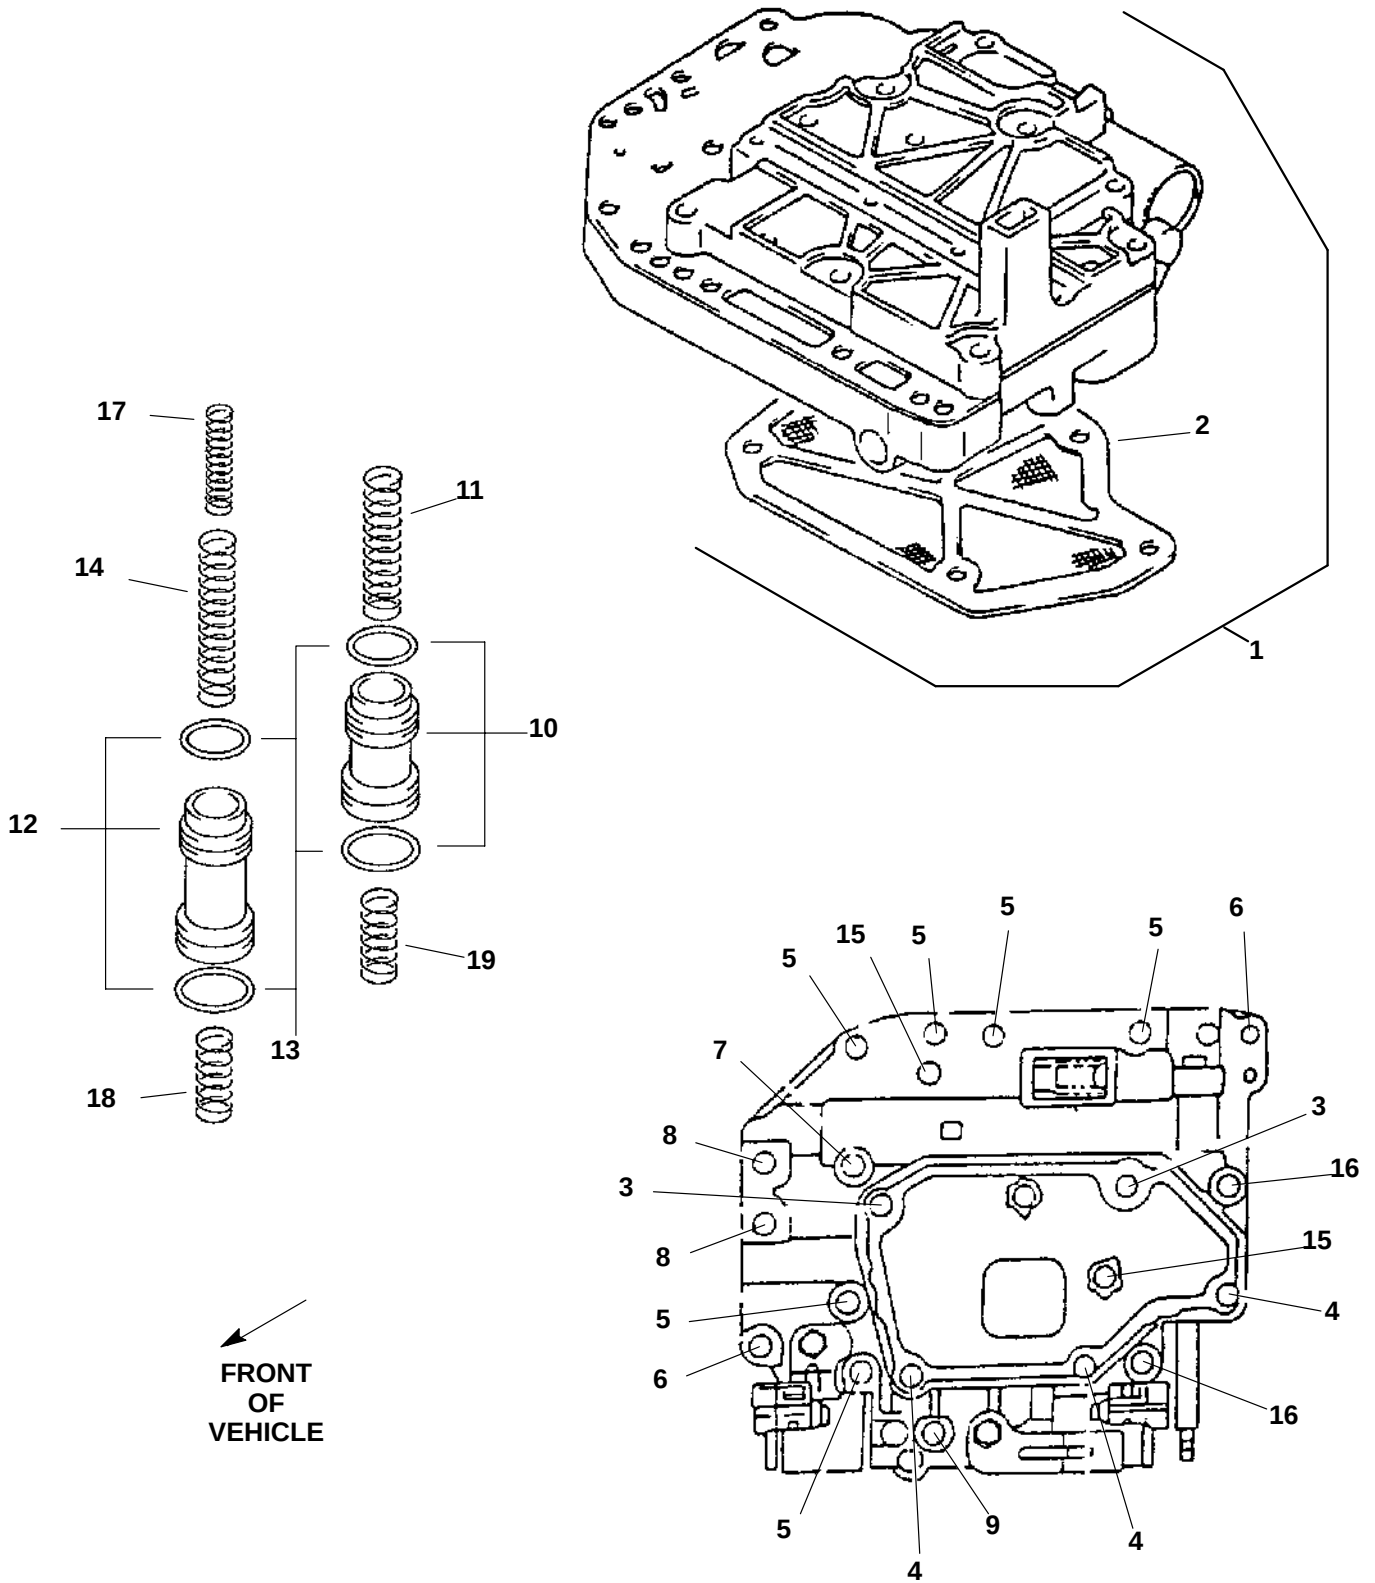


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2702821	Body assembly transmission valve	1	
2	2702825	Strainer, transmission	1	
3	2702826	Bolt, valve body, No. 5	2	
4	2702827	Bolt, valve body, No. 6	3	
5	2702836	Bolt, valve body, No. 1	6	
6	2702834	Bolt, valve body, No. 2	2	
7	2702835	Bolt, valve body, No. 3	1	
8	2702837	Bolt, valve body, No. 4	2	
9	2702838	Bolt, valve body, No. 6	1	
10	2702828	Piston set, C1 accumulator	1	
11	2702829	Spring, forward piston	1	
12	2702830	Piston set, B1 accumulator	1	
13	2702833	Seal ring set, accumulator	1	
14	2702831	Spring, accumulator 2nd brake position	1	
15	2702839	Bolt, valve body, No. 1	2	
16	2702840	Bolt, valve body, No. 2	2	
17	2702841	Spring, 2nd brake No. 2	1	
18	2702842	Spring, 2nd brake No. 3	1	
19	2702832	Spring, accumulator forward piston lower	1	

6.21 MAIN FRAME

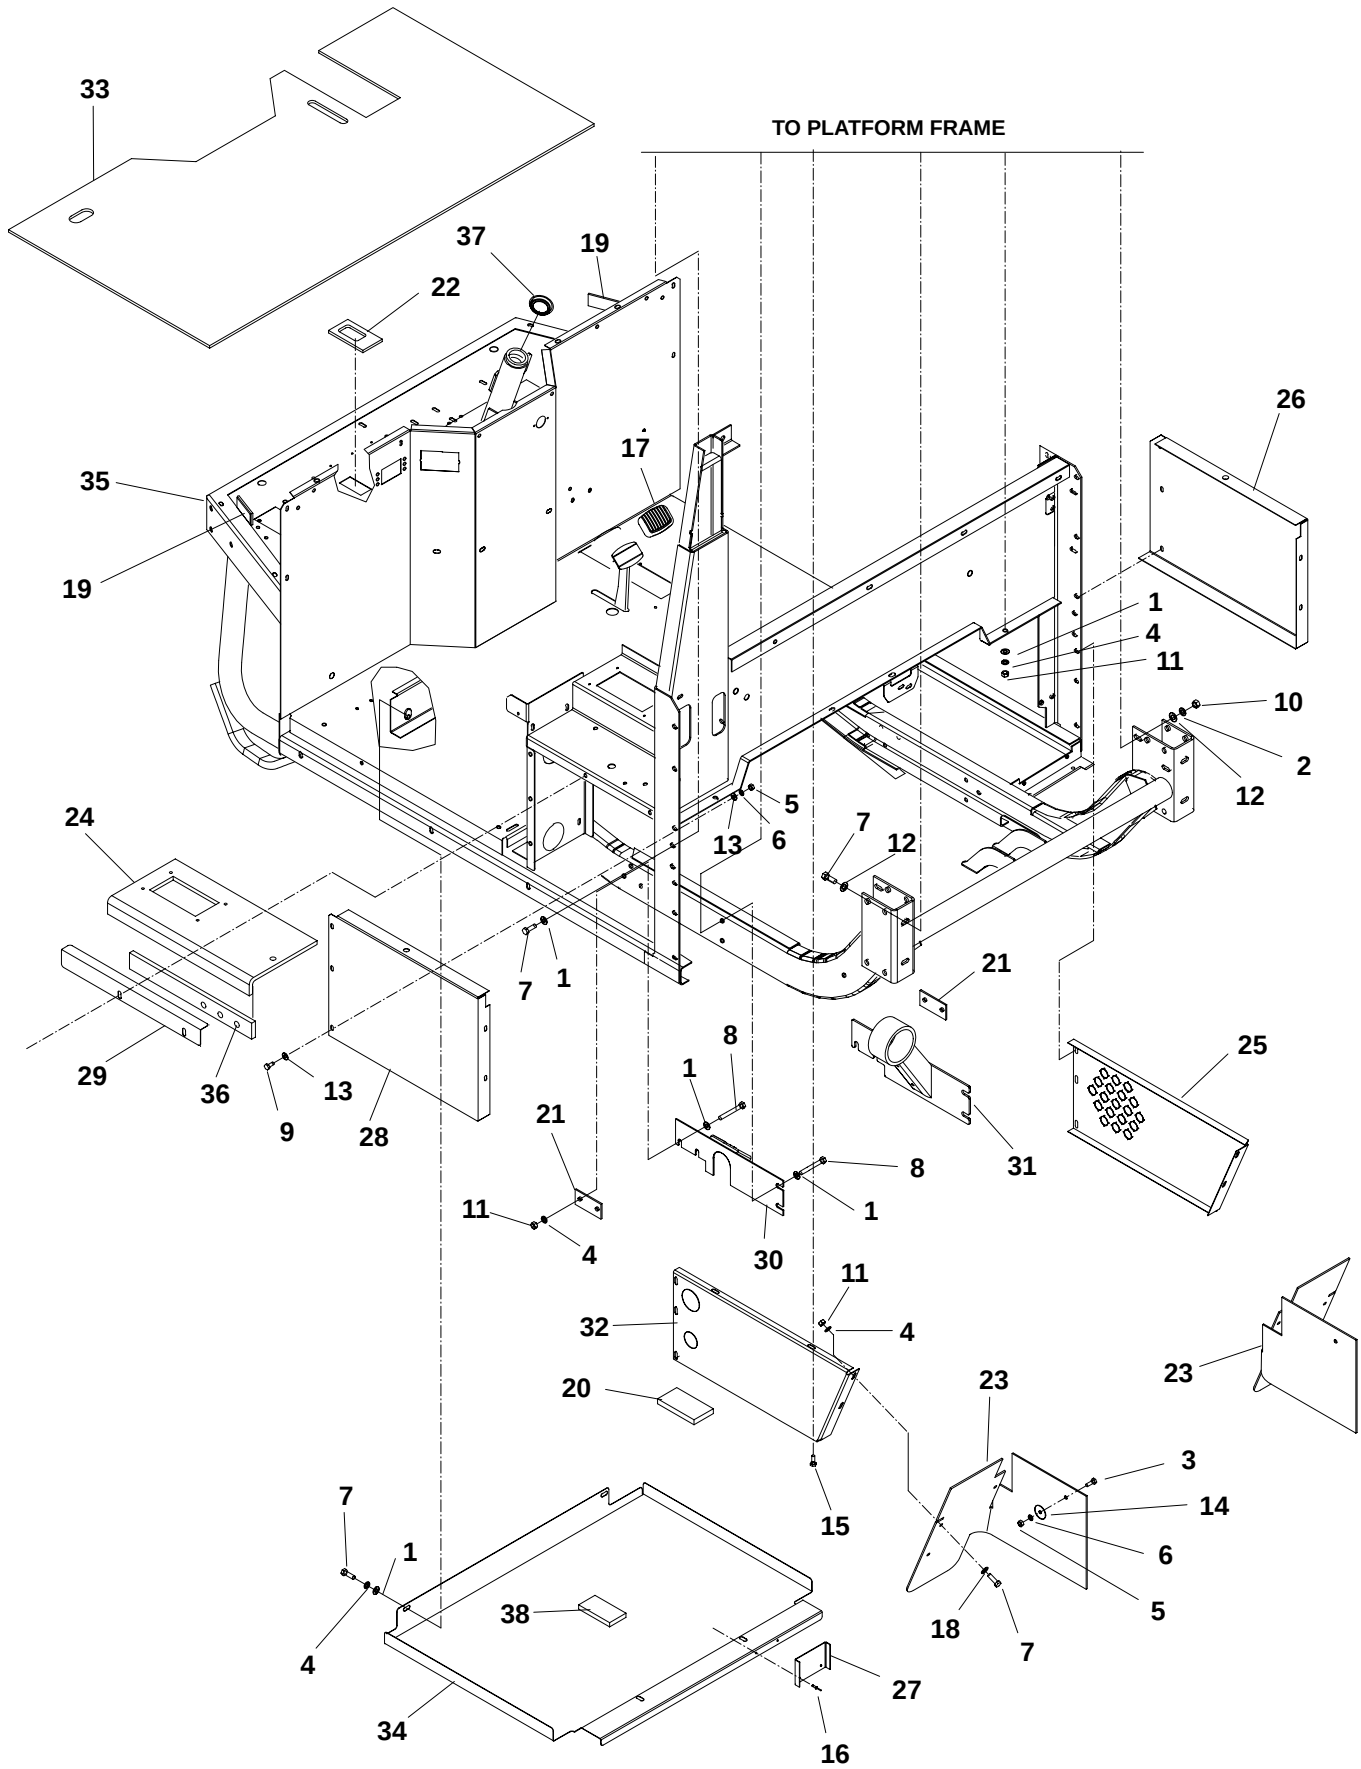


Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16	18	
2	120177	Lockwasher, 3/8	4	
3	300646	Screw, 1/4-20 x 3/4	4	
4	306325	Lockwasher, 5/16	18	
5	306375	Nut, 1/4-20	6	
6	306396	Lockwasher, 1/4	11	
7	306416	Screw, 5/16-18	14	
8	306464	Screw, 5/16-18 x 2 1/2	8	
9	306487	Screw, 1/4-20 x 5/8	6	
10	306562	Nut, 3/8-16	4	
11	306932	Nut, 3/8-16	14	
12	306981	Washer, 3/8	8	
13	308090	Washer, 1/4	16	
14	548175	Washer, 1/4	4	
15	800026	Screw, 1/4-20 x 3/4	3	
16	800390	Rivet, 1/8 x 25/64	2	
17	810152	Cover	1	
18	825128	Washer, 11/32	8	
19	825933	Reflector, yellow	2	
20	829880	Pad	2	
21	830762	Plate	2	
22	836389	Gasket, horn	1	
23	837690	Guard, splash	2	
24	838688	Cover, foam	1	
25	840230	Panel, RIGHT	1	
26	840233	Panel, RIGHT	1	
27	842868	Plate, oil deflector	1	
28	843172	Panel, LEFT, filler	1	
29	843219	Cover, pad	1	
30	2701419.7	Mount, motor, LEFT	1	
31	2702236	Mount, motor, RIGHT	1	
32	894057	Panel, LEFT	1	
33	900047	Mat, floor	1	
34	900048	Pan, skid	1	
35	2701459.7	Frame, main	1	
36	828998	Seal, foam	1	
37	821606	Grommet	1	
38	828577	Pad	1	

6.22 PLATFORM FRAME

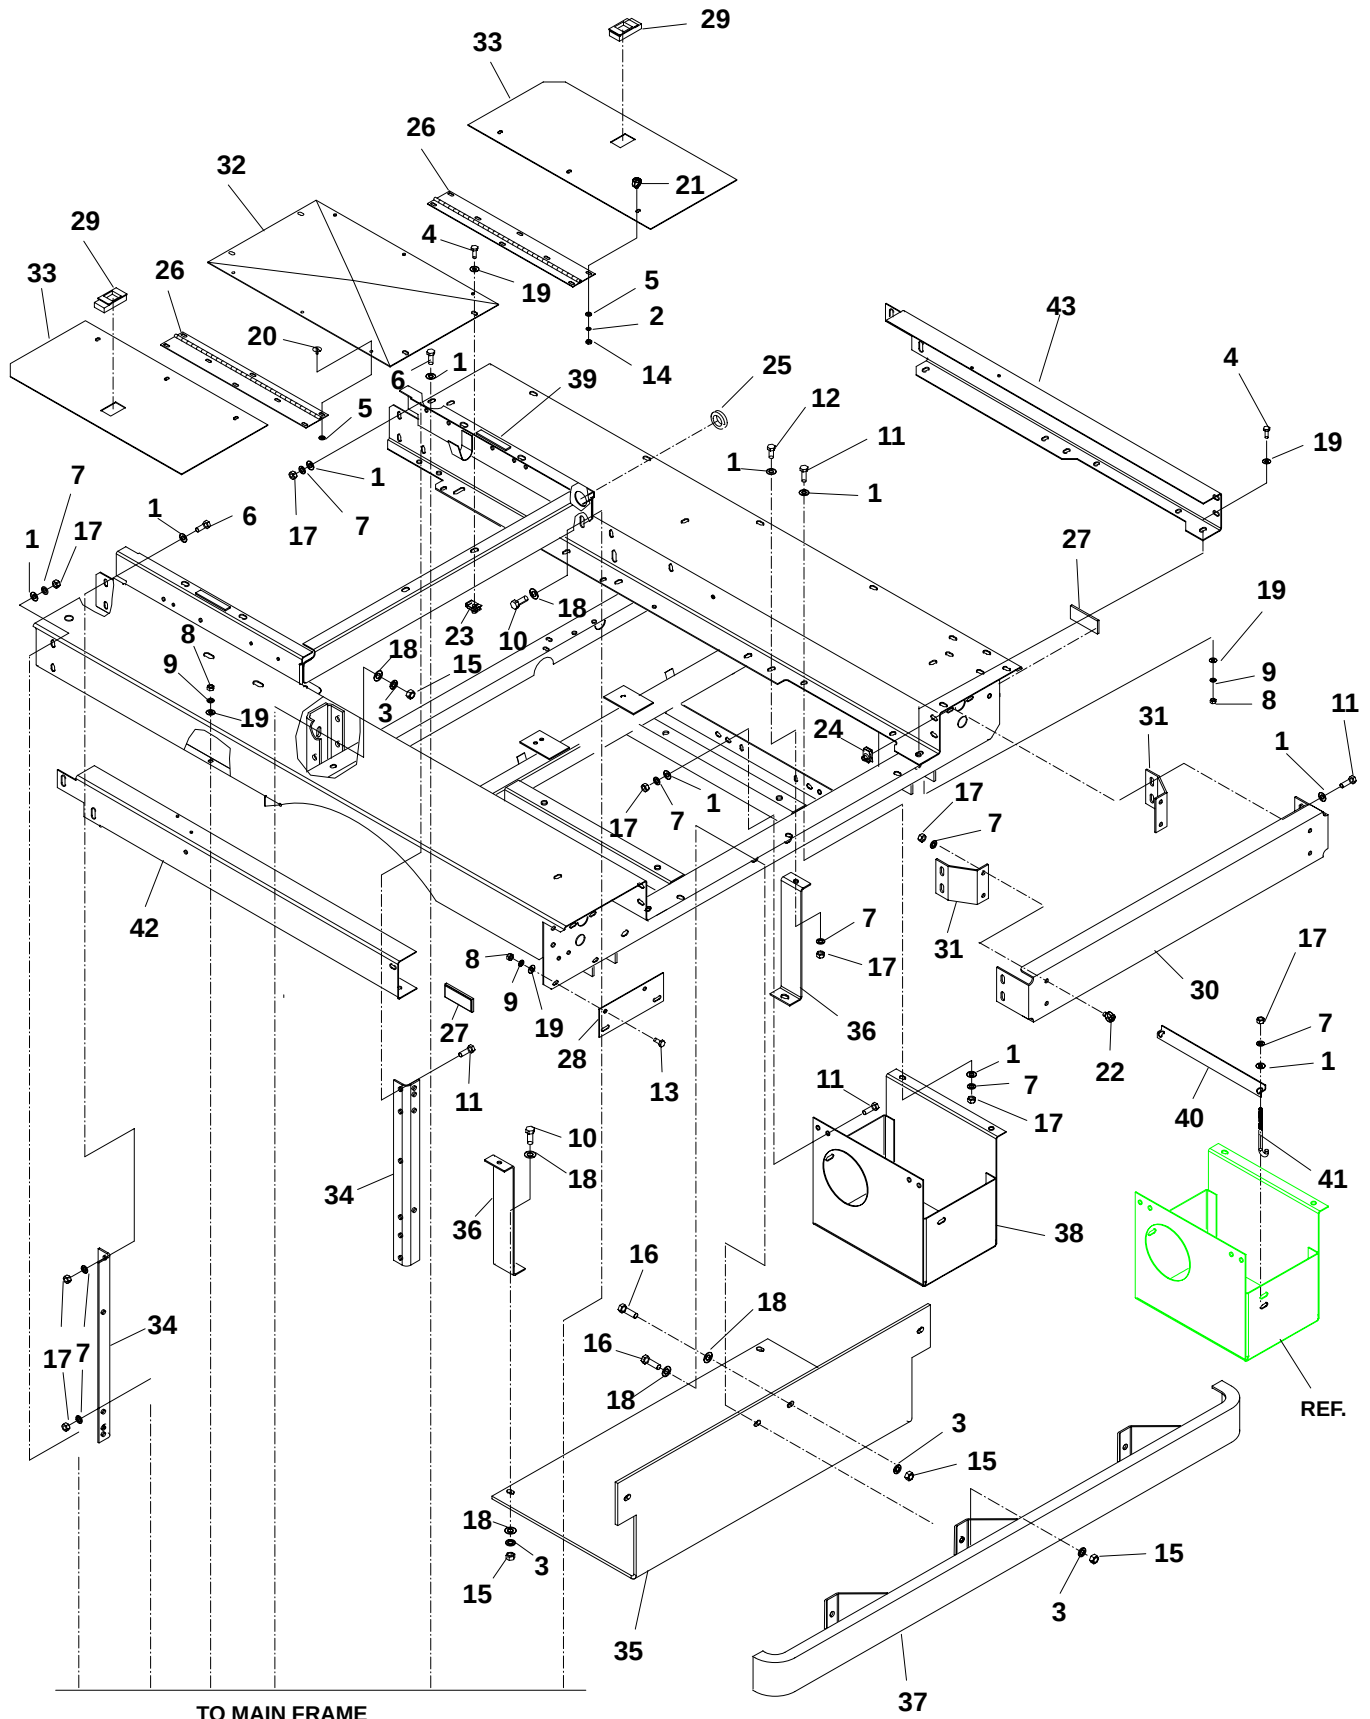

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16	24	
2	120052	Lockwasher, #10	6	
3	120177	Lockwasher, 3/8	9	
4	300646	Screw, 1/4-20 x 3/4	10	
5	303952	Washer, 13/64	18	
6	306322	Screw, 5/16-18 x 7/8	4	
7	306325	Lockwasher, 5/16	26	
8	306375	Nut, 1/4-20	11	
9	306396	Lockwasher, 1/4	21	
10	306414	Screw, 3/8-16 x 1	6	
11	306416	Screw, 5/16-18	14	
12	306450	Screw, 5/16-18 x 3/4	2	
13	306487	Screw, 1/4-20 x 5/8	9	
14	306531	Nut, #10-24	6	
15	306562	Nut, 3/8-16	13	
16	306839	Nut, 5/8-18	3	
17	306932	Nut, 3/8-16	24	
18	306981	Washer, 3/8	15	
19	308090	Washer, 1/4	26	
20	548238	Rivet, 3/16	6	
21	800021	Screw, #10-32 x 1/2	6	
22	800177	Screw, 5/16-18 x 3/4	4	
23	800449	Nut, 1/4-20	4	
24	800696	Nut, 5/16-18	4	
25	810441	Grommet	1	
26	812208	Hinge	2	
27	825934	Reflector, red	2	
28	826294	Plate, mounting	1	
29	835213	Latch, slide	2	
30	840403	Bumper, rear	1	
31	840404	Bracket, rear bumper	2	
32	2702277.12	Cover	1	
33	843206	Door	2	
34	843218	Angle, platform support	2	
35	844853	Plate, skid	1	
36	844858	Bracket	2	
37	883883	Bumper	1	
38	884183	Box	1	
39	828378	Sealer, 50' (15 M)	As Req'd.	
40	815847	Hold down, battery	1	
41	812313	J-bolt	2	
42	2700615.7	Channel, LEFT	1	
43	2700616.7	Channel, RIGHT	1	


6.23 BODY FRONT

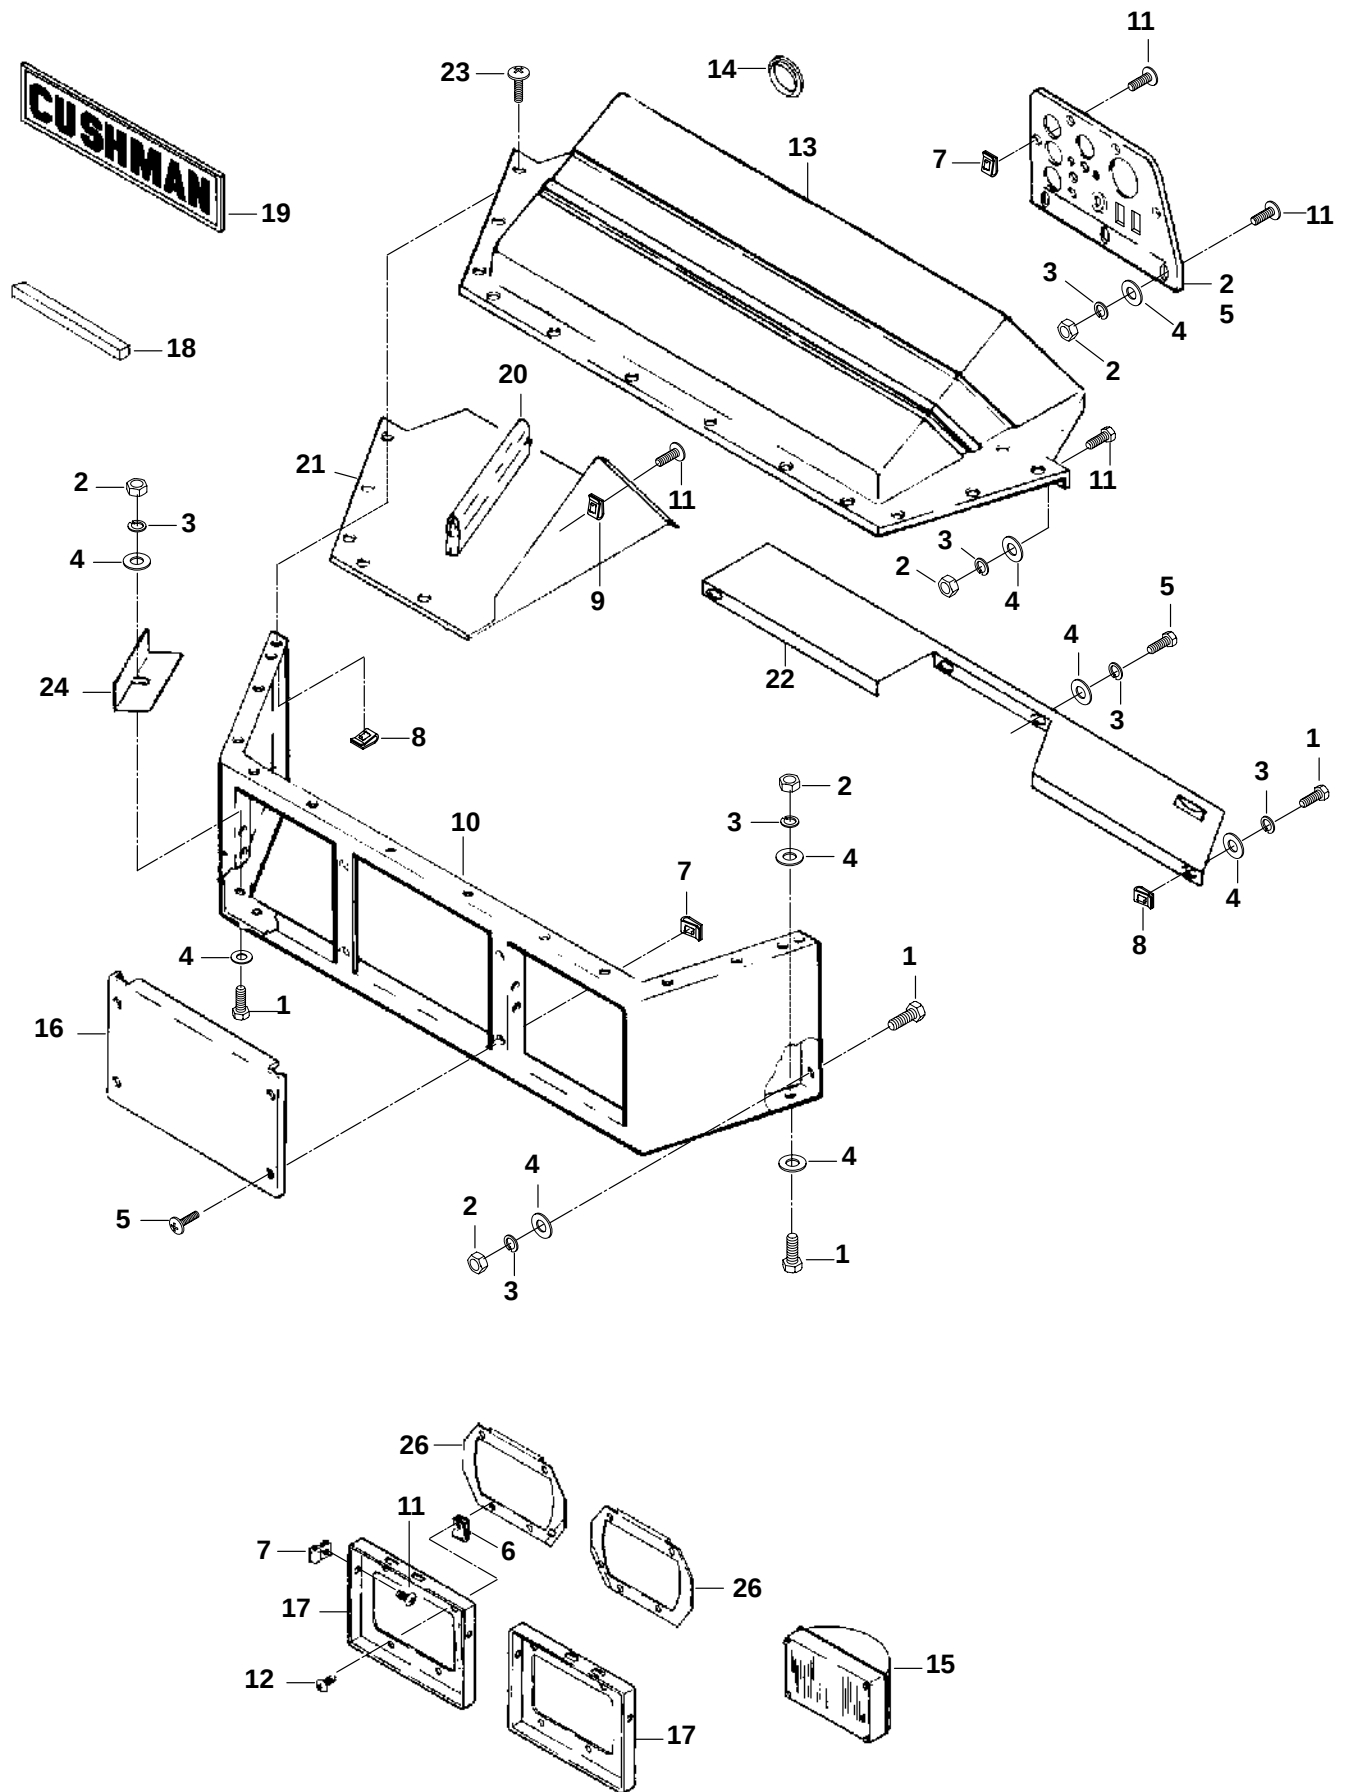

Ref. No.	Part No.	Description	No. Req'd	Notes
1	300646	Screw, 1/4-20 x 3/4"	11	
2	306375	Nut, 1/4-20	8	
3	306396	Lockwasher, 1/4"	13	
4	308090	Washer, 1/4"	21	
5	800026	Screw, P.T.H., 1/4-20 x 3/4"	2	
6	800169	Nut, speed, 1/4-20	8	
7	800279	Nut, speed, 1/4-20	20	
8	800449	Nut, speed, 1/4-20	14	
9	800495	Nut, speed, 1/4-20	3	
10	885833	Body, front	1	
11	800582	Screw, P.T.H., 1/4-20 x 3/4"	24	
12	800739	Screw, P.T.H., 1/4-20 x 1 1/2"	8	
13	889159	Panel, dash	1	
14	842863	Plug, hole, defroster	1	
15	837303	Headlight, rectangular	2	
16	843210	Panel, front body	1	
17	843209	Panel, headlight	2	
18	830355	Seal, rubber, 35' (10.7M)	As Req'd	
19	830790	Decal plate, CUSHMAN	1	
20	830908	Seal, push on, 25' (7.6M)	As Req'd	
21	843208	Panel, glove box	1	
22	843212	Brace, dash	1	
23	833830	Screw, shoulder, 1/4-20 x 3/4"	1	
24	833943	Bracket, clamping	2	
25	2701409.7	Panel, instrument	1	
26	843211	Panel, retainer	2	


- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.24 ENGINE COVER AND SEAT

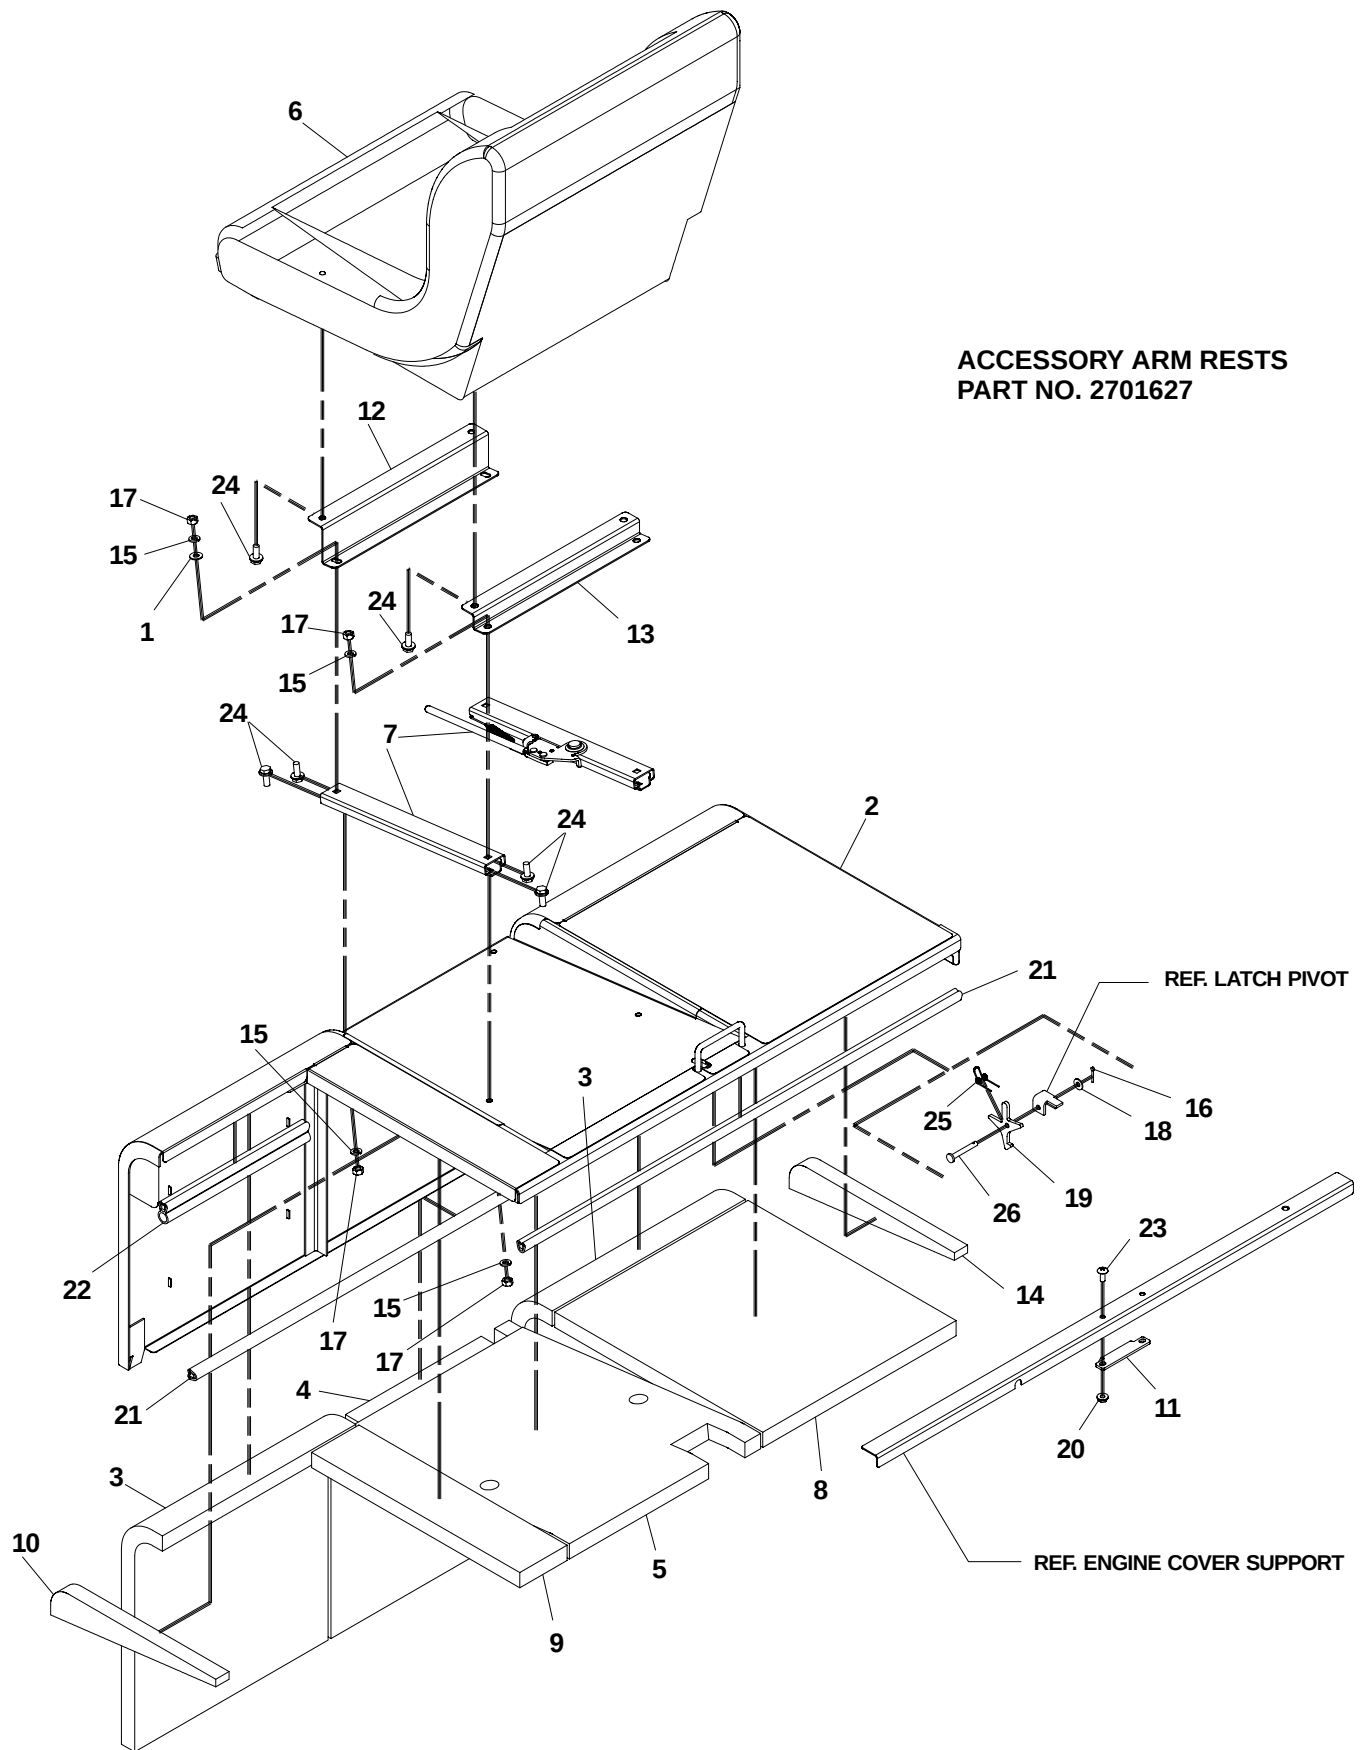

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16	2	
2	2701477.12	Cover, engine	1	
3	2701482	Foam, engine cover, front	2	
4	2701483	Foam, engine cover, center	1	
5	2701498	Foam, engine cover, top	1	
6	2701625	Seat, 18" cloth	1	
7	2701626	Slide, seat adjuster	1	
8	2701629	Foam, engine cover, top side	1	
9	2702003	Foam, engine cover	1	
10	2702004	Foam, engine cover	1	
11	2702199	Catch, latch	1	
12	2703282.12	Bracket, front seat	1	
13	2703283.12	Bracket, rear seat	1	
14	2703303	Foam, engine cover	1	
15	306325	Lockwasher, 5/16	8	
16	306328	Pin, cotter, 3/32 x 3/4	1	
17	306932	Nut, 5/16-18	8	
18	308090	Washer, 1/4	1	
19	523085	Bracket	1	
20	548910	Nut, 1/4-20	2	
21	831004	Weatherstrip, 25' (7.6M)	As Req'd.	
22	830908	Seal, push-on, 25' (7.6M)	As Req'd.	
23	800582	Screw, 1/4-20 x 3/4	2	
24	800794	Screw, 5/16-18 x 3/4	12	
25	816401	Spring, torsion	1	
26	830784	Pin, clevis, 1/4 x 1 7/8	1	
	2701627	Accessory Arm Rests Set	1	Not illustrated.


6.25 REAR SPRING

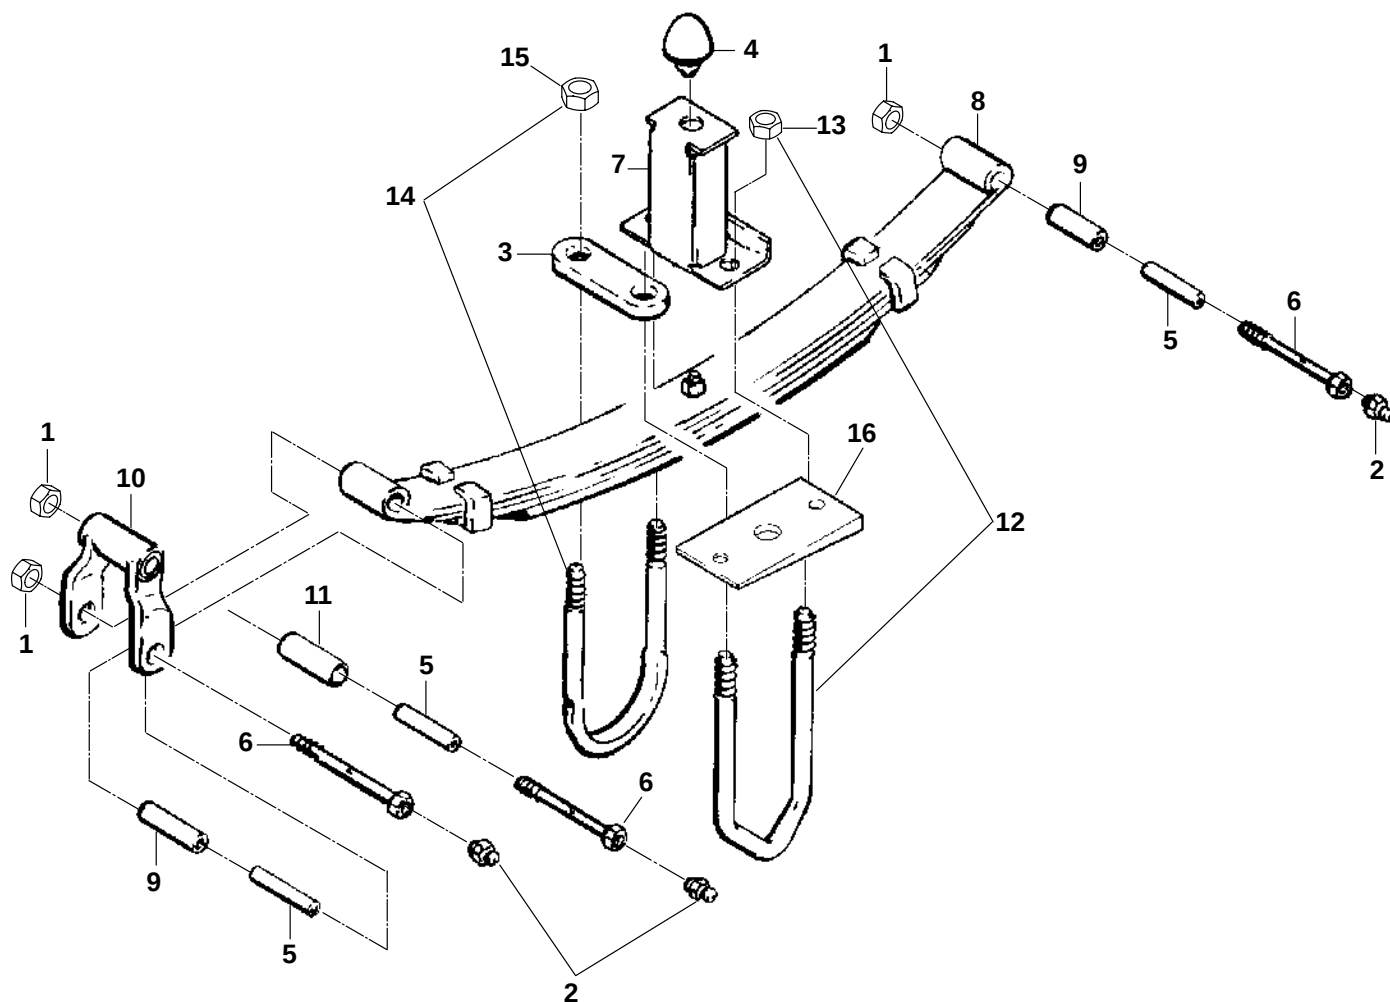

Ref. No.	Part No.	Description	No. Req'd	Notes
1	800294	Nut, lock, 7/16–14	6	
2	807439	Fitting, lubrication, 1/4–28	6	
3	812218	Plate	2	
4	813850	Bumper, rubber	2	
5	828946	Bushing	6	
6	828948	Screw, shackle, 7/16–14 x 3 1/4"	4	
7	834979	Upstop	2	
8	886015	Spring, rear	2	
9	821734	•Bushing	2	
10	886016	Shackle, spring	2	
11	805196	wBushing	2	
12	887187	U-bolt, 2" (51 mm) w/nuts	2	
13	548061	wNut, lock, 7/16–20	2	
14	887188	U-bolt, 2 1/2" (64 mm) w/nuts	2	
15	548061	•Nut, lock, 7/16–20	2	
16	838409	Spacer, leaf spring	2	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.


6.26 FRONT FORK

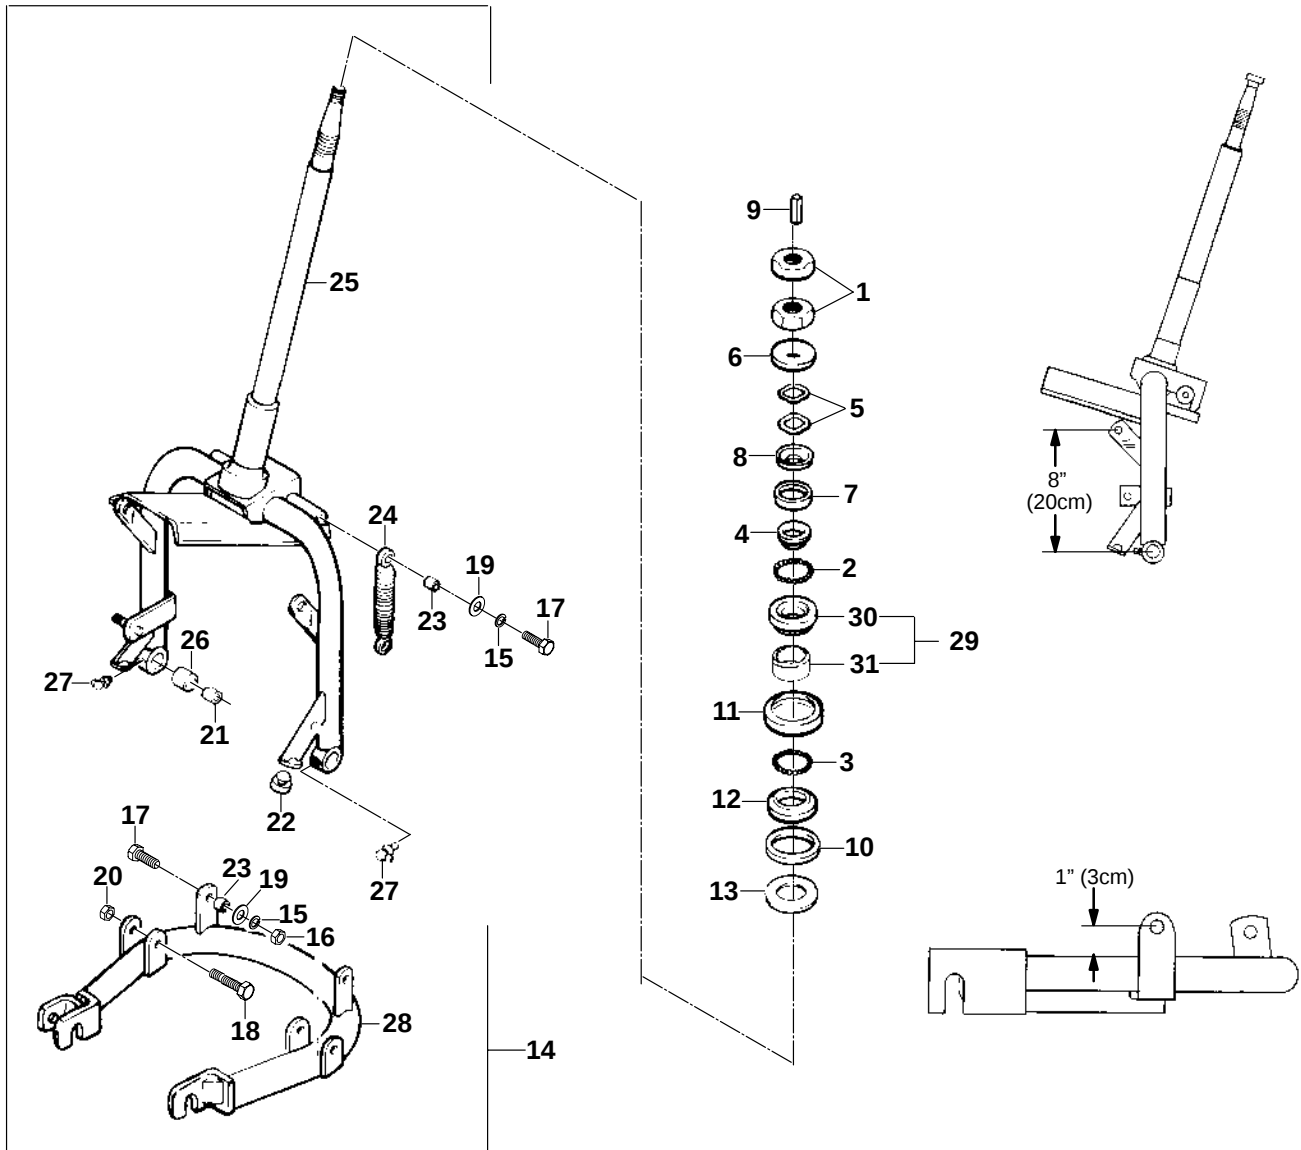

Ref. No.	Part No.	Description	No. Req'd	Notes
1	305134	Nut, jam, 7/8–14	2	
2	800128	Ball, bearing, 3/16" (5mm)	20	
3	800130	Ball, bearing, 1/4" (6mm)	28	
4	808076	Cone, upper bearing	1	
5	809221	Washer, wave	2	
6	809255	Cover, dust shield	1	
7	812167	Seal, dust	1	
8	814961	Washer	1	
9	816659	Key, 5/32" x 5/32" x 1 1/4"	1	
10	825679	Shield, felt dust	1	
11	825681	Cup, bearing	1	
12	825682	Cone, bearing	1	
13	825683	Washer, front fork	1	
14	891767	Fork, complete	1	
15	120177	•Lockwasher, 3/8"	4	
16	306562	•Nut, 3/8–16	2	
17	306835	•Screw, 3/8–16 x 1 1/4"	4	
18	311396	•Screw, 7/16–14 x 2 1/4"	2	
19	604174	•Washer, 3/8"	4	
20	800293	•Nut, lock, 7/16–14	2	
21	808969	•Bushing	2	
22	810149	•Bumper, rubber	2	
23	816697	•Bushing	4	
24	825403	•Spring	2	
25	891764	•Tube, fork	1	
26	805189	••Bushing	2	
27	807442	••Fitting, lubrication, 1/4–28	2	
28	891765	•Tube, axle mounting	1	
29	886600	Cup, bearing, complete	1	
30	812098	•Cup, bearing	1	
31	829285	•Bushing, upper fork	1	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.27 STEERING GEAR, STEERING WHEEL & HORN

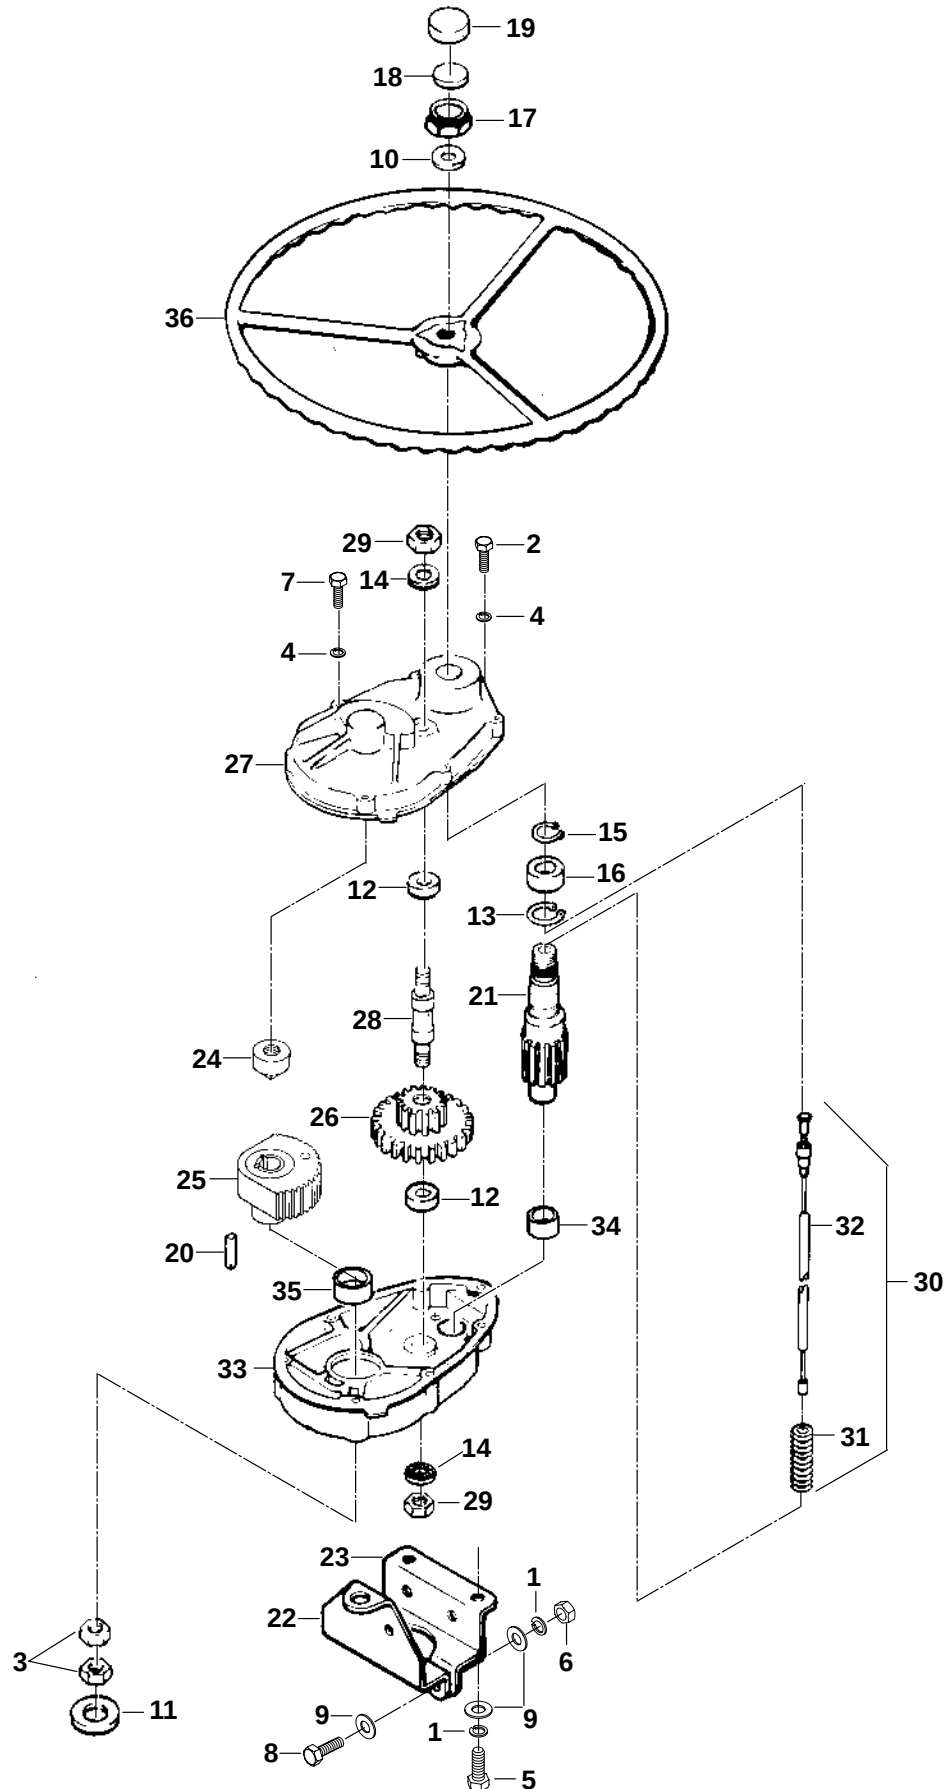


STEERING GEAR, STEERING WHEEL & HORN 6.27

Ref. No.	Part No.	Description	No. Req'd	Notes
1	120177	Lockwasher, 3/8"	5	
2	302030	Screw, 1/4–20 x 1 1/4"	3	
3	305134	Nut, jam, 7/8–14	2	
4	306396	Lockwasher, 1/4"	7	
5	306414	Screw, 3/8–16 x 1"	3	
6	306562	Nut, 3/8–16	2	
7	306832	Screw, 1/4–20 x 2"	4	
8	306835	Screw, 3/8–16 x 1 1/4"	2	
9	306981	Washer, 3/8"	7	
10	311496	Washer, 11/16"	1	
11	809255	Cover, dust shield	1	
12	816446	Washer, 7/16"	2	
13	816447	Ring, retaining	1	
14	816449	Washer, knurled, 3/8"	2	
15	816455	Ring, retaining	1	
16	816456	Bearing, ball	1	
17	816652	Nut, steering wheel	1	
18	816653	Plate, horn button contact	1	
19	816654	Button, horn	1	
20	816659	Key, 5/32" x 5/32" x 1 1/4"	1	
21	816660	Shaft, pinion gear	1	
22	816674	Support, steering housing, front	1	
23	816675	Support, steering housing, rear	1	
24	825672	Nut, special, 1/2–20	1	
25	830167	Gear, steering, driven	1	
26	830168	Gear, steering, idler cluster	1	
27	832555	Housing, upper, steering gear	1	
28	883317	Bolt, idler adjusting	1	
29	800612	•Nut, crownlock, 7/16–20	2	
30	884750	Wire and spring set	1	
31	826491	•Spring	1	
32	880365	•Wire and connector	1	
33	886883	Housing, lower steering gear	1	
34	830369	•Bushing	1	
35	830370	•Bushing	1	
36	892807	Wheel, steering	1	


- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.28 THROTTLE PEDAL

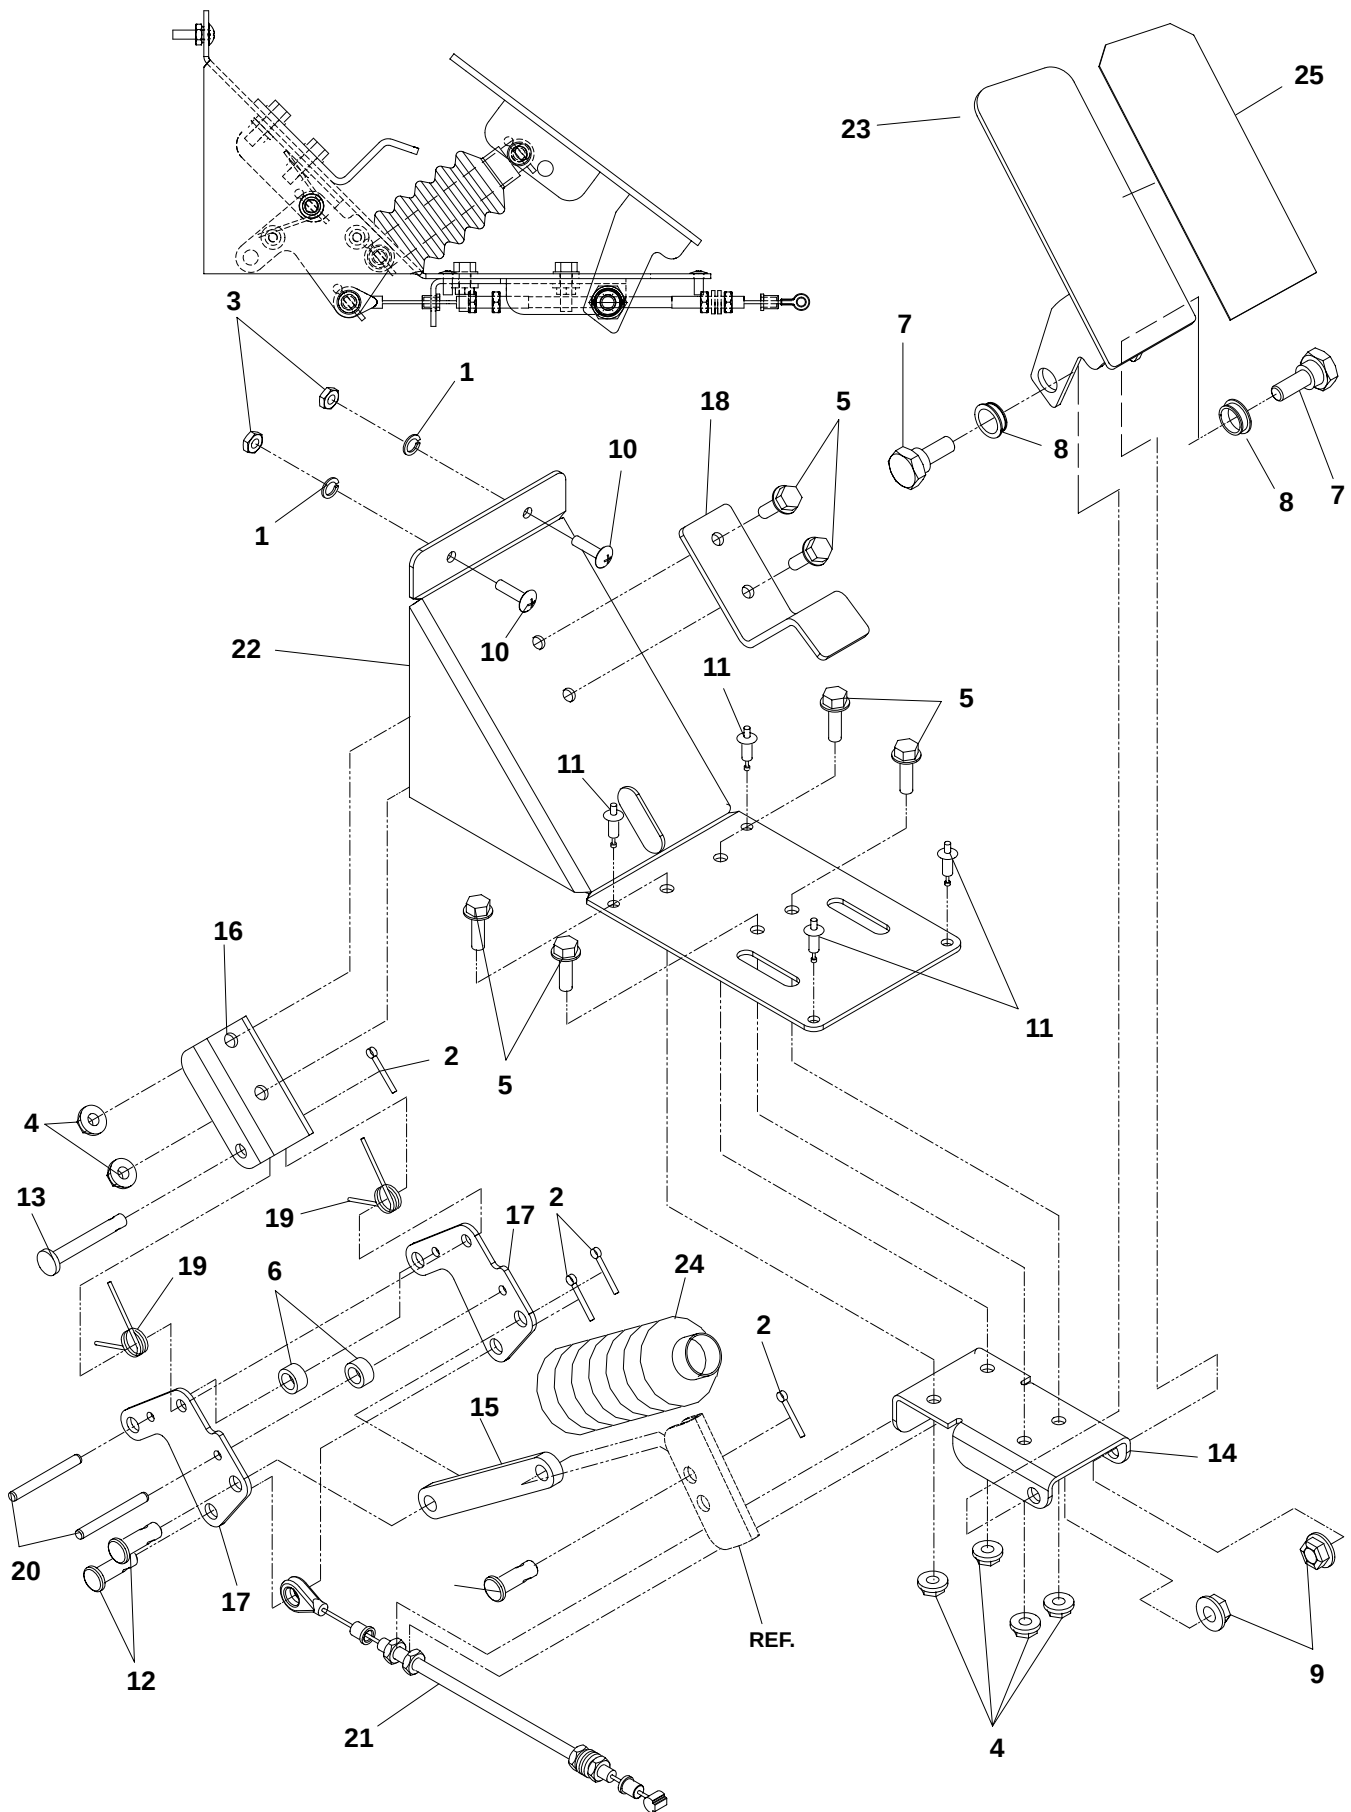

Ref. No.	Part No.	Description	No. Req'd	Notes
1	120052	Lockwasher, #10	2	
2	306328	Pin, cotter, 3/32 x 3/4	4	
3	306531	Nut, #10-24	2	
4	450452	Nut, M6-1.00	6	
5	452378	Bolt, M6-1.00 x 20	6	
6	515268	Bushing	2	
7	524633	Screw, 5/16-18 x 1	2	
8	524643	Bearing, split	2	
9	548911	Nut, 5/16-18	2	
10	800296	Screw, #10-24 x 3/4	2	
11	800475	Rivet, 13/64 x 3/8	4	
12	806714	Pin, clevis, 5/16 x 15/16	3	
13	830784	Pin, clevis, 1/4 x 1 7/8	1	
14	843360	Channel, mount	1	
15	843561	Link, throttle	1	
16	843562	Mount, channel	1	
17	843563	Plate, pivot	2	
18	2701115.7	Bracket, stop	1	
19	844223	Spring, torsion	2	
20	844224	Pin, roll, 3/16 x 1 3/4	2	
21	2701480	Cable, throttle	1	
22	844890	Panel, floor access	1	
23	894159	Pedal	1	
24	831909	Boot	1	
25	2701326	Tread, pedal	1	


6.29 SHIFTER & SHIFT CABLE

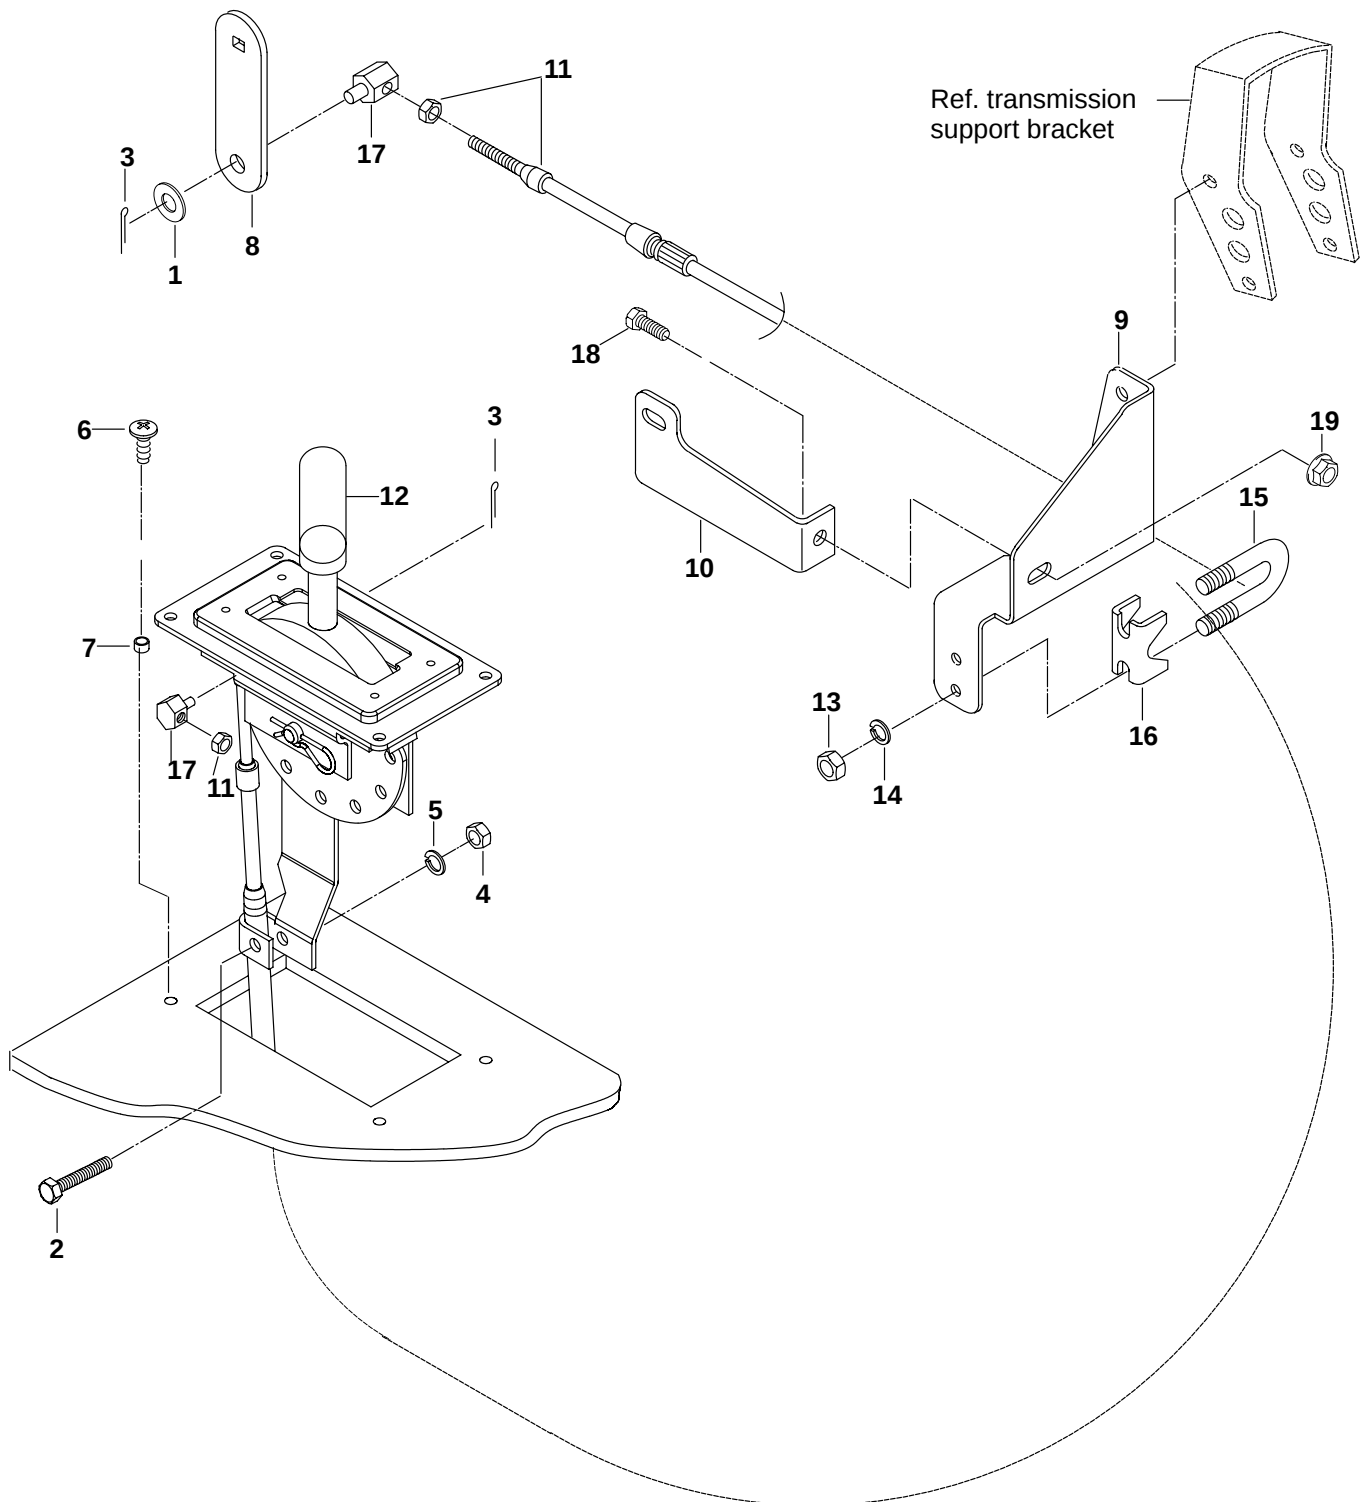

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16"	1	
2	302288	Screw, 1/4-20 x 1"	1	
3	306372	Pin, cotter, 3/32" x 1/2"	2	
4	306375	Nut, 1/4-20	1	
5	306396	Lockwasher, 1/4"	1	
6	800146	Screw, tapping, #10-16 x 3/4"	4	
7	817019	Bushing	4	
8	842740	Lever, shifter	1	
9	842784	Bracket, shift cable	1	
10	842849	Arm, cable bracket	1	
11	842854	Cable, shifter	1	
12	843251	Shifter, complete	1	
13	306375	•Nut, 1/4-20	2	
14	306396	•Lockwasher, 1/4"	2	
15	◇	•U-bolt, cable clamp	1	Not offered separately.
16	◇	•Bracket, cable clamp	1	Not offered separately.
17	◇	•Pin, rod connecting	2	Not offered separately.
18	800710	Screw, 5/16-18 x 1"	1	
19	800697	Nut, crownlock, 5/16-18	1	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.30 REAR BRAKES, HUB & WHEEL CYLINDER

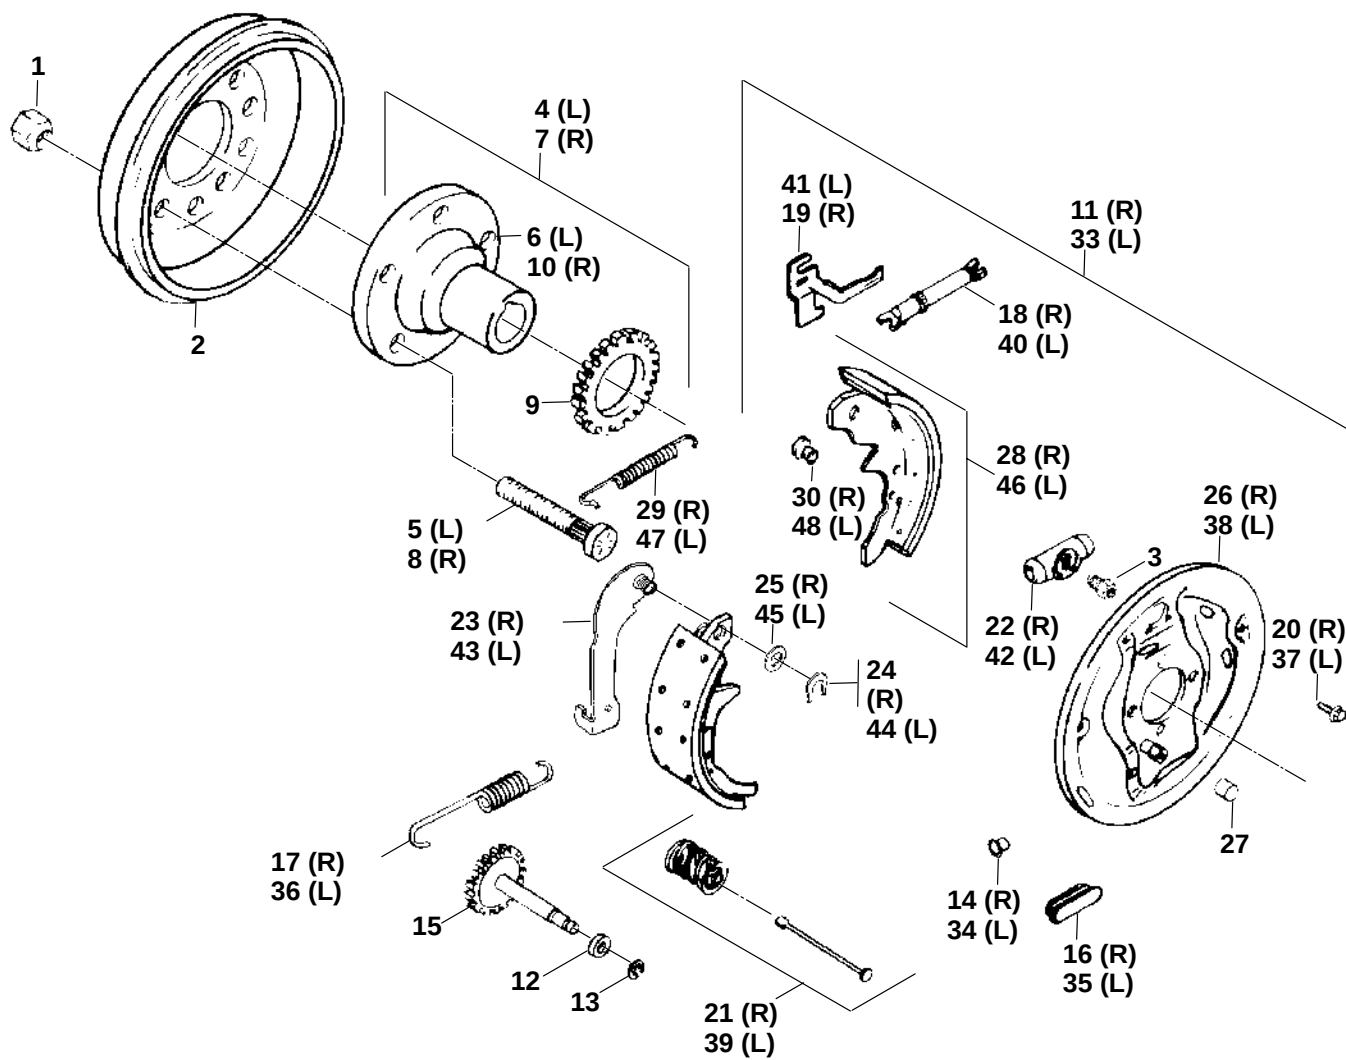


REAR BRAKES, HUB & WHEEL CYLINDER 6.30

Ref. No.	Part No.	Description	No. Req'd	Notes
1	800573	Nut, wheel retaining, 1/2–20	10	
2	833993	Drum, brake	2	
3	834161	Adapter, brake line	2	
4	888793	Hub, LEFT	1	
5	523474	•Screw, 1/2–20 x 1 13/16" grade 8	5	
6	833891	•Hub	1	
7	888861	Hub, RIGHT	1	
8	523474	•Screw, 1/2–20 x 1 13/16" grade 8	5	
9	833879	•Gear, speedometer drive	1	
10	833891	•Hub	1	
11	891811	Shoe w/dust shield, complete, RIGHT	1	
12	809018	•Bushing, speedometer	1	
13	809257	•Ring, retainer	1	
14	811650	•Plug, hole	1	
15	821153	•Gear, speedometer, 34 tooth	1	
16	824833	•Cover, adjustment hole	2	
17	833850	•Spring, retainer	1	
18	843025	••Kit, brake lever and adjuster	1	
19	◇	•Lever, brake, RIGHT	1	Not offered separately.
20	833911	•Bolt, M6	2	
21	833916	•Retainer, shoe	2	
22	892471	•Cylinder, wheel, 13/16" (21mm)	1	
23	838403	•Lever, park brake, RIGHT	1	
24	838404	•Retainer, park brake lever pin	1	
25	838405	•Washer, spring	1	
26	888777	•Dust, shield, RIGHT	1	
27	824925	••Cap	1	
28	889350	•Brake kit, two brake shoes	1	
29	833918	••Spring, retainer	1	
30	834723	••Pin, brake	1	
31	838355	*••Guide, brake spring	1	
32	◇	••Shoe, brake	2	Not offered separately.
33	891812	Shoe w/dust shield, complete, LEFT	1	
34	811650	•Plug, hole	1	
35	824833	•Cover, adjustment hole	2	
36	833850	•Spring, retainer	2	
37	833911	•Bolt, M6	2	
38	833912	•Dust shield, LEFT	1	
39	833916	•Retainer, shoe	2	
40	843026	•Kit, brake lever and adjuster	1	
41	◇	••Lever, brake, LEFT	1	Not offered separately.
42	892471	•Cylinder, wheel, 13/16" (21mm)	1	
43	838402	•Lever, park brake, LEFT	1	
44	838404	•Retainer, park brake lever pin	1	
45	838405	•Washer, spring	1	
46	889350	•Brake kit, two brake shoes	1	
47	833918	••Spring, retainer	1	
48	834723	••Pin, brake	1	
49	838355	*••Guide, spring	1	
50	◇	••Shoe, brake	2	Not offered separately.
	889930	Kit, wheel cylinder	As Req'd	Not Illustrated.
	884823	Cable, speedometer	1	Not Illustrated.

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.


6.31 FRONT BRAKES, HUB & AXLE

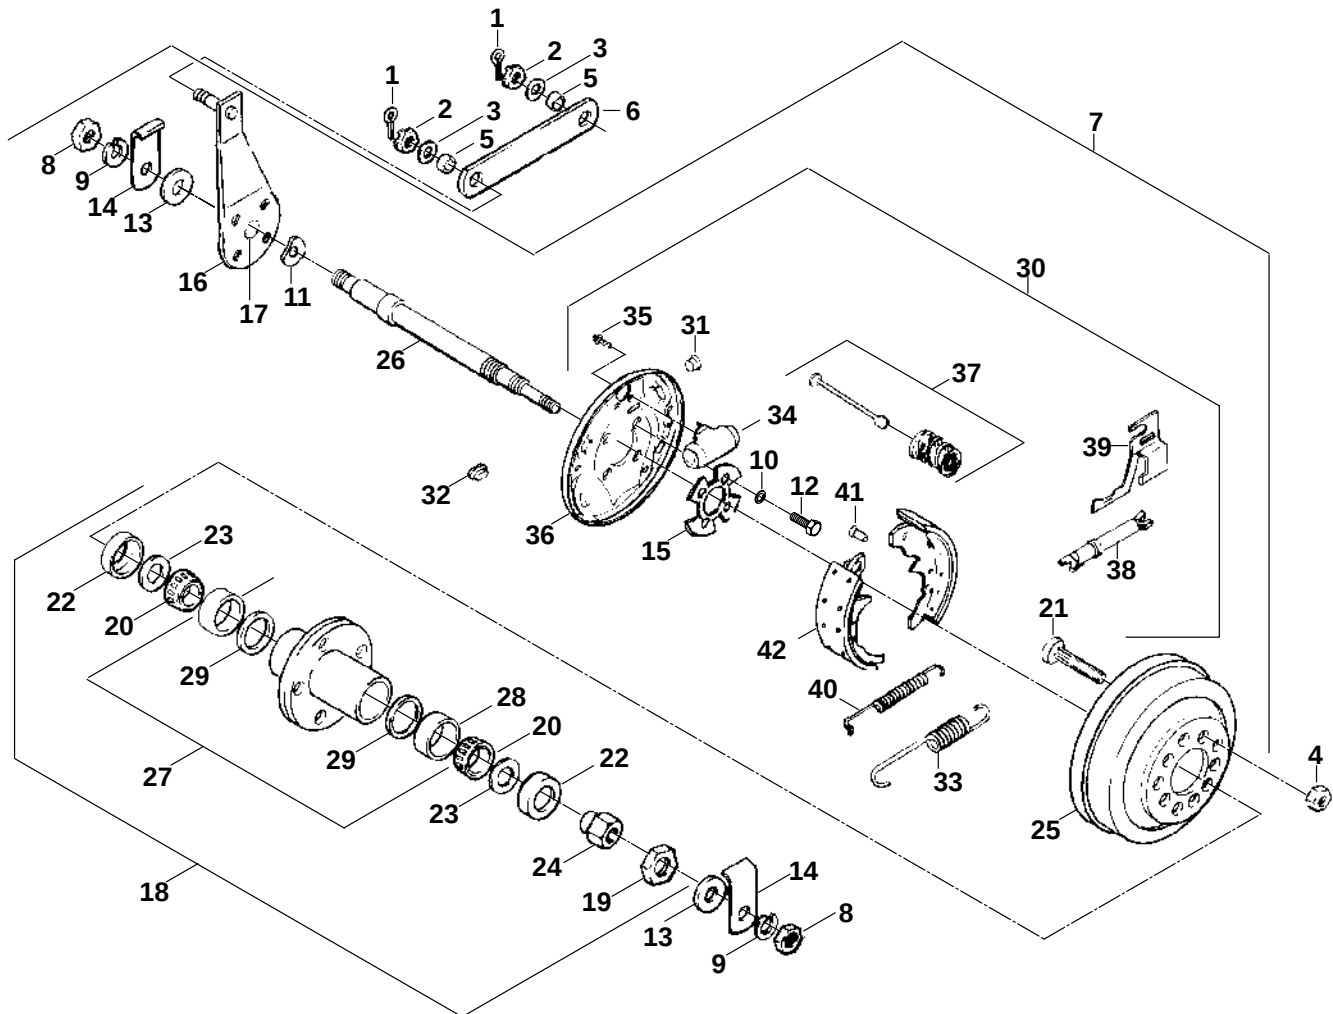

Ref. No.	Part No.	Description	No. Req'd	Notes
1	306328	Pin, cotter, 3/32" x 3/4"	2	
2	306825	Nut, castle, 7/16–20	2	
3	306982	Washer, 7/16	2	
4	800573	Nut, wheel retaining, 1/2–20	5	
5	825404	Bushing	2	
6	825405	Link, brake anchor	1	
7	891068	Hub, axle, shield and drum	1	
8	304104	•Nut, jam, 5/8–18	2	
9	306494	•Lockwasher, 5/8	2	
10	548183	•Lockwasher, 5/16	4	
11	800422	•Washer, spring	1	
12	800600	•Screw, 5/16–18 x 5/8, grade 8	4	
13	836674	•Washer, thrust, 9/16	2	
14	813717	•Lockwasher	2	
15	835072	•Plate, lock	1	
16	2702863	•Arm, brake	1	
17	824060	•Bushing	1	
18	888610	•Hub and drum	1	
19	307665	••Nut, jam, 3/4–16	1	
20	385174	••Cone, tapered roller bearing	2	
21	523474	••Screw, grade 8, 1/2–20 x 1 13/16	5	
22	807630	••Seal	2	
23	809229	••Slinger, oil	2	
24	831199	••Nut, bearing adjusting	1	
25	833993	••Drum, brake	1	
26	884022	••Axle	1	
27	888524	••Hub	1	
28	808088	•••Cup, tapered roller bearing	2	
29	809268	•••Ring, bearing backing	2	
30	891046	•Cover & Shoe assembly	1	
31	811650	••Plug	1	
32	824833	••Cover, adjustment hole	2	
33	833850	••Spring, retainer	1	
34	891058	••Cylinder, wheel, 1" (25 mm)	1	
35	833911	••Screw, M6	2	
36	833912	••Dust shield	1	
37	833916	••Retainer, shoe	2	
38	843026	••Kit, brake lever and adjuster	1	
39	◇	•••Lever, brake	1	Not Offered Separately.
40	833918	•••Spring, retainer	1	
41	834723	•••Pin, brake	1	
	838355	•••Guide, brake spring	1	Not illustrated.
42	894899	•••Shoe set (1 pair w/pin)	1	


• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.32 HYDRAULIC BRAKE SYSTEM

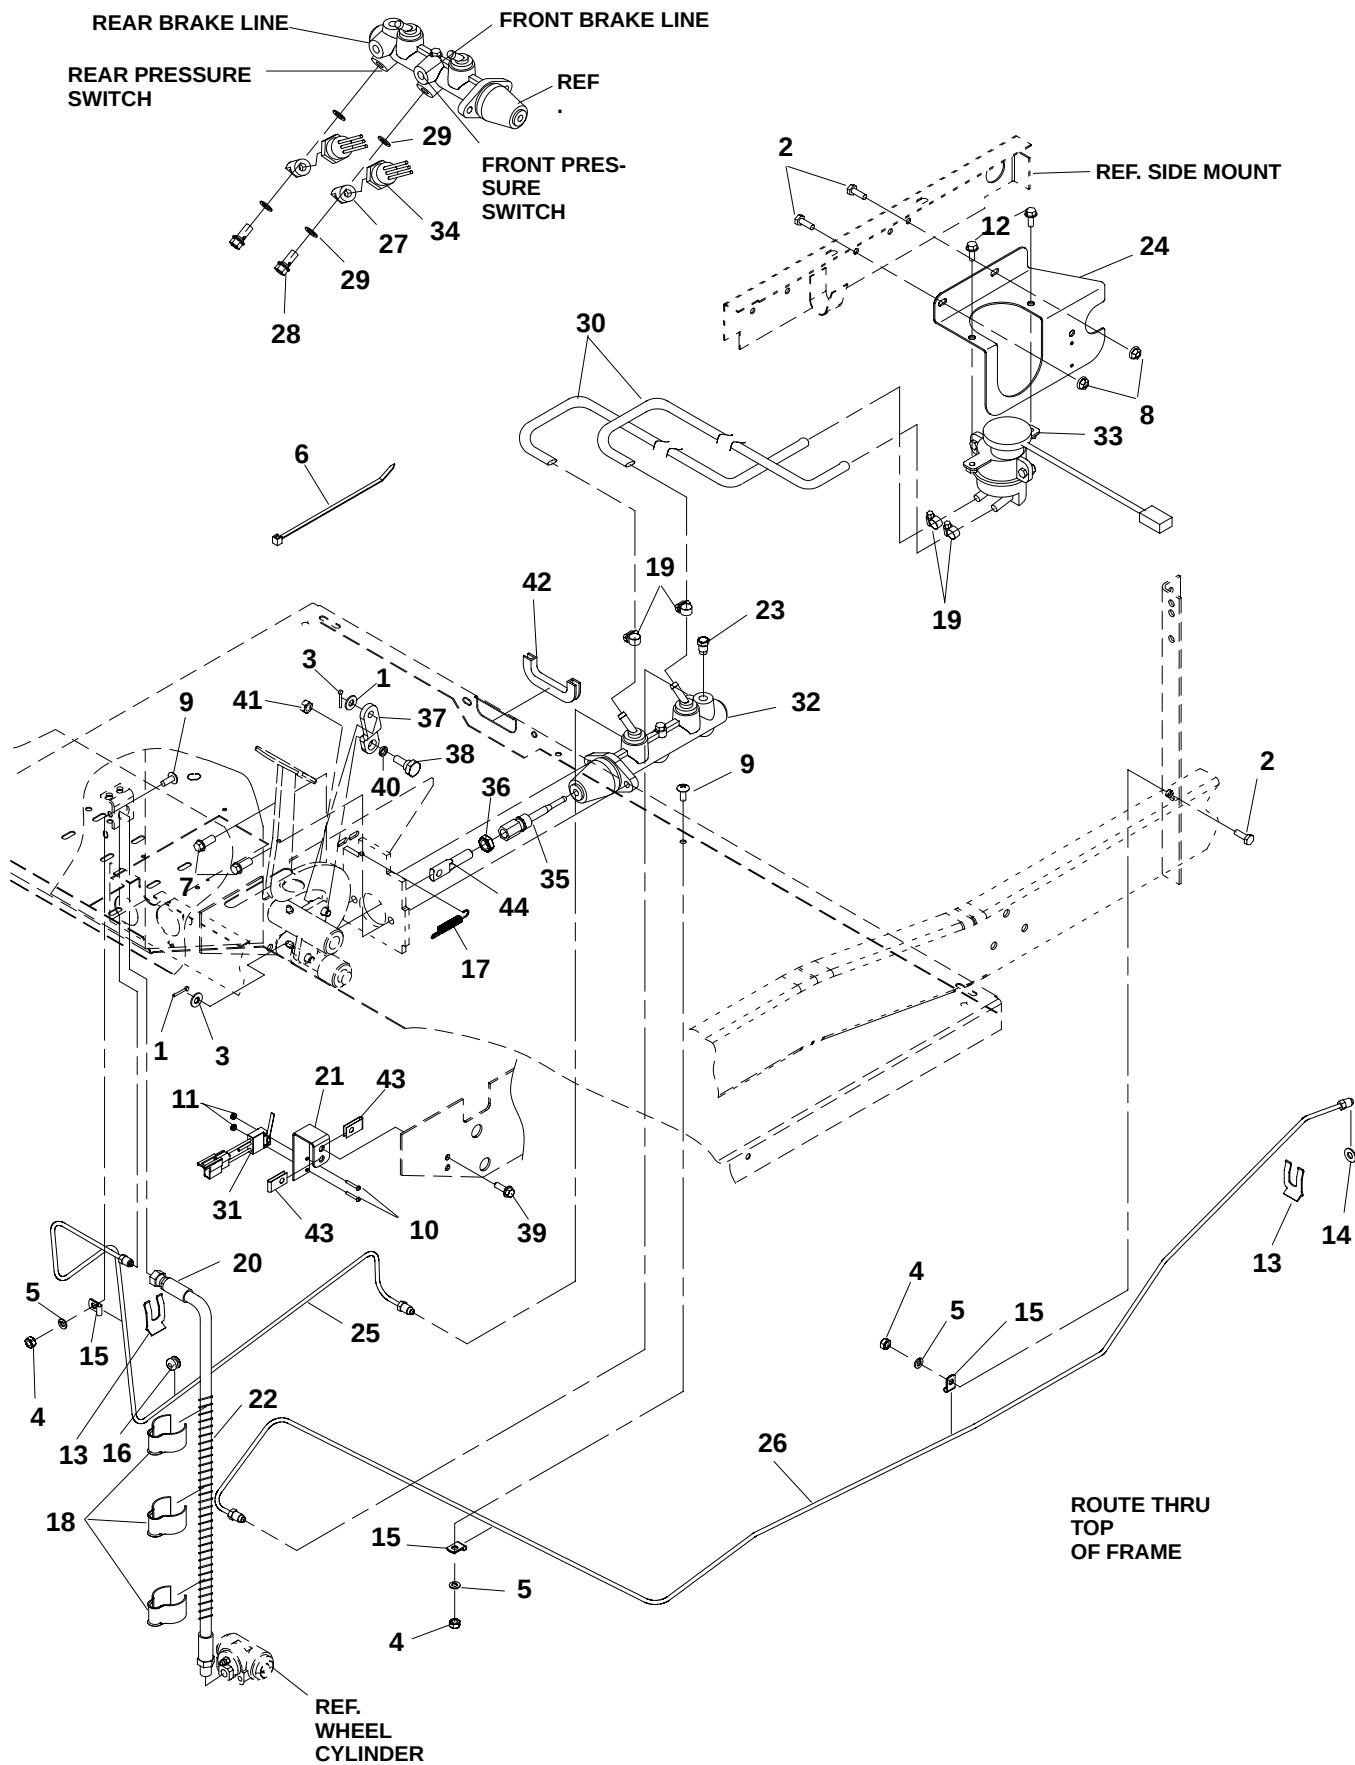

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16	2	
2	300646	Screw, 1/4-20 x 3/4	3	
3	306328	Pin, cotter, 3/32 x 3/4	2	
4	306375	Nut, 1/4-20	3	
5	306396	Lockwasher, 1/4	3	
6	320107	Tie, cable, 7.5" (191 mm)	1	
7	800548	Screw, M8-1.25 x 20	2	
8	548910	Nut, 1/4-20	2	
9	800277	Screw, 1/4-20 x 5/8	2	
10	800439	Screw, #4-40 x 3/4	2	
11	800587	Nut, #4-40	2	
12	800934	Screw, M6-1.00 x 16	2	
13	809137	Clip	2	
14	809196	Washer, 5/8	1	
15	812445	Clamp	3	
16	817307	Grommet	1	
17	842598	Spring, extension	1	
18	825477	Clip	3	
19	830930	Clamp, hose	4	
20	834888	Hose, hydraulic brake	1	
21	2701509.7	Bracket, brake switch mount	1	
22	842140	Protector, brake hose	2	
23	843858	Plug, M10	1	
24	844167	Bracket, reservoir mount	1	
25	845066	Tube, front brake	1	
26	845067	Tube, rear brake	1	
27	845079	Fitting	2	
28	845080	Bolt, inlet M10	2	
29	845081	Gasket, copper	4	
30	845380	Hose, 5/16, 6' (1.8 M)	As Required	
31	892766	Switch, brake	1	
32	895113	Cylinder, brake master	1	
33	894456	Reservoir, brake fluid	1	
34	894847	Switch, pressure	2	
35	823752	Rod	1	
36	2702100	Nut, 7/16-20, jam	1	
37	2701508	Link, connector	1	
38	524633	Screw, 5/16-18 x 1, shoulder	1	
39	548045	Screw, 1/4-20 x 3/4	2	
40	548183	Lockwasher, 5/16	1	
41	548911	Nut, 5/16-18	1	
42	821893	Trim, push on, 12' (3.7 M)	As Req'd	
43	800279	Nut, 1/4-20	2	
44	2702082	Rod, control	1	


6.33 EXHAUST SYSTEM

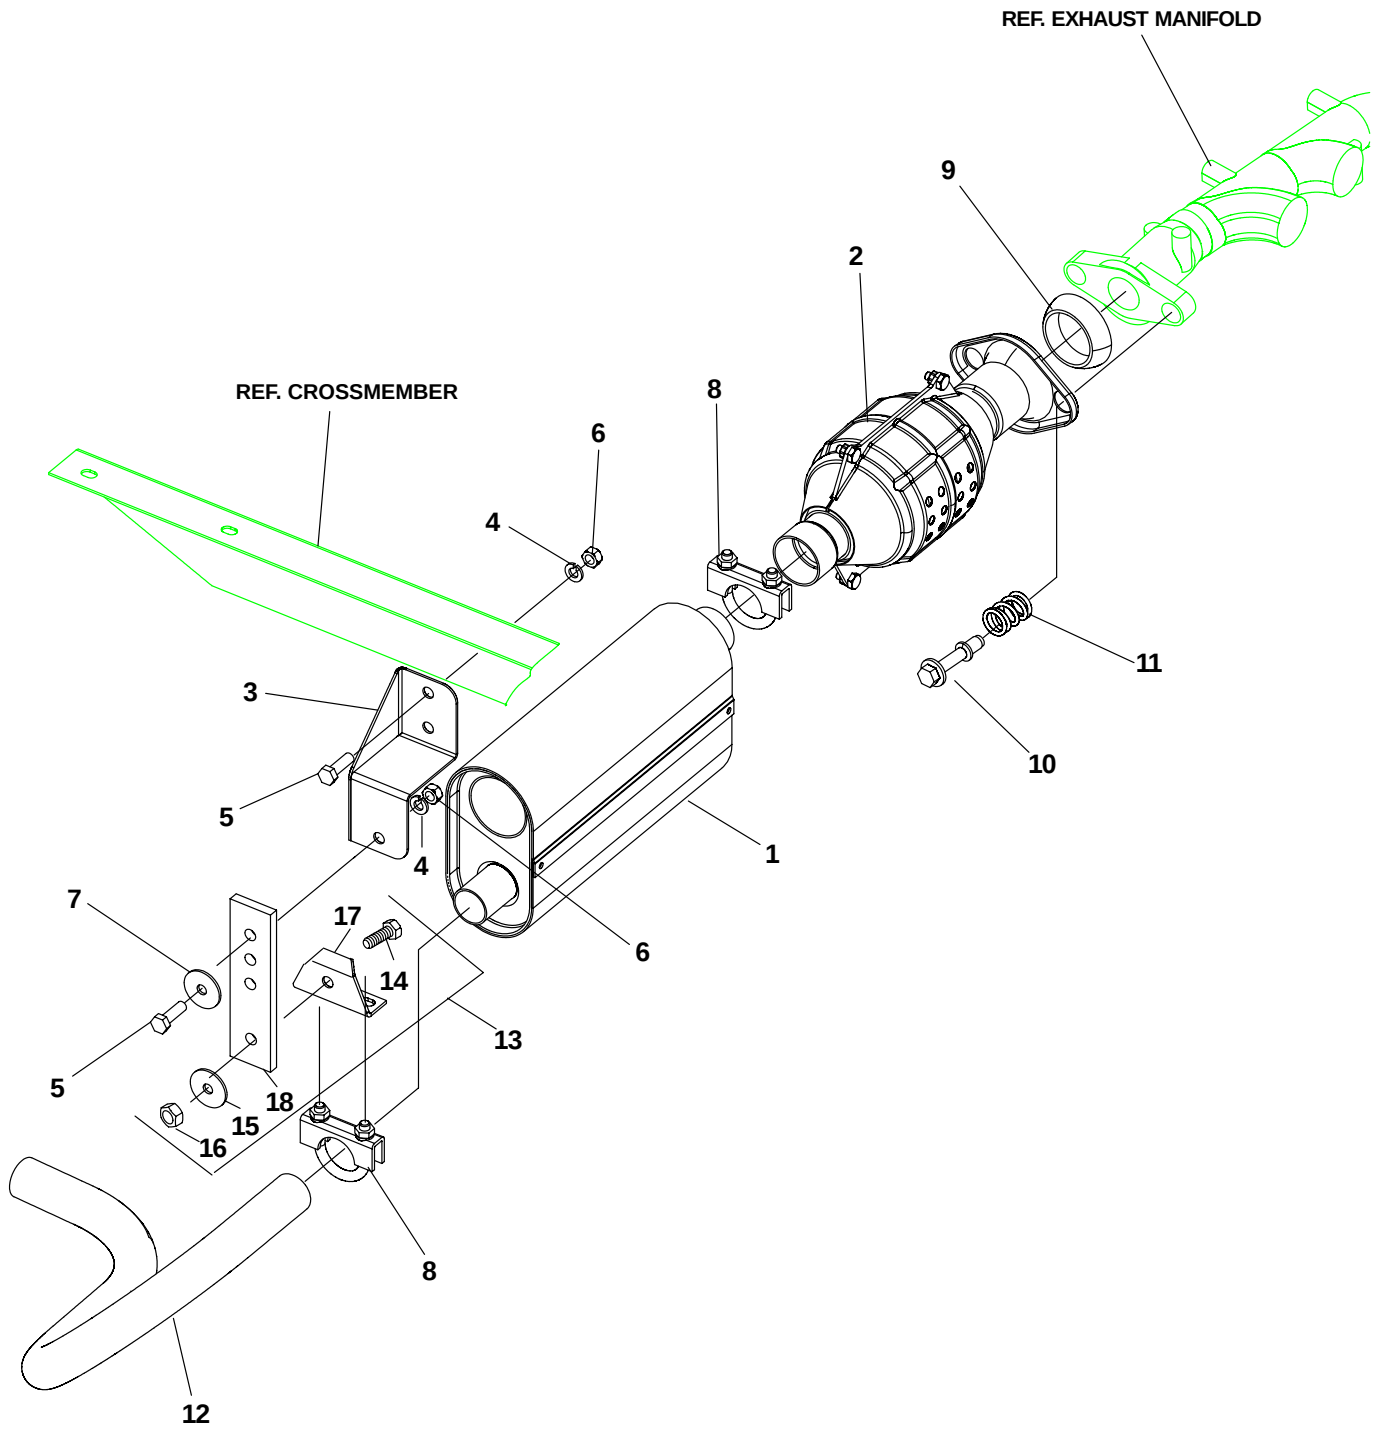

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701045.8	Muffler	1	
2	2701089	Converter, catalytic	1	
3	2702374.7	Bracket, muffler hanger	1	
4	306325	Lockwasher, 5/16	3	
5	306416	Screw, 5/16–18 x 1	3	
6	306932	Nut, 5/16–18	3	
7	548159	Washer, 5/16	1	
8	841982	Clamp, tubing	2	
9	14183–82050	Seal ring, muffler flange	1	
10	09119–10039	Bolt, muffler flange	2	
11	14492–82001	Spring, muffler flange	2	
12	842884	Tailpipe	1	
13	887175	Hanger assembly, muffler	1	
14	306322	•Screw, 5/16–18 x 7/8	1	
15	548159	•Washer, 5/16	1	
16	800290	•Nut, 5/16	1	
17	831603	•Bracket	1	
18	831604	•Strap, tailpipe hanger	1	


- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

82

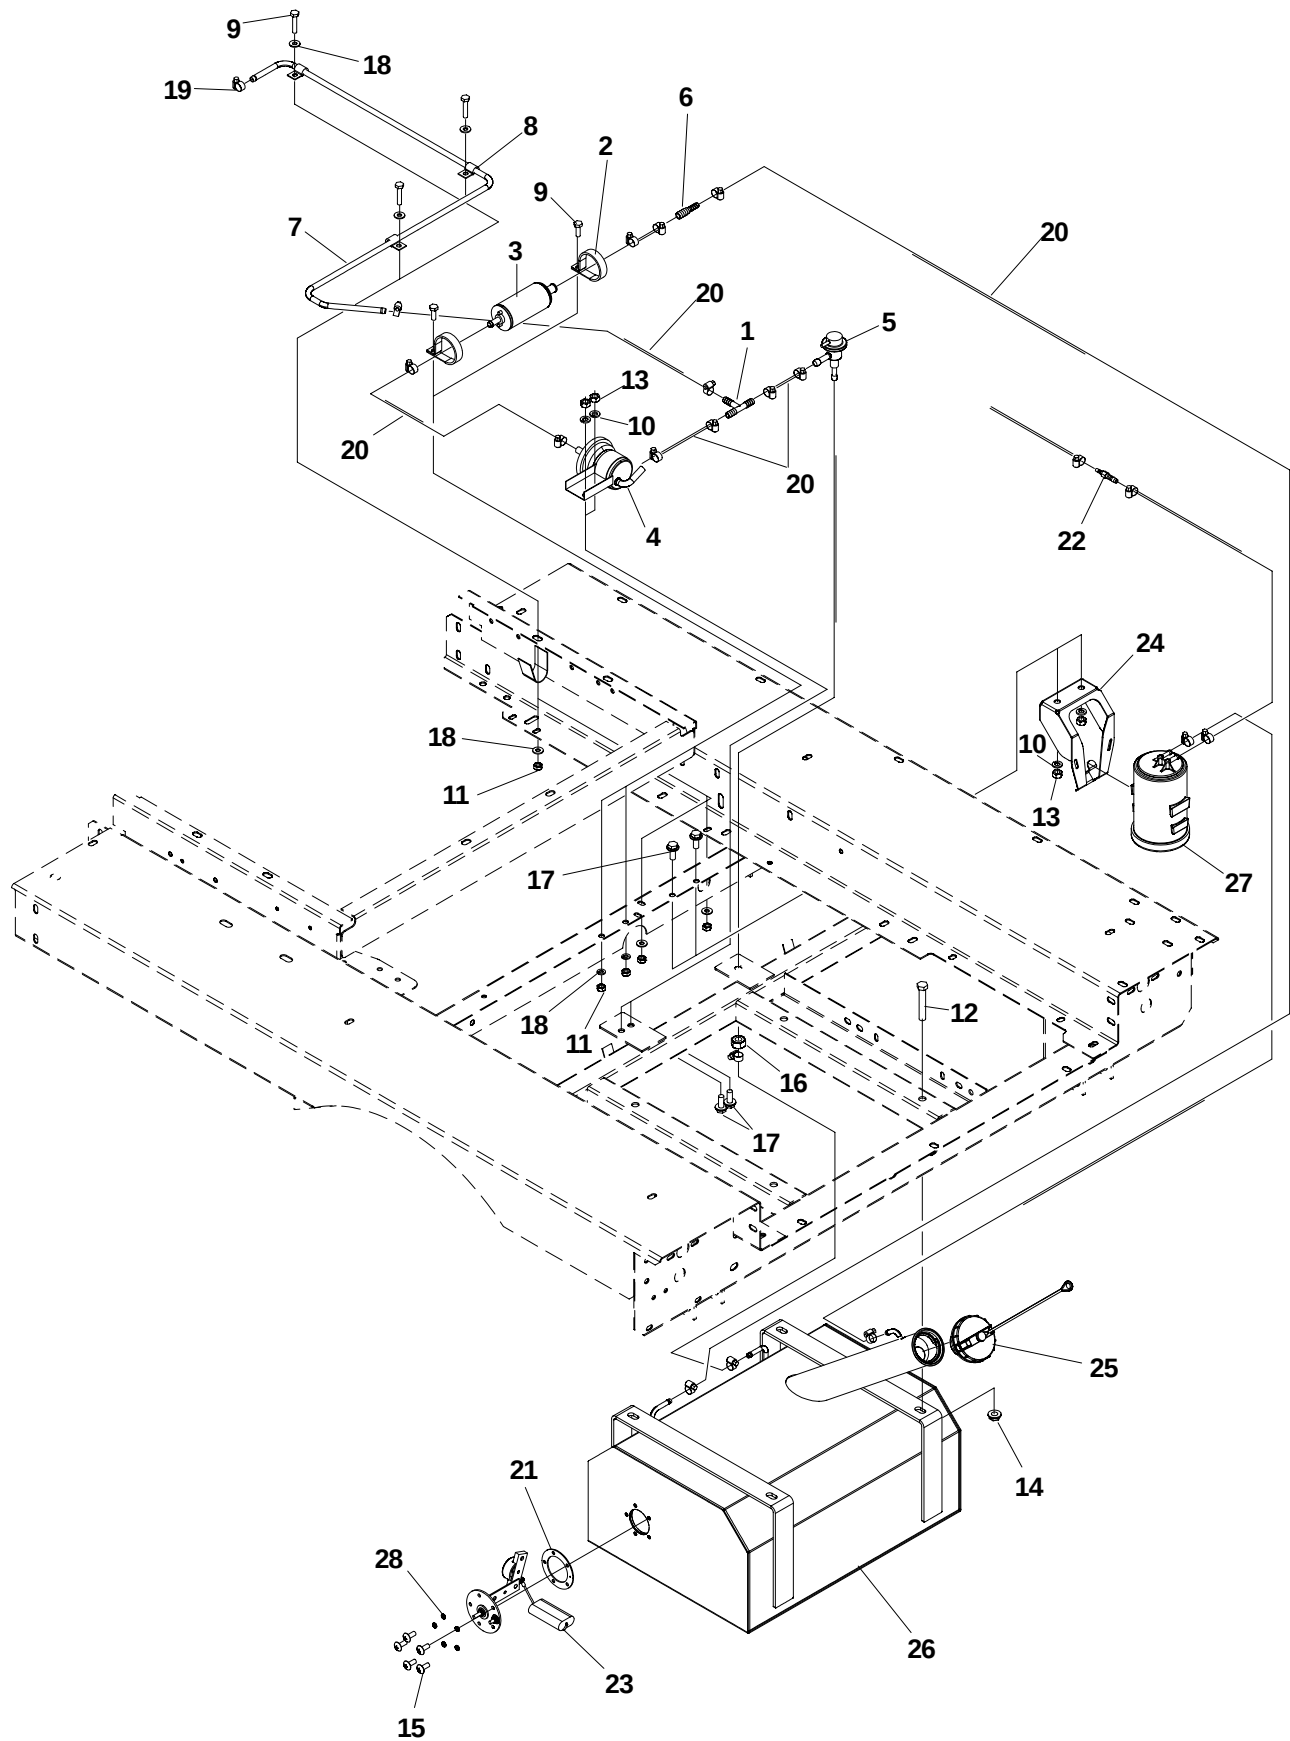

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2700161	Connector, tee 5/16"	1	Not illustrated.
2	2700166	Clamp, fuel pump	2	
3	2701897	Pump, fuel	1	
4	2701898	Filter, fuel	1	
5	2701899	Regulator	1	
6	2700178	Connector, union	1	
7	2702303	Tube, fuel	1	
8	2702388	Half clamp	3	
9	300646	Screw, 1/4–20 x 3/4	5	
10	306325	Lockwasher, 5/16	4	
11	306375	Nut, 1/4–20	5	
12	306836	Screw, 3/8–16 x 2 1/4	4	
13	306932	Nut, 5/16–18	4	
	320107	Tie, cable, 7 1/2" (191 mm)	5	
14	548804	Nut, 3/8–16	4	
15	548900	Screw, #10–24 x 1/2	5	
16	800875	Nut, 12–1.25	1	
17	800974	Screw, #10 x 1, tapping	4	
18	816307	Washer, 9/32	8	
19	825624	Clamp, hose	20	
20	826590	Hose, fuel, 25' (7.6 M)	As Req'd.	
21	829954	Gasket	1	
22	834036	Connector, hose	1	
23	834582	Sender, fuel level	1	
24	844637.7	Bracket, canister	1	
25	844641	Cap, fuel	1	
26	844654.7	Tank, fuel	1	
27	844670	Canister, carbon	1	
28	844748	O-ring	5	


6.35 DIFFERENTIAL

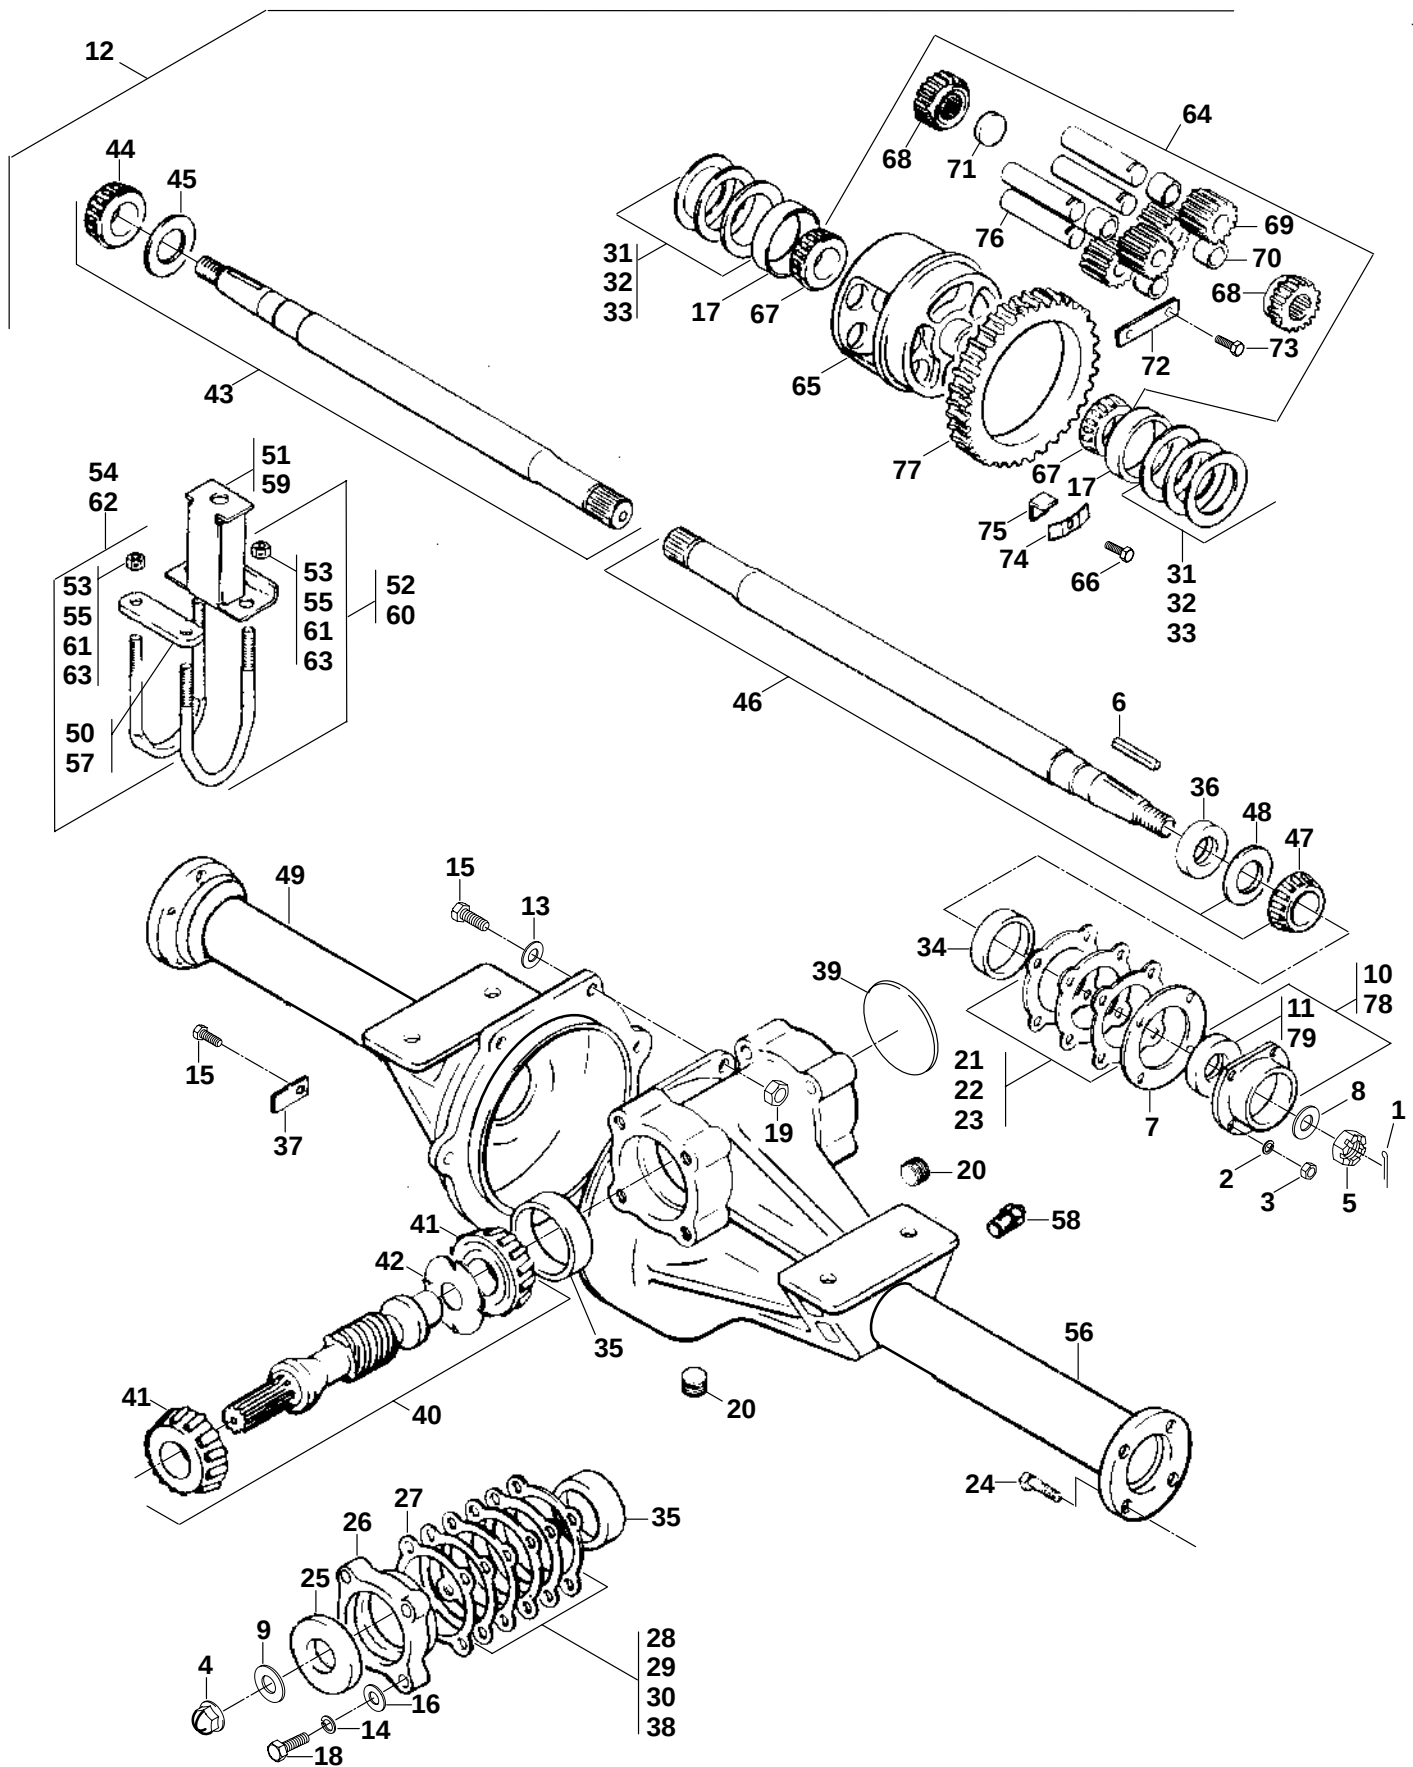

Ref. No.	Part No.	Description	No. Req'd	Notes
1	304636	Pin, cotter, 1/8" x 1 1/8"	2	
2	306325	Lockwasher, 5/16"	8	
3	306932	Nut, 5/16-18	8	
4	800198	Nut, lock, 1/2-20	1	
5	805843	Nut, castle, 5/8-18	2	
6	805875	Key, hub, 3/16" x 3/16" x 1 3/4"	2	
7	808303	Gasket, bearing	2	
8	809156	Washer, thrust, 5/8"	2	
9	809180	Washer, 7/16"	1	
10	879476	Retainer, seal	2	
11	814488	Seal, bearing	1	
12	2701466	Differential, complete (8.2:1 ratio)	1	
13	103867	•Washer, 5/16"	5	
14	120177	•Lockwasher, 3/8"	4	
15	304055	•Screw, 5/16-18 x 1 3/8"	6	
16	306405	•Washer, 3/8"	4	
17	320122	•Cup, tapered roller bearing	2	
18	2702248	•Screw, 3/8-16 x 1 3/4"	4	
19	800290	•Nut, lock, 5/16-18	6	
20	800356	•Plug, 1/2-14	2	
21	805320	•Shim, .005	As Req'd	
22	805321	•Shim, .010	As Req'd	
23	805322	•Shim, .030	As Req'd	
24	806251	•Screw, 5/16-18 x 15/16"	8	
25	812335	•Seal, oil	1	
26	814226	•Housing, bearing	1	
27	814465	•Gasket	2	
28	814466	•Shim, .005	As Req'd	
29	814467	•Shim, .010	As Req'd	
30	814468	•Shim, .030	As Req'd	
31	814469	•Shim, .003	As Req'd	
32	814470	•Shim, .005	As Req'd	
33	814471	•Shim, .010	As Req'd	
34	814474	•Cup, roller bearing	2	
35	814476	•Cup, roller bearing	2	
36	814477	•Seal, rear axle	2	
37	816045	•Tag, ratio (8.2:1)	1	
38	816515	•Shim, .003	As Req'd	
39	818226	•Plug, expansion, 2 1/2" (6 cm)	1	
40	879748	•Worm w/bearings and slinger (8.2:1 ratio)	1	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.


6.35 DIFFERENTIAL

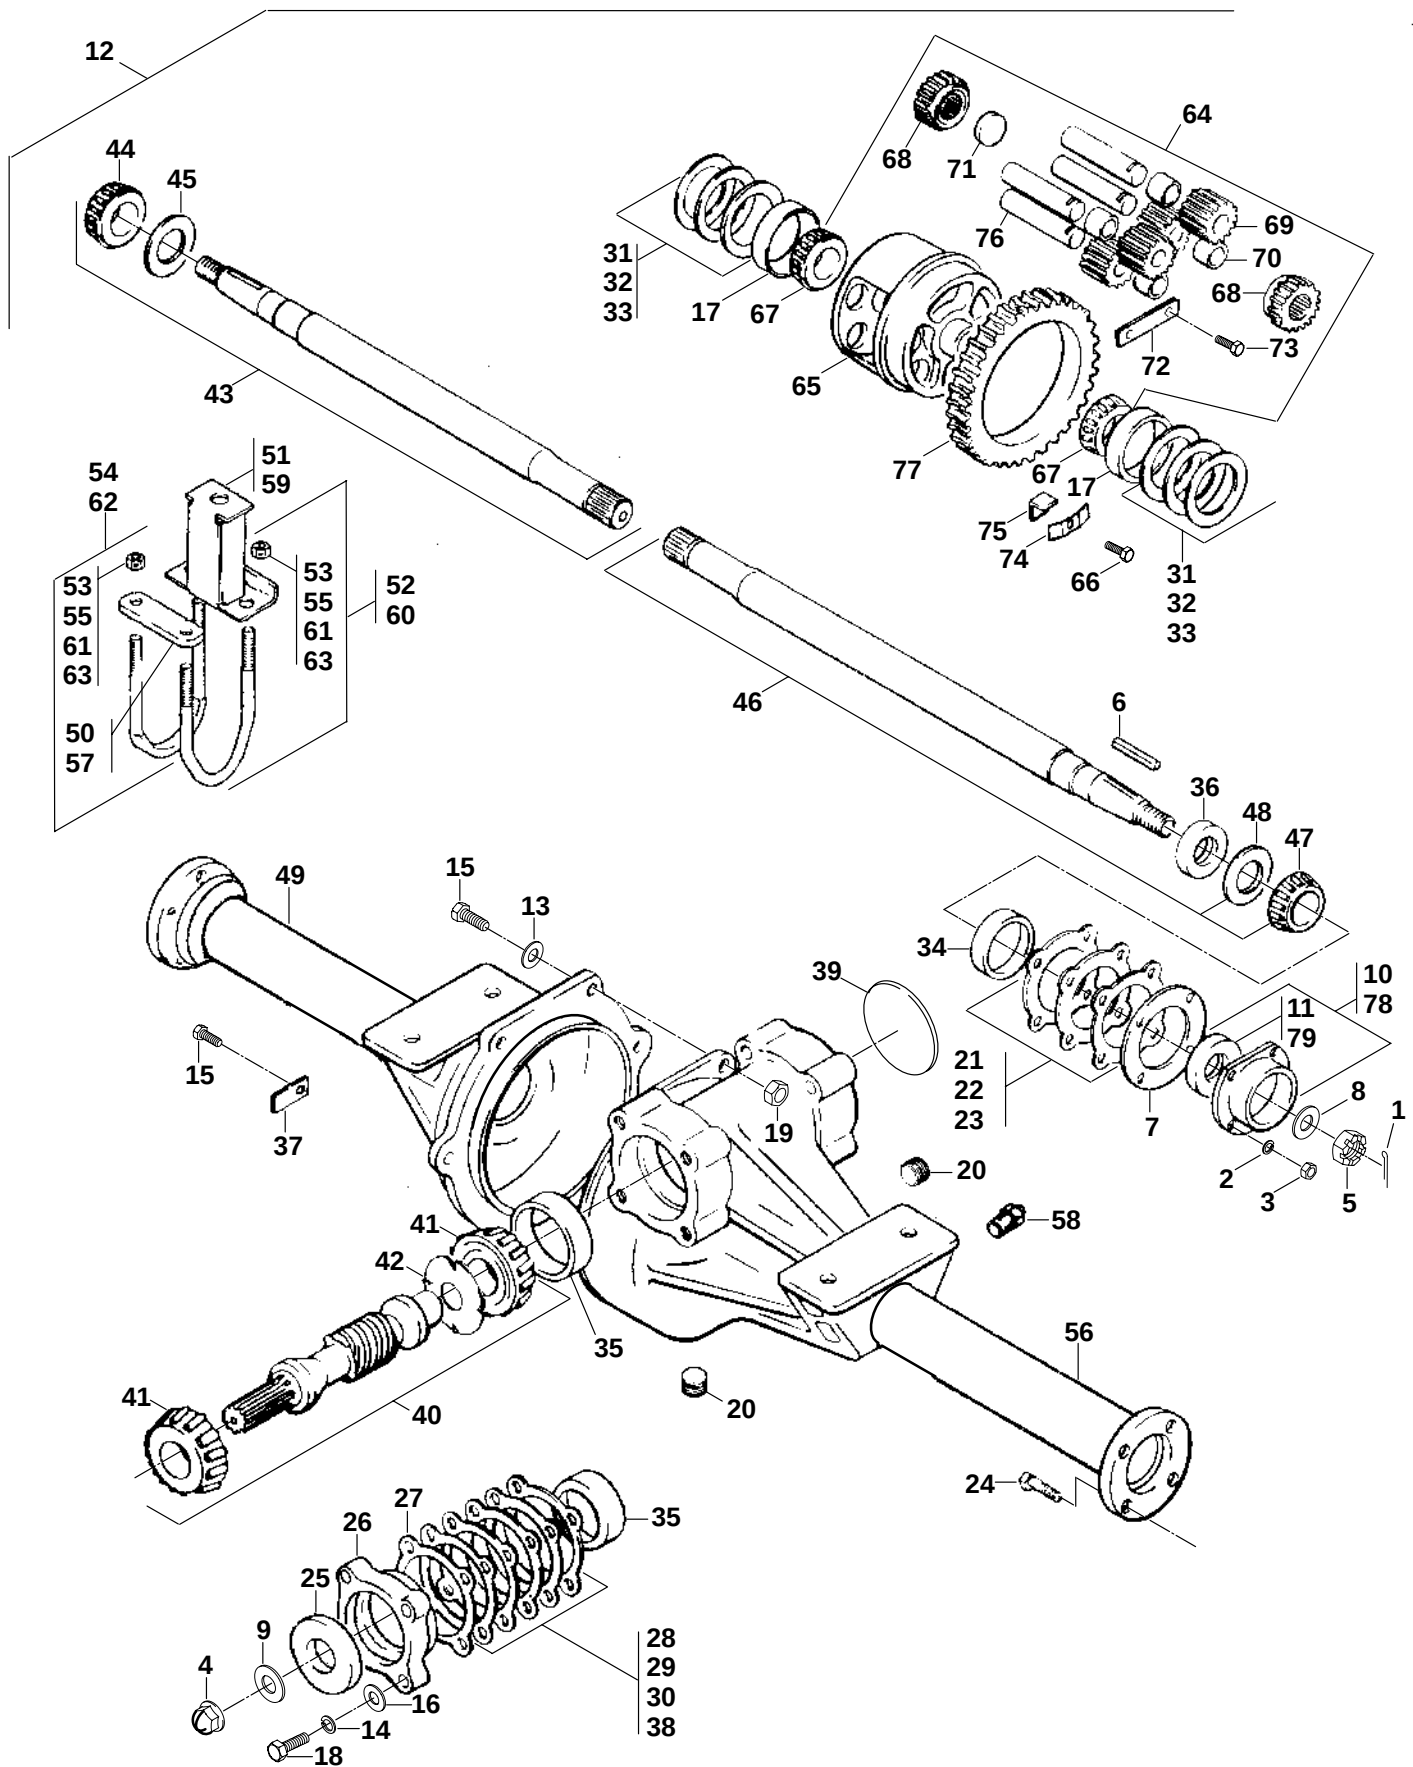

Ref. No.	Part No.	Description	No. Req'd	Notes
41	814475	••Cone, tapered roller bearing	2	
42	886706	••Slinger set, oil	1	
43	885033	•Axe, RIGHT, w/bearings, 20 1/32" (51 cm) .	1	
44	815403	••Cone, tapered roller bearing	1	
45	827018	••Ring, backing	1	
46	885034	•Axe, LEFT, w/bearings, 23 1/4" (59cm) . . .	1	
47	815403	••Cone, tapered roller bearing	1	
48	827018	••Ring, backing	1	
49	886204	•Housing, axle, RIGHT	1	
50	812218	••Plate	1	
51	834979	••Plate, upstop	1	
52	887187	••U-bolt w/nuts, 2" (5 cm)	1	
53	548061	••Nut, lock, 7/16-20	2	
54	887188	••U-bolt w/nuts, 2 1/2" (6 cm)	1	
55	548061	••Nut, lock, 7/16-20	2	
56	886205	•Housing, axle, LEFT	1	
57	812218	••Plate	1	
58	827486	••Valve, breather	1	
59	834979	••Plate, upstop	1	
60	887187	••U-bolt w/nuts, 2" (5 cm)	1	
61	548061	••Nut, lock, 7/16-20	2	
62	887188	••U-bolt w/nuts, 2 1/2" (6 cm)	1	
63	548061	••Nut, lock, 7/16-20	2	
64	886999	•Gear, carrier (8.2:1 ratio)	1	
65	◇	••Housing, carrier	1	
66	306555	••Screw, 5/16-18 x 5/8"	2	
67	386767	••Cone, tapered roller bearing	2	
68	814481	••Gear, axle shaft	2	
69	814482	••Gear, differential planet	4	
70	814483	••Spacer	4	
71	814484	••Spacer	1	
72	815794	••Plate, locking	3	
73	816812	••Screw, 3/8-16 x 1 1/4"	6	
74	816823	••Plate, retainer	2	
75	816824	••Plate, locking	2	
76	816825	••Shaft, differential gear	4	
77	830557	••Gear, worm (8.2:1 ratio)	1	
78	889065	•Retainer, seal	2	
79	834099	••Seal, bearing	1	


• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.36 COOLING SYSTEM

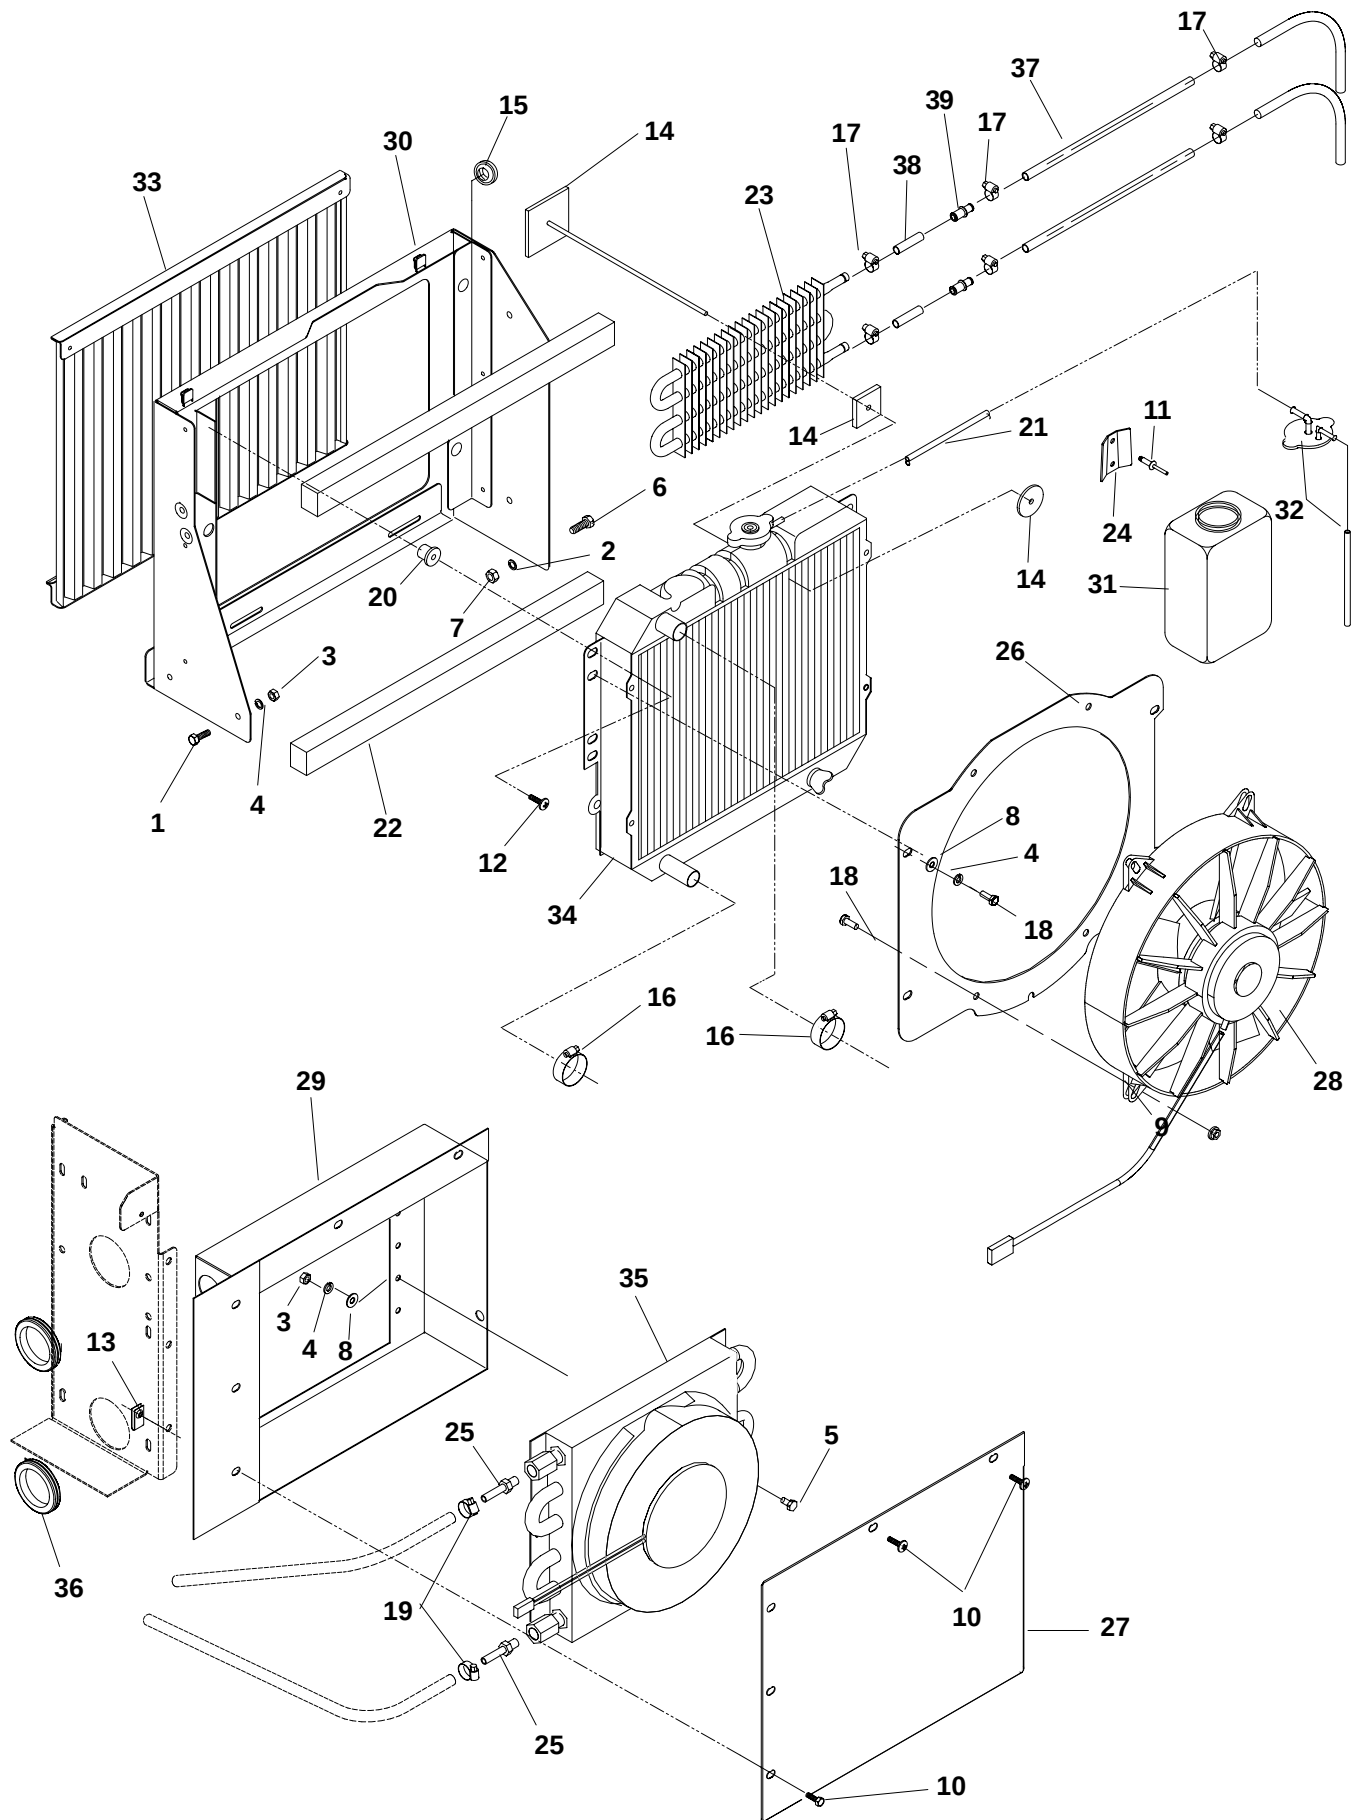


Ref. No.	Part No.	Description	No. Req'd	Notes
1	300646	Screw, 1/4-20 x 3/4	6	
2	306325	Lockwasher, 5/16	2	
3	306375	Nut, 1/4-20	5	
4	306396	Lockwasher, 1/4	9	
5	306419	Screw, 1/4-20 x 1/2	4	
6	306450	Screw, 5/16-18 x 3/4	2	
7	306932	Nut, 5/16-18	2	
8	308090	Washer, 1/4	9	
9	450452	Nut, M6-1.00	4	
10	800582	Screw, 1/4-20 x 3/4	5	
11	800390	Rivet, 1/8" x 25/64"	2	
12	800177	Screw, 5/16-18 x 3/4	4	
13	800279	Nut, 1/4-20, speed	5	
14	800789	Kit, oil cooler mounting	1	
15	809231	Grommet	2	
16	820889	Clamp	2	
17	825624	Clamp	6	
18	828162	Screw, M6-1.0 x 16	8	
19	832033	Clamp	2	
20	831846	Nut, isolation	4	
21	835805	Hose, radiator overflow, 4' (1.2 M)	As Req'd.	
22	833512	Foam	2	
23	838340	Cooler, oil	1	
24	842782	Bracket, overflow bottle	1	
25	842944	Fitting, hose, 1/2" ID	2	
26	845072.7	Bracket, fan	1	
27	845073.7	Panel, left oil cooler cover	1	
28	845074	Fan	1	
29	845075.7	Bracket, oil cooler	1	
30	888497	Mount, radiator	1	
31	889050	Reservoir, coolant	1	
32	889051	Cap, coolant reservoir	1	
33	2700819.7	Screen	1	
34	894590	Radiator	1	
35	894901	Cooler, oil electric fan	1	
36	825779	Grommet	2	
37	2701043	Hose, hydraulic, 25' (7.6 M)	As Req'd.	
38	2701167	Hose	2	
39	2701166	Union	2	

6.37 ALTERNATOR & GOVERNOR

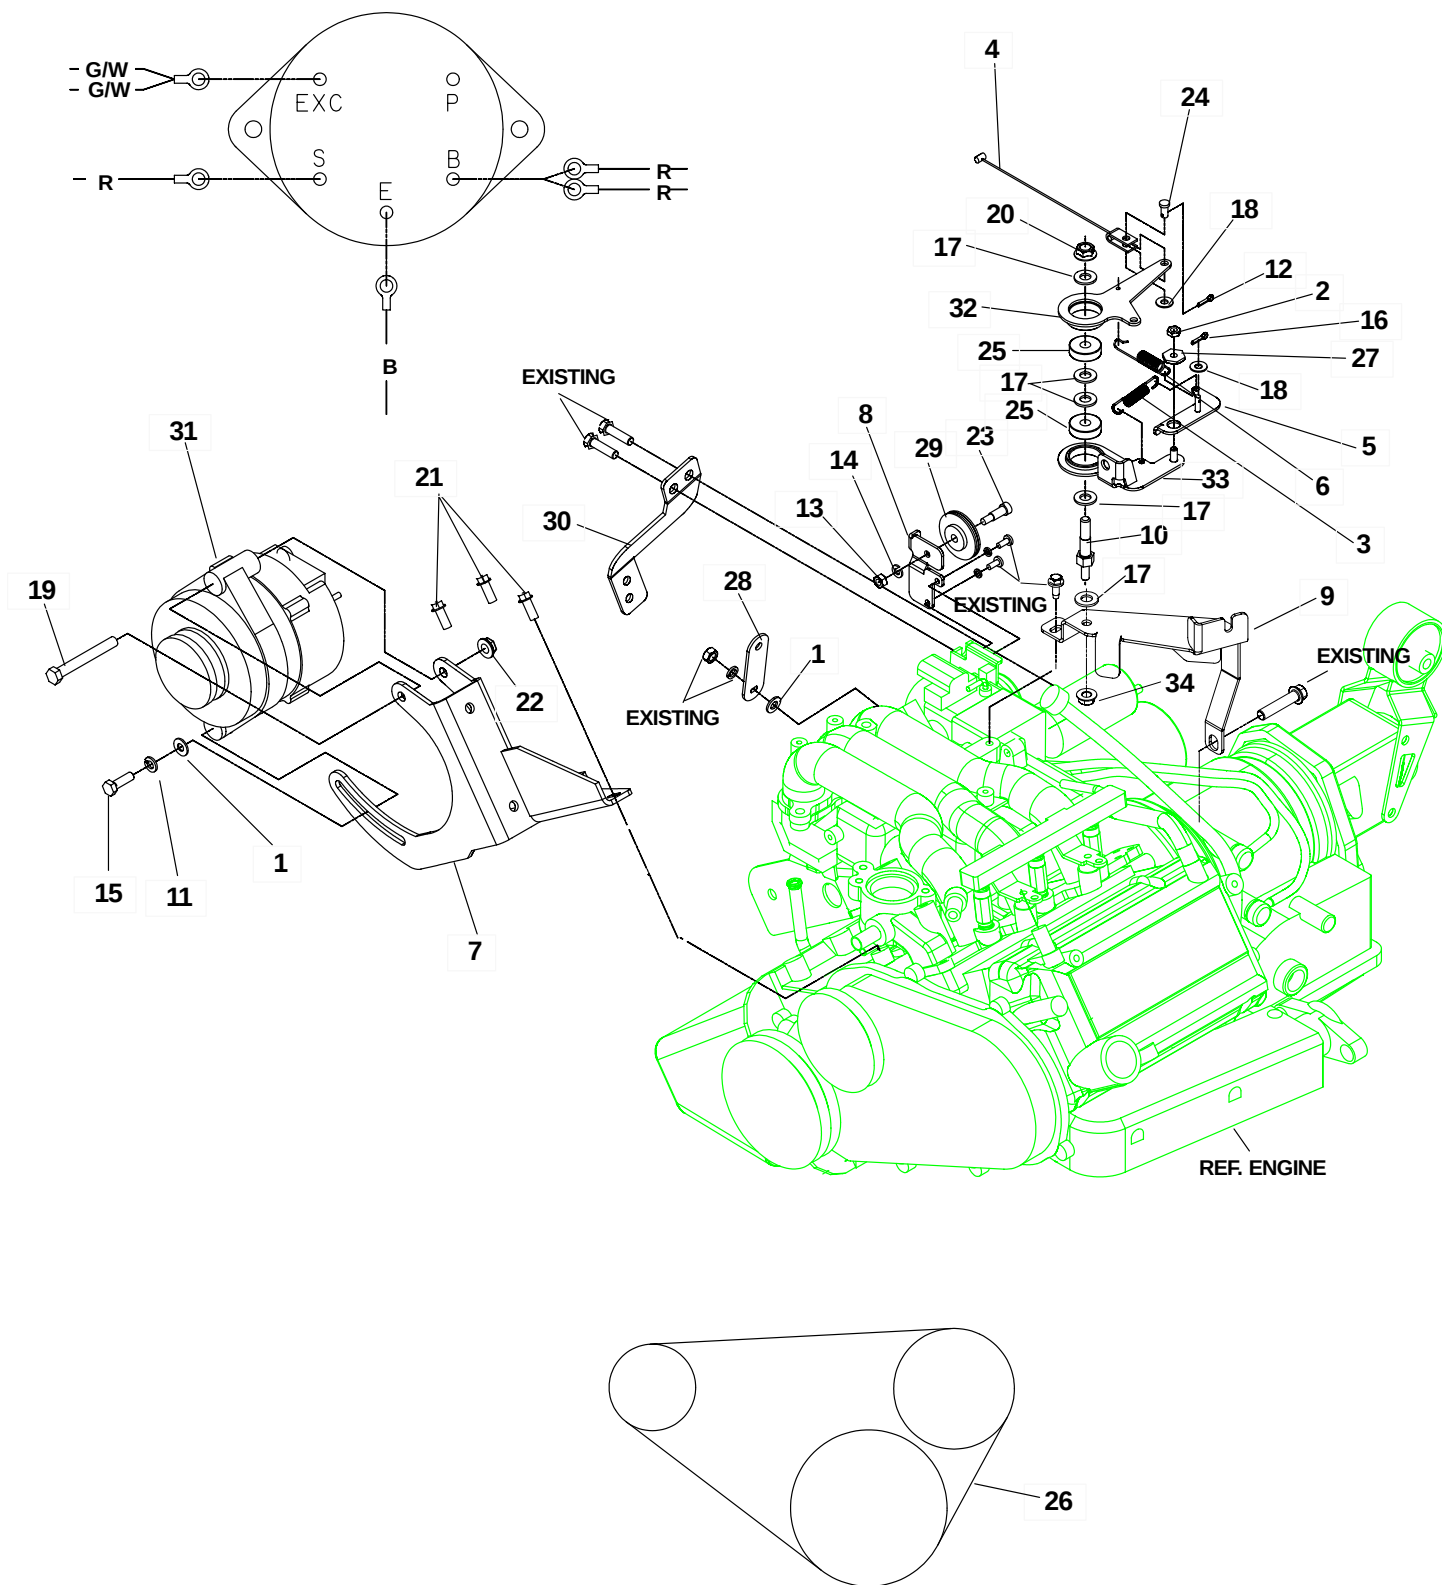


Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16	2	
2	130728	Nut, 1/4-20	1	
3	2700335	Spring, governor	1	
4	2700503	Cable, carburetor	1	
5	2701129	Arm, throttle	1	
6	2701236	Spring, extension	1	
7	2701434.7	Bracket, alternator	1	
8	2701510	Bracket, pulley, throttle cable	1	
9	2701511	Bracket, throttle cable	1	
10	2701517	Post, throttle	1	
11	306325	Lockwasher, 5/16	1	
12	306372	Pin, cotter	1	
13	306375	Nut, 1/4-20	1	
14	306396	Lockwasher, 1/4	1	
15	306416	Screw, 5/16-18 x 1	1	
16	306463	Pin, cotter	1	
17	306981	Washer, 13/32	5	
18	308090	Washer, 1/4	2	
19	311213	Screw, 3/8-16 x 3	1	
20	450454	Nut, M10-1	1	
21	452388	Screw, M8-1.25 x 20	3	
22	548804	Nut, 3/8-16	1	
23	800927	Screw, 1/4-20 x 5/8	1	
24	818395	Pin, clevis 1/4 x 1/2	1	
25	830140	Bearing, ball	2	
26	835062	Belt, fan	1	
27	835271	Nut, 1/4-20	1	
28	842740	Lever, shifter	1	
29	843013	Pulley, governor	1	
30	845345.7	Bracket, shift cable mount	1	
31	893876	Alternator, 65 AMP	1	
32	894706	Arm, governor	1	
33	894708	Lever, throttle	1	
34	450453	Nut, M8, 1.25	1	

6.38 HOSES & AIR FILTER

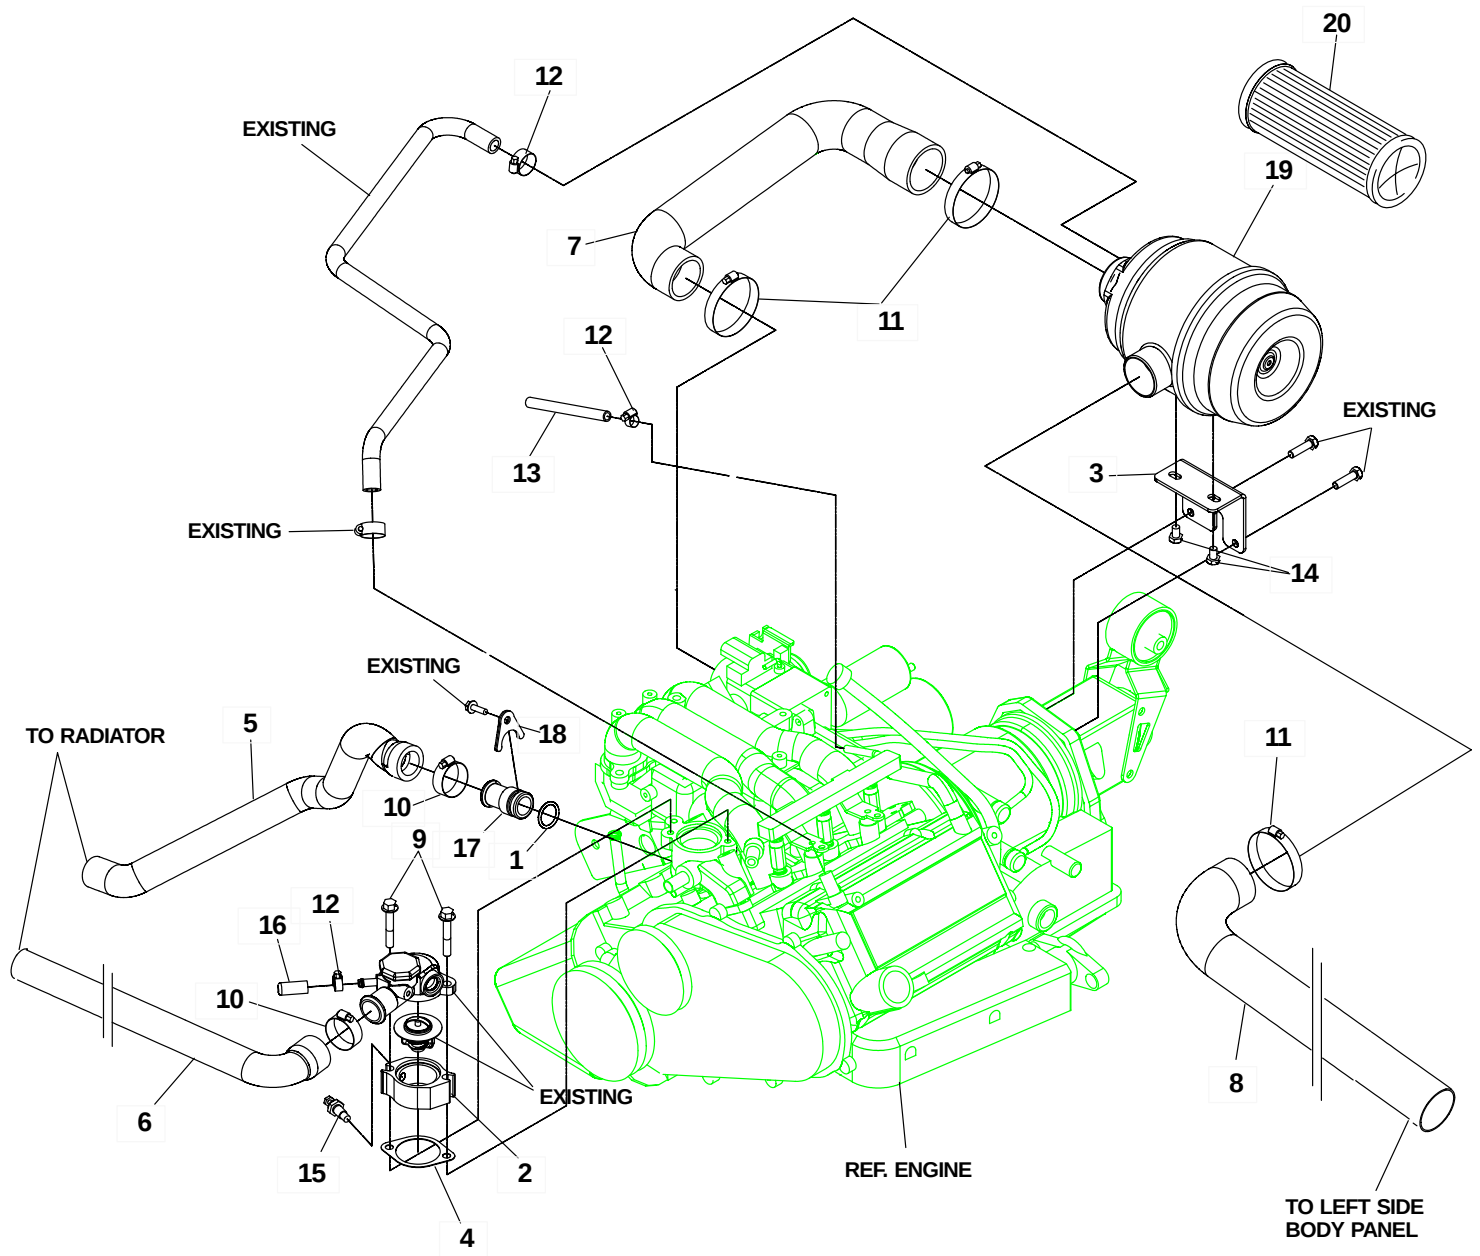


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2700031	O-ring, 15/16" I.D., 1/8"	1	Not illustrated.
2	2701442	Housing, temperature sender	1	
3	2701512.7	Bracket, air cleaner	1	
4	2701513	Gasket, thermostat spacer	1	
5	2701516	Hose, radiator lower	1	
6	2701652	Hose, radiator upper	1	
7	2702037	Intake hose	1	
8	2702301	Hose, high temperature air	1	
9	452392	Bolt, M8-1.25 x 50	2	
10	820889	Clamp	2	
	823549	Tie, cable 15.5" (394 mm)	1	
11	825358	Clamp	3	
12	825624	Clamp	4	
13	826590	Hose, fuel, 25' (7.6 M)	As Req'd.	
14	843545	Bolt, air cleaner	2	
15	843857	Sender, water tempature	1	
16	845224	Cap	1	
17	845365	Tube, water inlet	1	
18	845409	Bracket, u-water inlet	1	
19	13701-53F20	Cleaner, air	1	
20	13780-79201	Element, air cleaner	1	

6.39 OIL FILL & FILTER

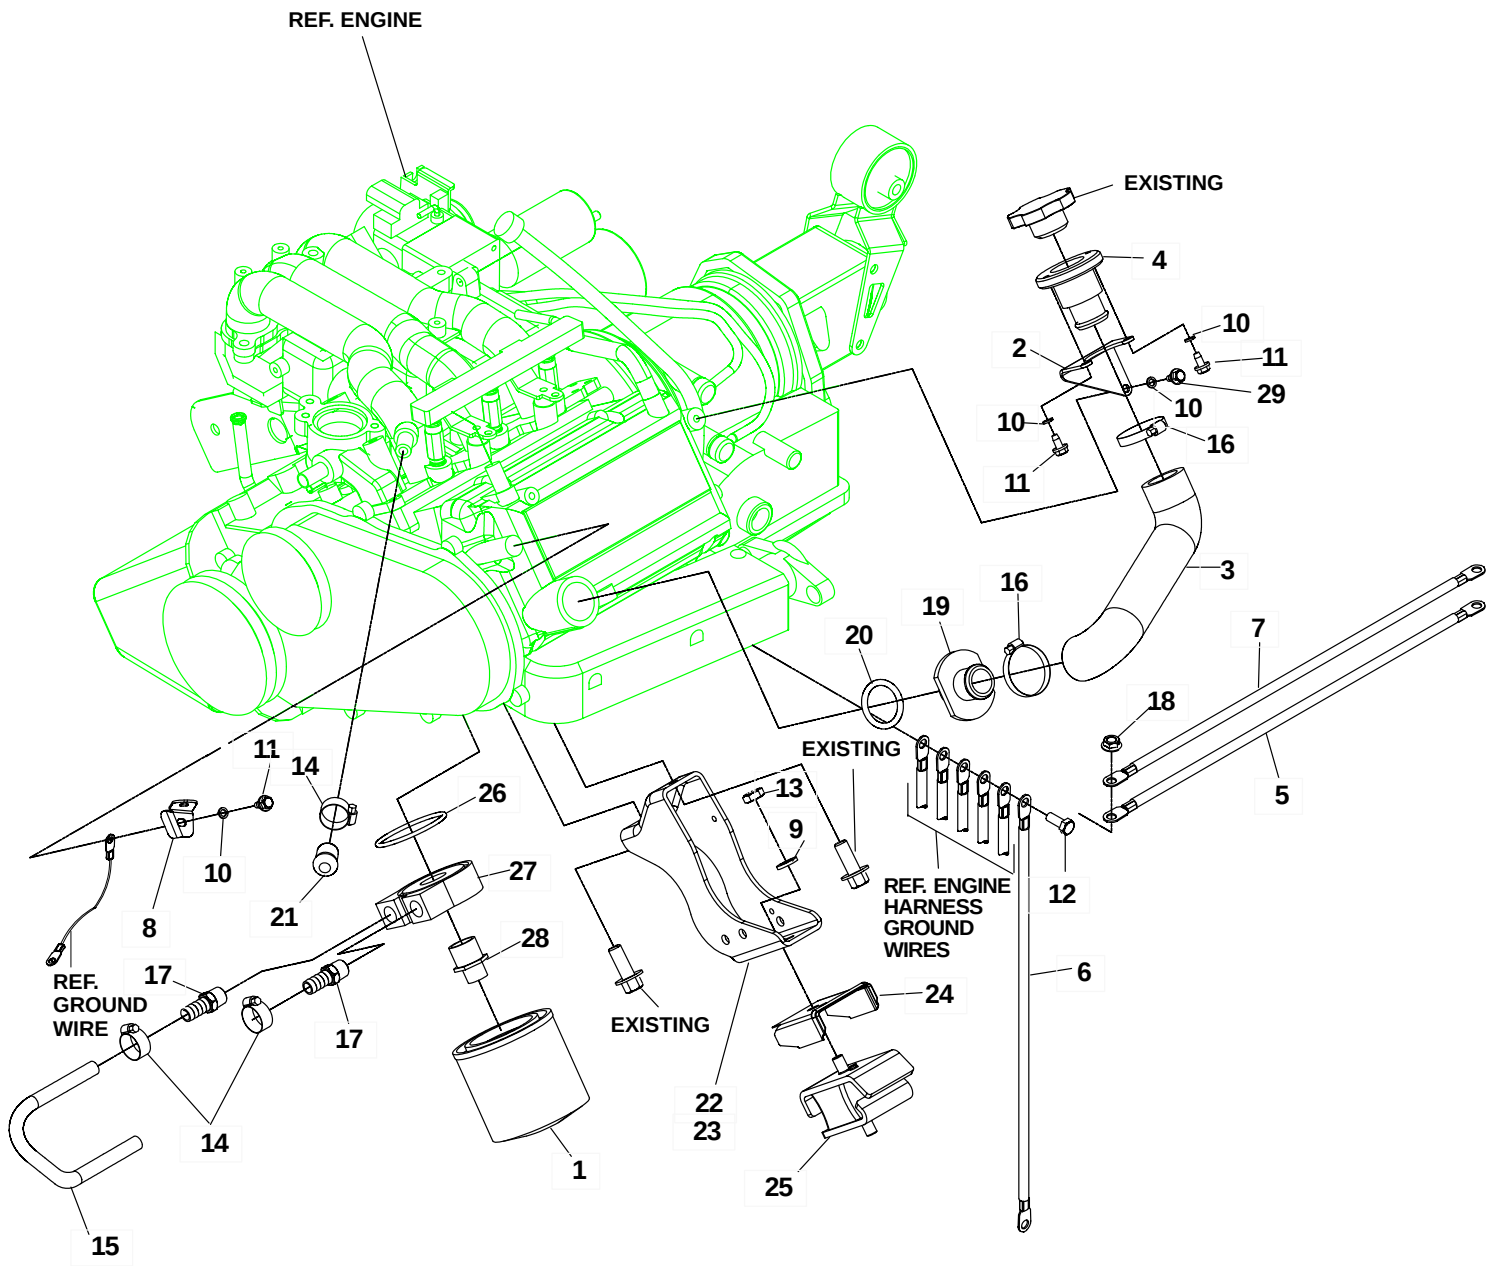

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701908	Filter, oil	1	Not illustrated.
2	2701514.7	Bracket, remote oil fill cap	1	
3	2701636	Hose, oil fil	1	
4	2701640	Adapter, oil cap	1	
	2701870	Harness, main	1	
5	894594	Wire, 4ga, red	1	
6	2702267	Wire, 4ga, black	1	
7	2702268	Wire, 6ga, red	1	
8	2702300.7	Bracket, clamp	1	
9	303269	Lockwasher, 7/16	1	
10	450410	Lockwasher, M6	4	
11	800425	Screw, M6–1.00 x 12	4	
12	800548	Screw, M8–1.25 x 20	1	
13	800571	Nut, 10–1.25	1	
14	825624	Clamp, hose	3	
15	830929	Hose	1	
16	836206	Clamp, hose	2	
17	842944	Fitting	2	
18	843058	Nut, starter motor	1	
19	843399	Adapter, valve cover	1	
20	843420	O–ring	1	
21	845224	Cap	1	
22	11640–53F20	Support, engine, RIGHT	1	
23	2703091	Bracket front mounting, LEFT	1	
24	2703090	Cover, front mounting	1	
25	11610–60C01	Mount, engine	2	
26	830920	O–ring	1	
27	830176	Plate	1	
28	830175	Connector	1	
29	828162	Screw, M6–1.0 x 16	1	


6.40 TURN SIGNAL SWITCH

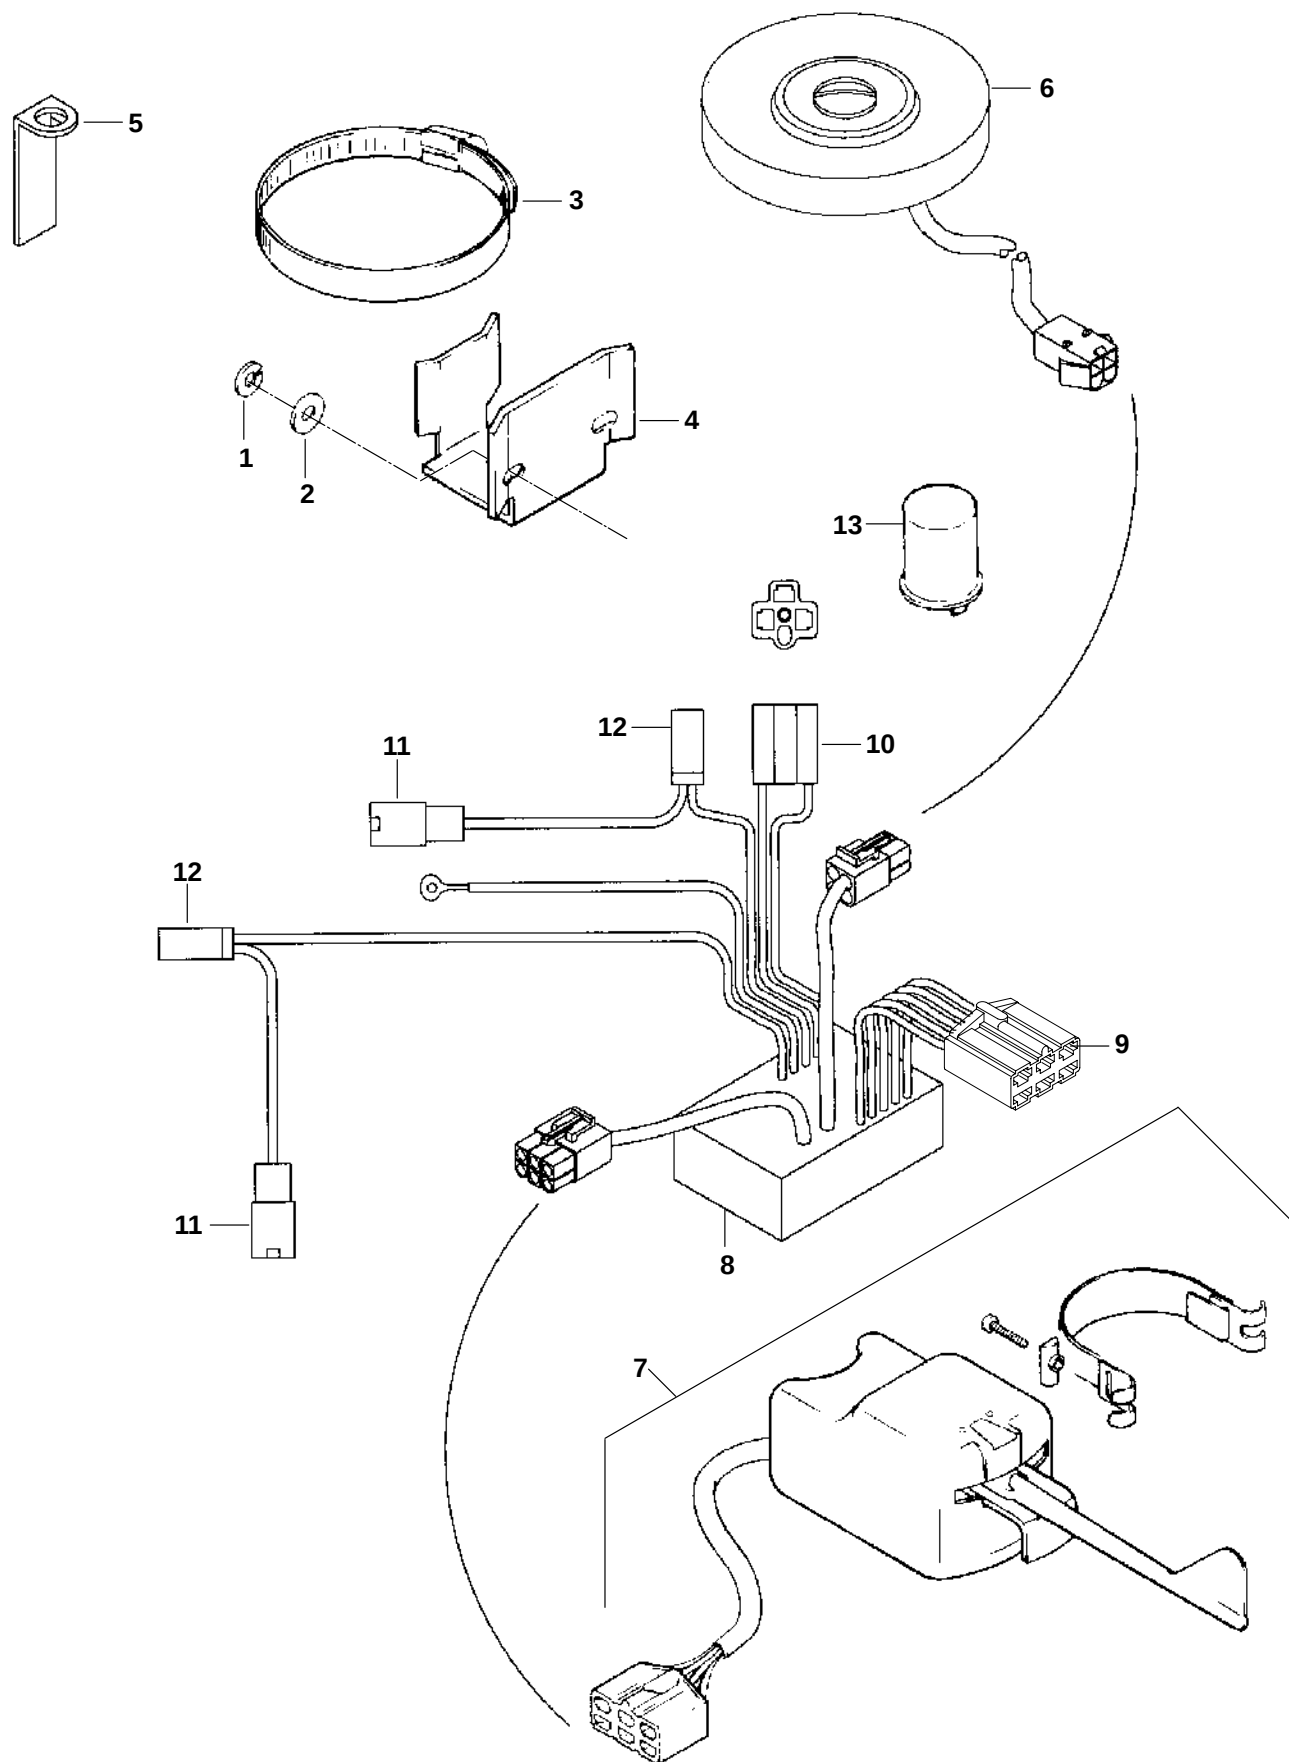


Ref. No.	Part No.	Description	No. Req'd	Notes
1	306310	Lockwasher, #8	2	
2	308089	Washer, #10	2	
3	819923	Collar, foam	3	
4	825358	Clamp, worm drive	2	
5	839197	Bracket, turn signal	1	
6	840187	Bracket, sensor indexing	1	
7	840565	Sensor, steering position	1	
8	840566	Switch, turn signal	1	
9	892528	Module, control	1	
10	825877	•Connector, female, 6–contact	1	
11	825894	•Connector, female, 3–contact	1	
12	826726	•Connector, male, 1–contact	1	
13	825880	•Connector, female, 1–contact	2	
14	825501	Flasher, turn signal	1	

- INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.41 FRONT SHOCK ABSORBER

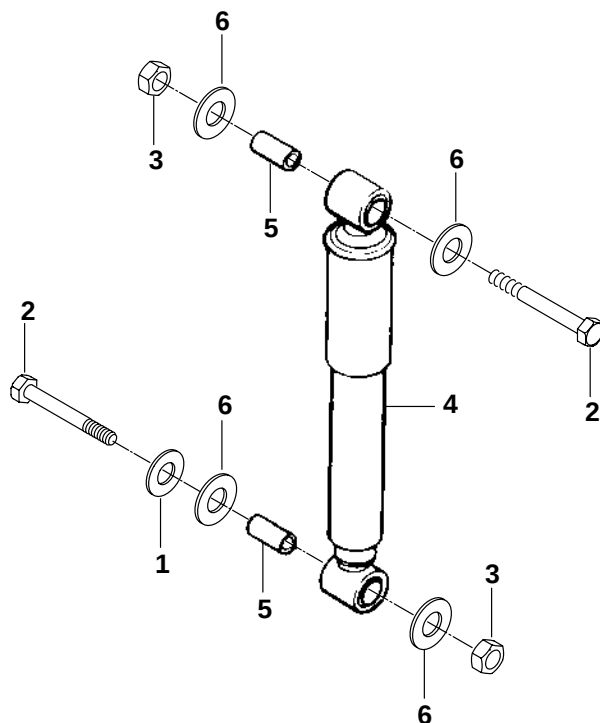


Ref. No.	Part No.	Description	No. Req'd	Notes
1	308091	Washer, 1/2"	1	
2	317444	Screw, 7/16-14 x 3 3/4	2	
3	800294	Nut, lock, 7/16-14	4	
4	807332	Absorber, shock	1	
5	823621	Bushing	4	
6	825500	Washer, cupped	8	

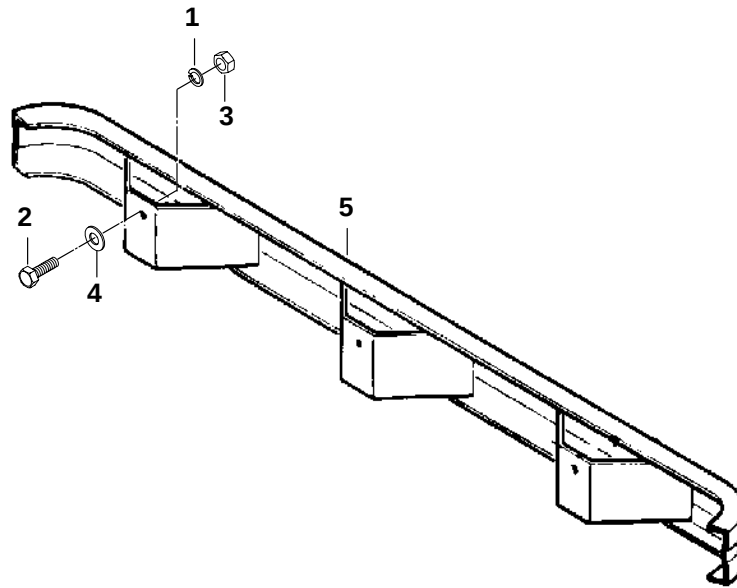


Ref. No.	Part No.	Description	No. Req'd	Notes
1	120177	Lockwasher, 3/8"	3	
2	306414	Screw, 3/8-16 x 1"	3	
3	306562	Nut, 3/8-16	3	
4	306981	Washer, 3/8"	3	
5	883883	Bumper	1	

6.43 FRONT & REAR TIRES

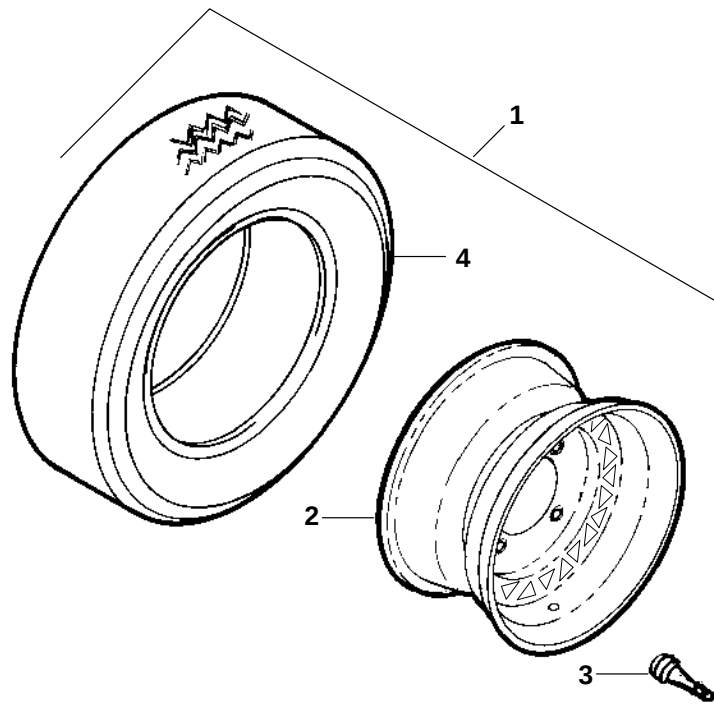

Ref. No.	Part No.	Description	No. Req'd	Notes
1	893172	Tire and wheel set, radial	1	Obtain locally.
2	835905	•Wheel, 4.00 x 12, (five on 4 1/2" bolt circle) . .	1	
3	886735	•Stem, valve	1	
4	◇	•Tire, 4.80 x 12, load range C	1	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

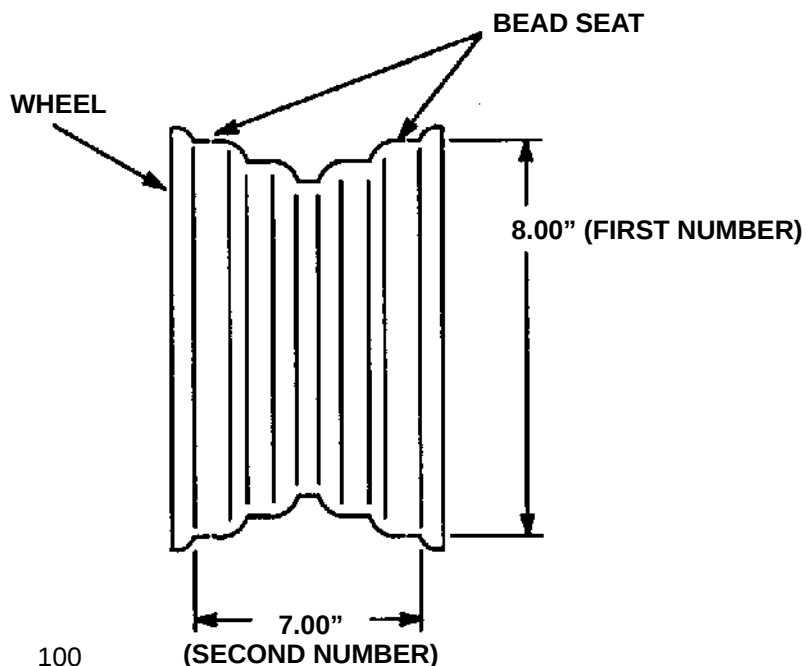

WHEEL SIZE MEASUREMENT

Previously, tire and wheel size were specified the same.

Example: (a 9.50 x 8.00 tire was mounted on a 9.50 x 8.00 wheel)


Wheel size is now determined by measuring the wheel at the bead seat.

The first number is wheel diameter measured at bead seat.

The second number is wheel width measured at bead seat.

Example: (a 9.50 x 8.00 tire is mounted on a 8.00 x 7.00 wheel)


The wheel size did not change, just the method of measurement. See illustration.

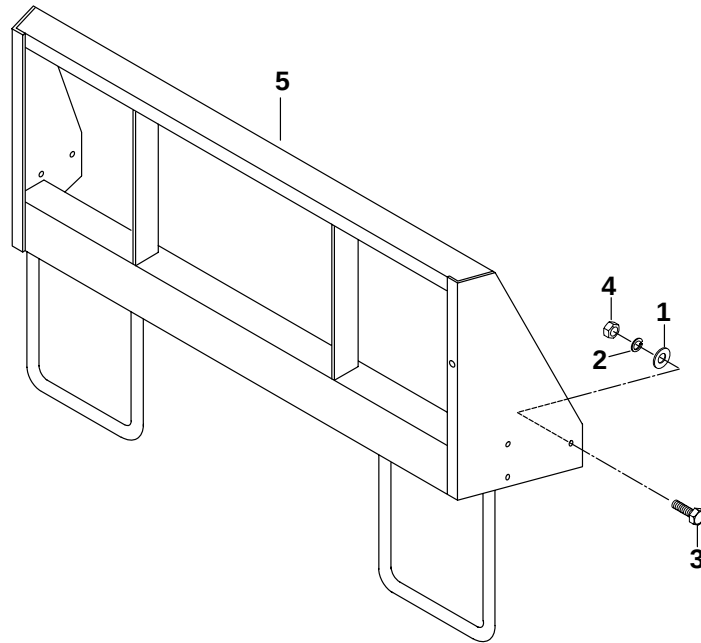

Ref. No.	Part No.	Description	No. Req'd	Notes
1	889445	Bumper set, complete	1	Not offered separately.
2	103867	•Washer, 5/16"	6	
3	306325	•Lockwasher, 5/16"	6	
4	306416	•Screw, 5/16-18 x 1"	6	
5	306932	•Nut, 5/16-18	6	
	◇	•Bumper	1	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.45 HEATER/DEFROSTER

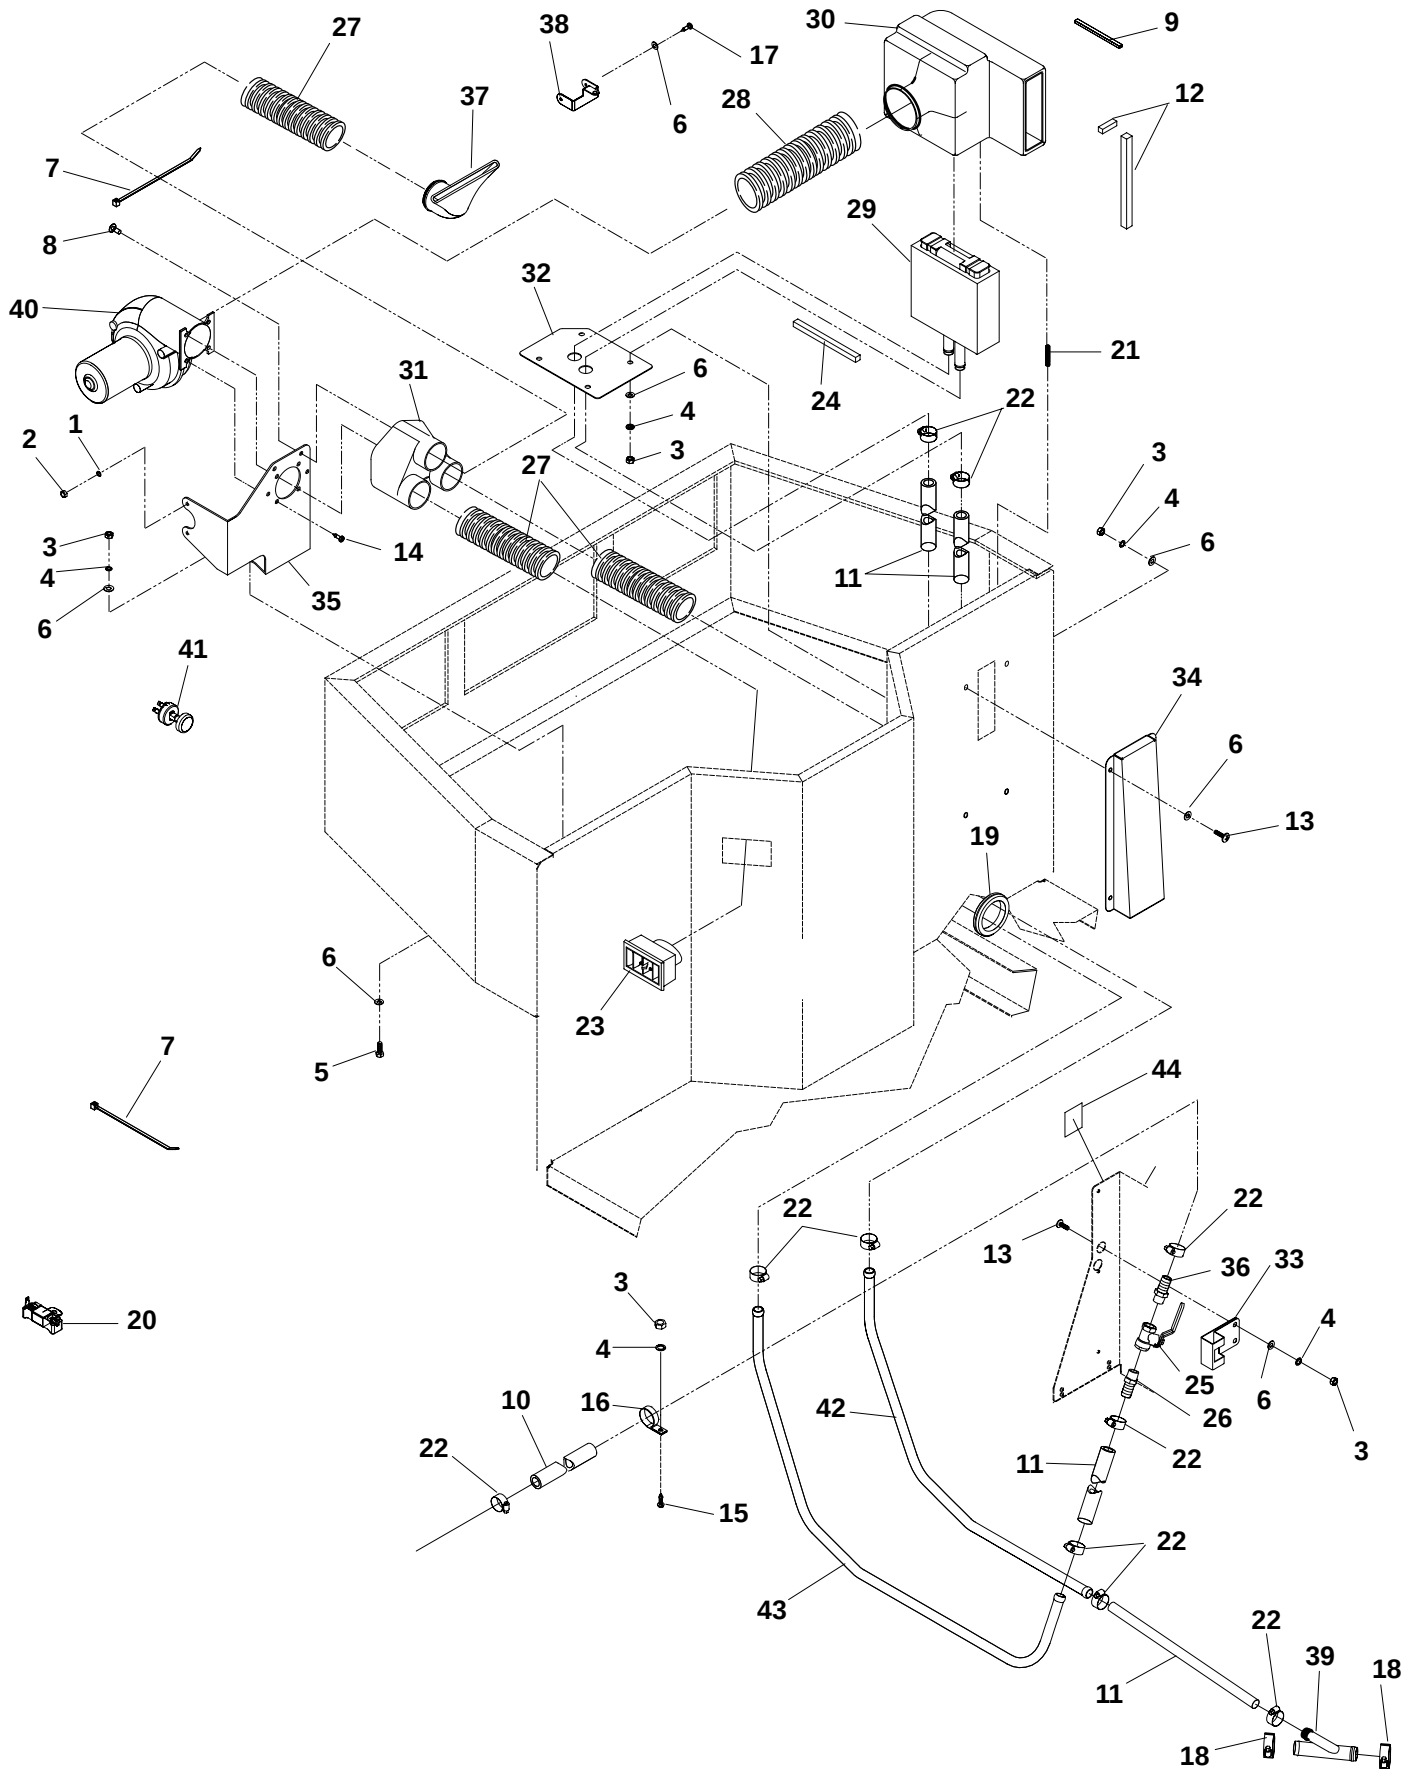

Ref. No.	Part No.	Description	No. Req'd	Notes
1	120052	Lockwasher, #10	2	
2	2702244	Nut, #10-32	2	
3	306375	Nut, 1/4-20	14	
4	306396	Lockwasher, 1/4	14	
5	306487	Screw, 1/4-20 x 5/8	4	
6	308090	Washer, 1/4	25	
7	320107	Tie, cable 7 1/2 (191 mm)	10	
8	548045	Screw, 1/4-20 x 3/4	4	
9	821893	Trim, push-on, 12' (3.7 M)	As Req'd.	
10	843200	Tube, heater return, 25' (7.6 M) ...	As Req'd.	
11	833862	Hose, heater	1	
12	830355	Weather seal, 35' (10.7 M)	As Req'd.	
13	800026	Screw, 1/4-20 x 3/4	6	
14	800630	Screw, #12-24 x 3/4, tapping	4	
15	800869	Screw, 1/4-20 x 3/8, tapping	1	
16	800929	Clamp	1	
17	800943	Screw, 10-14 x 5/8, tapping	2	
18	820889	Clamp	2	
19	825779	Grommet	1	
20	825994	Resistor	1	
21	829815	Stud, threaded	4	
22	832033	Clamp	10	
23	833846	Louver, air	2	
24	833851	Seal	3	
25	833857	Valve, ball check	1	
26	833858	Fitting, hose	1	
27	833939	Hose, air	3	
28	833940	Hose, air	1	
29	833949	Core, heater	1	
30	833958	Housing	1	
31	833974	Diffuser, air	1	
32	833984	Panel, core housing	1	
33	833985	Clamp, valve	1	
34	833986	Intake, cab air	1	
35	836024	Bracket, heater blower	1	
36	842944	Fitting, hose	1	
37	844327	Duct, defroster	1	
38	845078.7	Bracket, defrost tube	1	
39	888856	Tube, "Y"	1	
40	889596	Blower	1	
41	894511	Switch, heater 2-speed	1	
42	900051.7	Tube, heater return	1	
43	900052.7	Tube, heater supply	1	
44	832804	Decal, information	1	

6.46 DECALS

NOTICE

1. THIS IS A NEGATIVE GROUND SYSTEM. REVERSING BATTERY CONNECTION WILL DAMAGE ALTERNATOR RECTIFIER.
2. BOOSTER BATTERIES USED FOR STARTING MUST BE CONNECTED WITH PROPER POLARITY
3. BATTERY CABLES SHOULD BE DISCONNECTED BEFORE USING A "FAST CHARGER". 816391

4

WARNING

PARKING BRAKES ARE NOT AUTOMATICALLY APPLIED. VEHICLE MAY MOVE CAUSING PERSONAL INJURY AND/OR PROPERTY DAMAGE. ALWAYS APPLY HAND OR FOOT BRAKES. 822819

5

NOTICE

THIS VEHICLE IS A MOTORCYCLE AND MUST BE OPERATED IN ACCORDANCE WITH MOTORCYCLE LAWS AND REGULATIONS. 825502

6



WARNING

FAILURE TO HEED THESE WARNINGS MAY RESULT IN PERSONAL OR FATAL INJURY TO YOU OR OTHERS AND MAY ALSO RESULT IN EQUIPMENT AND/OR PROPERTY DAMAGES. NEVER ALLOW UNSKILLED OR IMPROPERLY TRAINED PERSONNEL TO OPERATE THIS EQUIPMENT.

BEFORE OPERATING—READ, STUDY AND UNDERSTAND ALL WARNING LABELS AND OPERATING INSTRUCTIONS FURNISHED WITH THIS EQUIPMENT PRIOR TO USE. IF ANY PART OF THIS MATERIAL IS UNCLEAR, CONTACT YOUR FACTORY REPRESENTATIVE FOR CLARIFICATION. DO NOT EXCEED PAYLOAD CAPACITY GIVEN ON VEHICLE NAME PLATE OR PERMIT PASSENGERS ANY PLACE ON VEHICLE. CORNERING ABILITY OF A 3-WHEEL VEHICLE IS NOT AS GREAT AS A 4-WHEEL VEHICLE. PLACE HEAVY LOADS FORWARD OF REAR AXLE. UNBALANCED OR TOP HEAVY LOADS CAN CAUSE UPSET. HELMET IS RECOMMENDED.


WHILE OPERATING—REMAIN SEATED: USE BOTH HANDS FOR STEERING. KEEP ARMS AND LEGS WITHIN VEHICLE BODY. AVOID SUDDEN STARTS AND STOPS. SUDDEN SHARP TURNS CAN CAUSE UPSET. REGULATE SPEED TO MEET ROAD AND WEATHER CONDITIONS. DO NOT OPERATE IN OR NEAR AN EXPLOSIVE ENVIRONMENT. IF A MALFUNCTION OCCURS, CEASE OPERATION—DO NOT OPERATE VEHICLE UNTIL CONDITION IS CORRECTED. LOUD NOISE OCCURS IF FRONT SKID BAR STRIKES ROAD SURFACE. THIS INDICATES VEHICLE IS BEING OPERATED RECKLESSLY AND IS NEAR UPSET.

BEFORE LEAVING VEHICLE—TURN IGNITION TO "OFF" POSITION AND REMOVE KEY. APPLY PARKING BRAKE—PARKING BRAKE IS NOT AUTOMATICALLY APPLIED. FOLLOW PROCEDURE IN OPERATOR'S MANUAL FOR PARKING ON AN INCLINE.

IT IS YOUR RESPONSIBILITY TO KEEP ALL LABELS (DECALS) AND INSTRUCTIONAL LITERATURE LEGIBLE AND INTACT. REPLACEMENT LABELS (DECALS) AND LITERATURE ARE AVAILABLE FROM THE FACTORY. 825629

7

FUSE PANEL

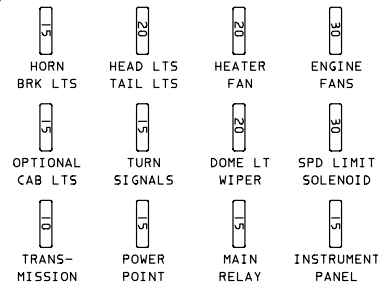

2702861

2

3

NOTICE

DO NOT TOW OR PUSH THIS VEHICLE AT SPEEDS IN EXCESS OF 10 MPH OR TRANSMISSION DAMAGE WILL OCCUR. 840394

11

TRANSMISSION FLUID LEVEL CHECK UNDER THIS COVER —REFER TO SERVICE MANUAL FOR PROPER PROCEDURE. 840395

12

ENGINE COOLANT RESERVOIR CHECK UNDER THIS COVER —REFER TO SERVICE MANUAL FOR PROPER PROCEDURE. 843439

14



WARNING

TO PREVENT POSSIBLE SEVERE BURNS TO YOU OR OTHERS, DO NOT REMOVE PRESSURE CAP WHEN HOT. CONTENTS UNDER PRESSURE. CHECK AND ADD FLUID AT RESERVOIR. 832130

8

Vehicle Emission Control Information

CUSHMAN a Textron Company
Piston displacement: 657 cubic centimeters
Idle speed: 950 ± 50 rpm
Ignition timing: 4-6° S.T.D.C. at 960 rpm.
Carburetor adjustment: none, factory set
Fuel: unleaded gasoline above 87 octane
Engine oil: SE or SF 10W-40

This vehicle conforms to **USEPA** Model Year New Motorcycles.
842990

13

KEEP VALVE CLOSED WHEN HEATER IS NOT IN USE. 832804

9

WARNING

KEEP HANDS CLEAR. ELECTRIC FAN MAY ENGAGE WITHOUT WARNING, EVEN WITH IGNITION OFF. 833807

10

NOTICE

 
THIS VEHICLE HAS A SPEED LIMITER THAT SLOWS THE ENGINE WHEN EXCEEDING TOP SPEED.

WHEN THIS HAPPENS, LET UP ON THE GAS PEDAL AND LET THE VEHICLE SLOW. REAPPLY THE GAS PEDAL TO RESUME SPEED. 2701329


1

ENGINE COOLANT RESERVOIR 843440

15




16

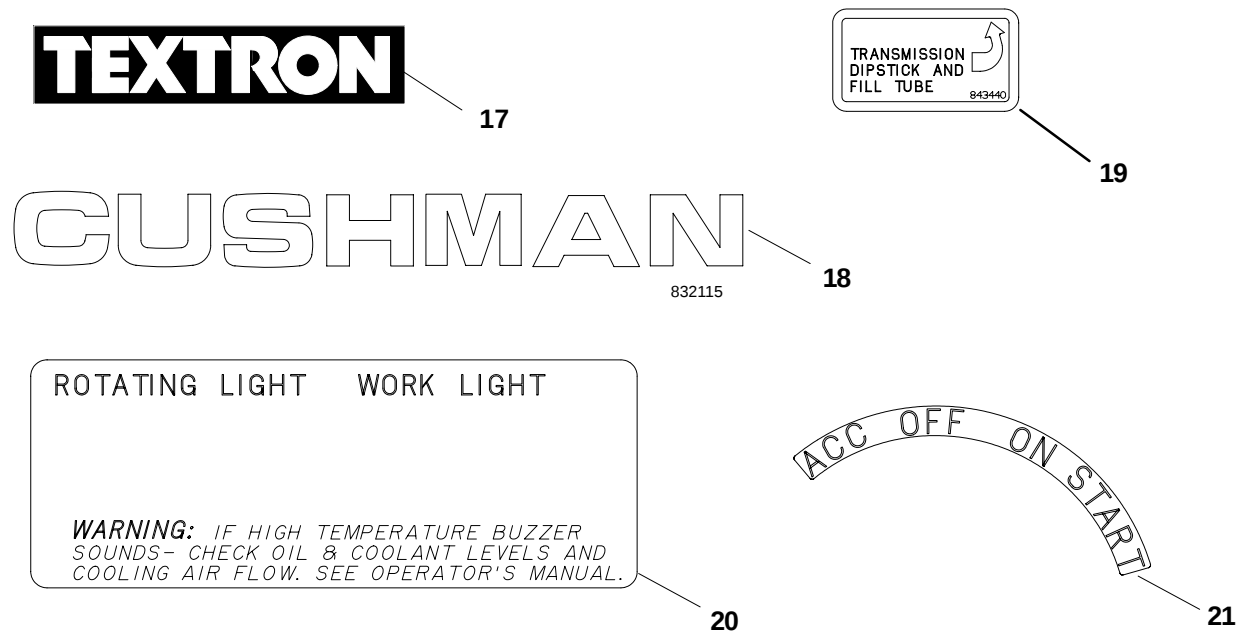

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2701329	Decal, speed limiter	1	
2	2702594	Decal, carb EFI	1	
3	2702861	Decal, fuses	1	
4	816991	Decal, Notice Alt-Batt	1	
5	822819	Decal, Warning - Parking Brake	1	
6	825502	Decal, Notice Motorcycle	1	
7	825629	Decal, Warning-Vehicle Operation	1	
8	832130	Decal, Warning Liquid/Pressure	1	
9	832804	Decal, Information	1	
10	833607	Decal, Warning Electrical Fan	1	
11	840394	Decal, Notice	1	
12	840395	Decal, Transmission Fluid	1	
13	842990	Decal, EMS Control Information	1	
14	843439	Decal, Coolant	1	
15	843441	Decal, Coolant Reservoir	1	
16	843443	Decal, Engine Dipstick	1	
17	844847	Decal, TEXTRON	2	
18	832115	Decal, CUSHMAN 14"	2	
19	843440	Decal, transmission dipstick	1	
20	2703306	Decal, dash	1	
21	2703307	Decal, dash, ignition	1	


6.47 ELECTRICAL COMPONENTS (FRONT)

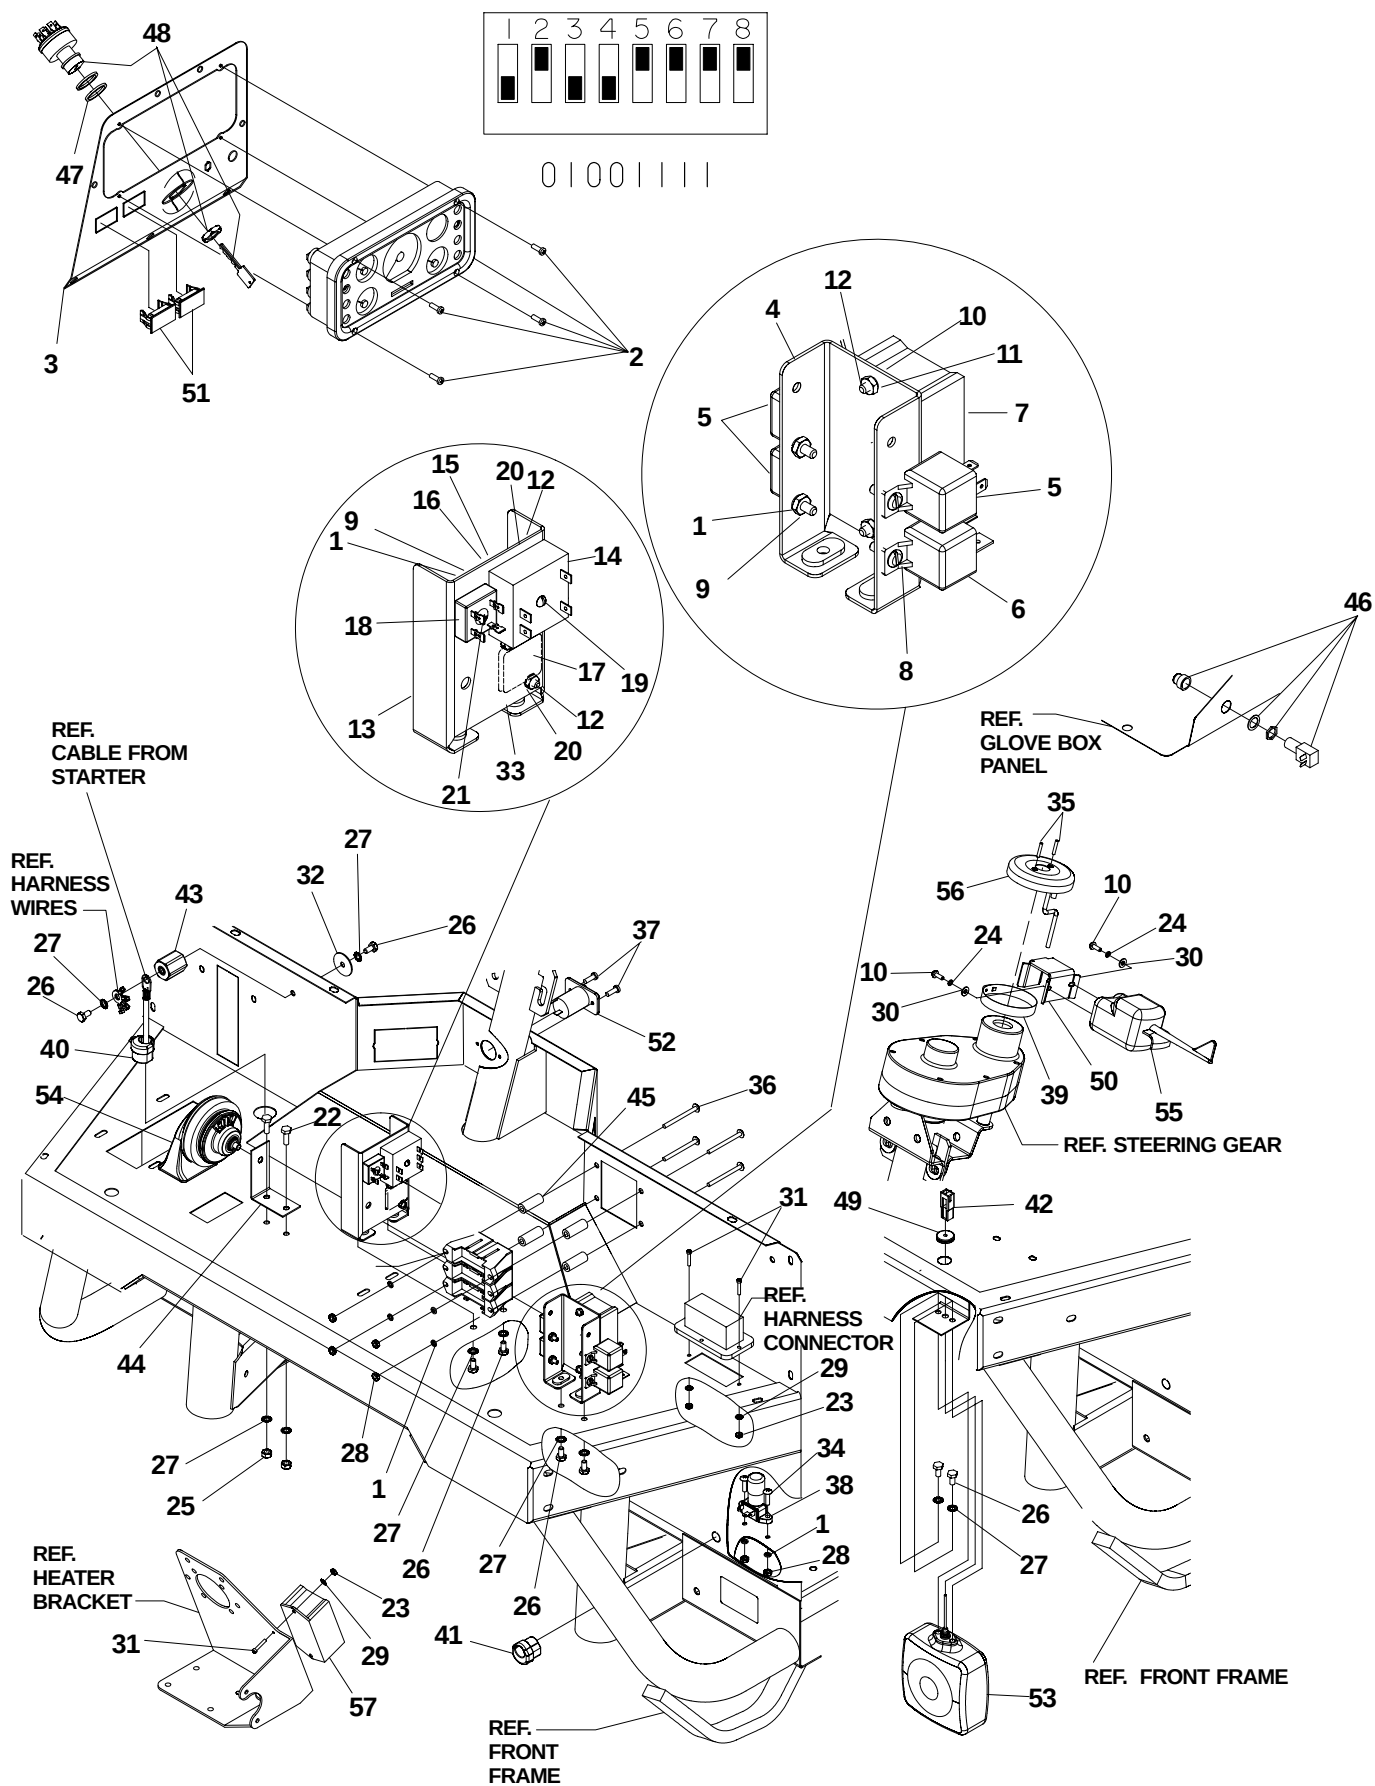

ELECTRICAL COMPONENTS (FRONT) 6.47


Ref. No.	Part No.	Description	No. Req'd	Notes
1	120052	Lockwasher, #10	11	Not illustrated. Not illustrated.
2	2700904	Panel w/speedo instrument	1	
3	2701409.7	Panel, instrument	1	
4	2701849.7	Bracket, relay	1	
5	843167	Relay, 12V 15A	3	
6	2700867	Relay, 12V 70A	1	
7	2700918	Module, speed limit	1	
8	800271	Screw, #10-24 x 1/2	4	
9	306531	Nut, #10-24	5	
10	800178	Screw, #8-32 x 1/2	4	
11	306310	Lockwasher, #8	2	
12	133079	Nut, #8-32	5	
13	2701865.7	Bracket, relay	1	
14	2703335	Timer	1	
15	844830	Relay	1	
16	844831	Spring, hold-down, relay	1	
17	844829	Socket, relay	1	
18	840679	Rectifier, bridge	1	
19	548752	Screw, #8-32 x 1 5/8	1	
20	306991	Lockwasher, #8	3	
21	800299	Screw, #10-24 x 1	1	
	2701869	Harness, front	1	
	2702138	Flasher, 12V	1	
22	300646	Screw, 1/4-20 x 3/4	2	
23	302437	Nut, #6-32	3	
24	306310	Lockwasher, #8	2	
25	306375	Nut, 1/4-20	2	
26	306419	Screw, 1/4-20 x 1/2	10	
27	306488	Lockwasher, 1/4	12	
28	306531	Nut, #10-24	6	
29	306990	Lockwasher, #6, shakeproof external	3	
30	308089	Washer, #10	2	
31	313062	Screw, #6-32 x 1	3	
32	548175	Washer, 1/4	1	
	845050	Grease, electrical connector	1	Not illustrated.
33	800178	Screw, #8-32 x 1/2	2	
34	800296	Screw, #10-24 x 3/4	2	
35	800882	Screw, #6-32 x 3/4	2	
36	800911	Screw, #10-24 x 2 1/4	4	
37	800943	Screw, 10-14 x 5/8, tapping, plastic	2	
38	817309	Switch, dimmer	1	
39	825358	Clamp, worm-drive hose	1	
40	825893	Bushing, strain relief	1	
41	825900	Bushing, strain relief	1	
42	826726	Connector, 1 contact, female	2	
43	828231	Insulator	1	
44	828613	Bracket	1	Not illustrated. Not illustrated. Not illustrated.
45	830135	Bushing	4	
46	830366	Switch, push	1	
47	837298	Spacer	2	
48	838354	Switch, ignition	1	
49	839168	Grommet	2	
50	839197	Bracket, turn signal	1	
51	843306	Plug, panel	2	
52	843942	Socket, 12V accessory plug	1	
53	885964	Lamp, turn signal	2	
54	886090	Horn	1	
	886670	Wire	1	
	890000	Buzzer	1	
	894832	Resistor	1	
55	894851	Switch, turn signal	1	
56	894853	Sensor, steering position	1	
57	894854	Module, control	1	

6.48 ELECTRICAL COMPONENTS (MAIN)

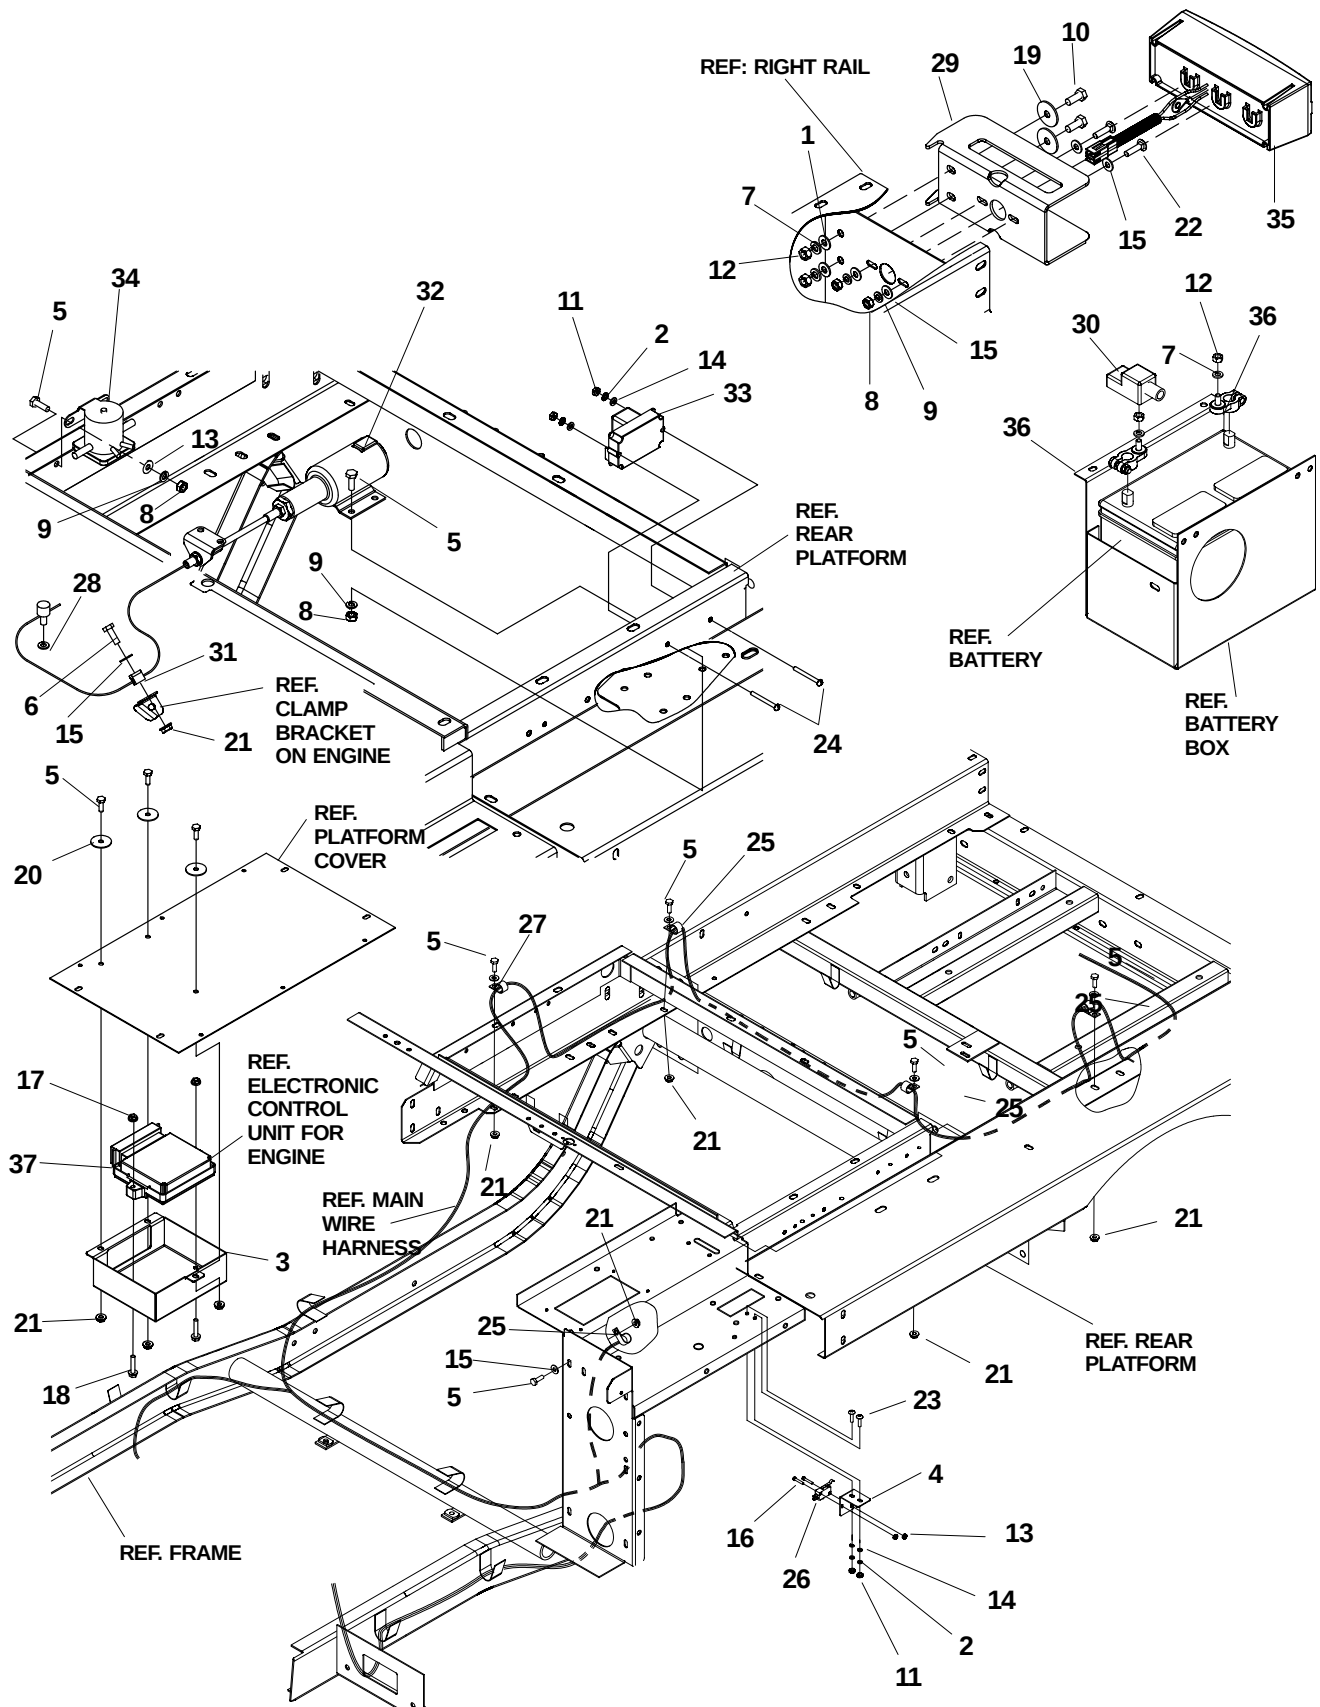

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16	4	Not illustrated.
2	120052	Lockwasher, #10	4	
	2700511	Harness, diode	1	
3	2701105.7	Cover, engine control unit	1	
4	2702136.7	Bracket, park brake switch	1	
5	300646	Screw, 1/4-20 x 3/4	14	
6	302288	Screw 1/4-20 x 1	1	
7	306325	Lockwasher, 5/16	6	
8	306375	Nut, 1/4-20	10	
9	306396	Lockwasher, 1/4	10	
10	306450	Screw, 5/16-18 x 3/4	4	
11	306531	Nut, #10-24	4	
12	306932	Nut, 5/16-18	6	
13	800587	Nut #4-40	2	
14	308089	Washer, #10	4	
15	308090	Washer, 1/4	16	
16	800439	Screw, #4-40 x 3/4	2	
17	450452	Nut, M6-1.00	2	
18	452380	Bolt, M6-1.00	2	
19	548159	Washer, 5/16	4	
20	548175	Washer, 1/4	3	
21	548910	Nut, 1/4-20	9	
22	800074	Bolt, 1/4-20 x 1 1/4	4	
23	800271	Screw, #10-24 x 1/2	2	
24	800299	Screw, #10-24 x 1	2	
25	809092	Clamp	4	
26	829754	Switch, snap action	1	
27	831225	Clamp	1	
28	831889	Washer, swivel	1	
29	832649	Guard, tail light	2	
30	837462	Boot, battery terminal	1	Not illustrated.
31	842767	Clamp, fuel tube	1	
32	845218	Solenoid with cable	1	
33	845219	Module, control	1	
34	879945	Solenoid, 12V	1	
35	888089	Taillight, RIGHT	1	Not illustrated.
	888090	Taillight, LEFT	1	
36	893395	Terminal, battery	2	
	813840	Clip	3	Not illustrated.
	825779	Grommet	1	Not illustrated.
37	2702974	Controller, ECU police	1	


6.49 REAR BOX & SIDES (SIDE OPENING)

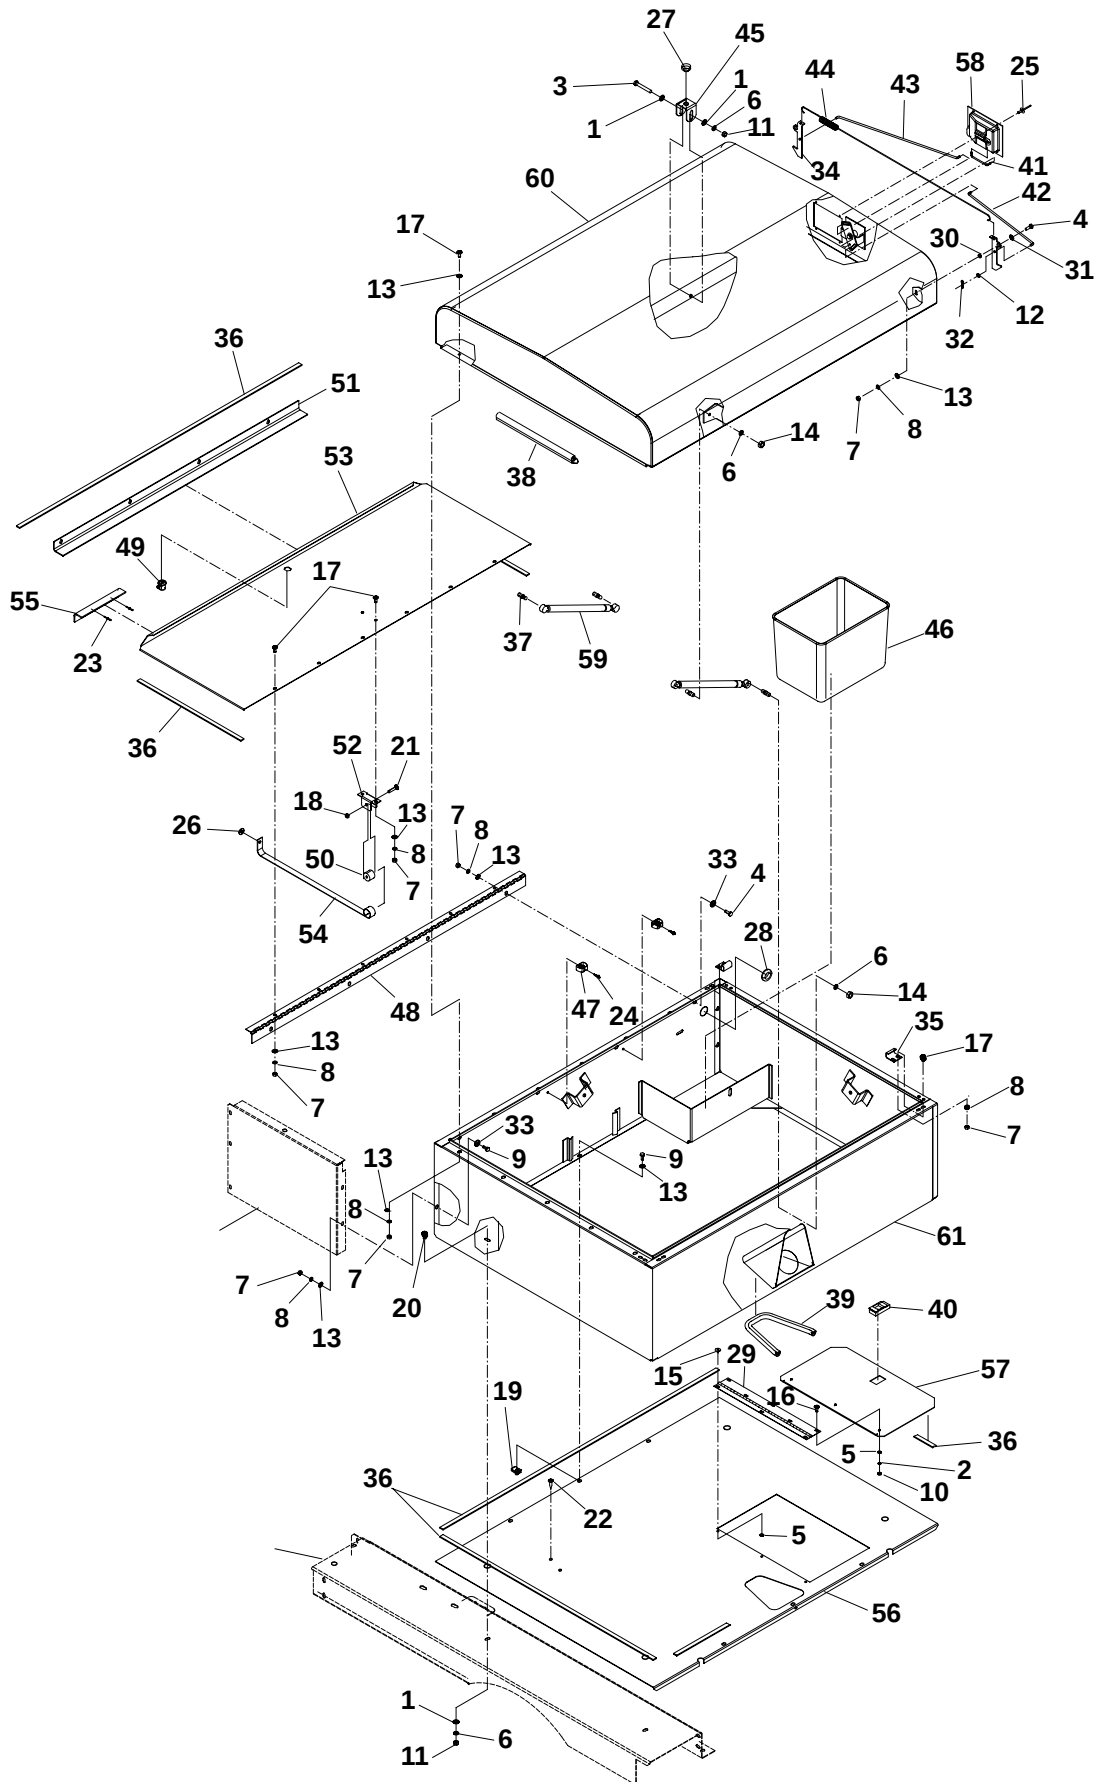

REAR BOX & SIDES (SIDE OPENING) 6.49


Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16"	6	
2	120052	Lockwasher, #10	3	
3	2702098	Screw, 5/16-18 x 2 1/4"	1	
4	300646	Screw, 1/4-20 x 3/4"	6	
5	303952	Washer, 13/64	3	
6	306325	Lockwasher, 5/16"	11	
7	306375	Nut, 1/4-20	21	
8	306396	Lockwasher, 1/4"	21	
9	306487	Screw, 1/4-20 x 5/8	9	
10	306531	Nut, #10-24	3	
11	306932	Nut, 5/16-18	7	
12	308089	Washer, #10	6	
13	308090	Washer, 1/4"	19	
14	450324	Nut, M8	4	
15	548238	Rivet, pop, 3/16	3	
16	800021	Screw, #10-32 x 1/2	3	
17	800026	Screw, 1/4-20 x 3/4"	17	
18	800059	Nut, lock, 1/4-20	1	
19	800169	Nut, lock, 1/4-20	5	
20	800177	Screw, P.T.H., 5/16-18 x 3/4"	4	
21	800263	Screw, P.T.H., 1/4-20 x 1 1/4"	1	
22	800384	Screw, 1/4 x 1, tapping	2	
23	800390	Rivet, pop, 1/8	2	
24	800475	Rivet, pop, 13/64"	2	
25	800483	Rivet, pop, 3/16	4	
26	809183	Washer, 1/4"	1	
27	810149	Bumper, rubber	1	
28	810441	Grommet	2	
29	812208	Hinge, continuous	1	
30	814585	Bushing	2	
31	816307	Washer, 17/64	2	
32	821164	Pin, hair, 1/4 x 1 1/8	6	
33	821427	Washer, sealing 1/4	11	
34	824484	Latch	2	
35	824576	Plate	2	
36	828378	Weatherstripping	As Req'd.	
37	828879	Stud, ball, 10mm x 8mm x 1.25mm	4	
38	828976	Weatherstrip	As Req'd.	
39	831004	Weatherstripping	As Req'd.	
40	835213	Latch, slide	1	
41	837960	Rod, short	1	
42	837961	Rod, medium	1	
43	837962	Rod, long	1	
44	838053	Spring, box latch	1	
45	838072	Support, box	1	
46	838223	Box, battery, plastic marine	1	
47	838225	Clip, spring	2	
48	840402	Hinge, cover	1	
49	840436	Lock, paddle handle w/key	1	
50	840438	Bushing, cover spring	1	
51	843169	Angle, cover mount	1	
52	843213	Bracket, spring bushing	1	
53	843217	Cover, box to cab	1	
54	843276	Spring, cover	1	
55	843474	Angle, platform support	1	
56	844417	Panel, floor	1	
57	844880	Door	1	
58	885927	Handle, paddle with key	1	
59	886257	Spring, gas	2	
60	891250	Cover, police box	1	
61	894631	Box, lower	1	

6.50 SEAT BELT

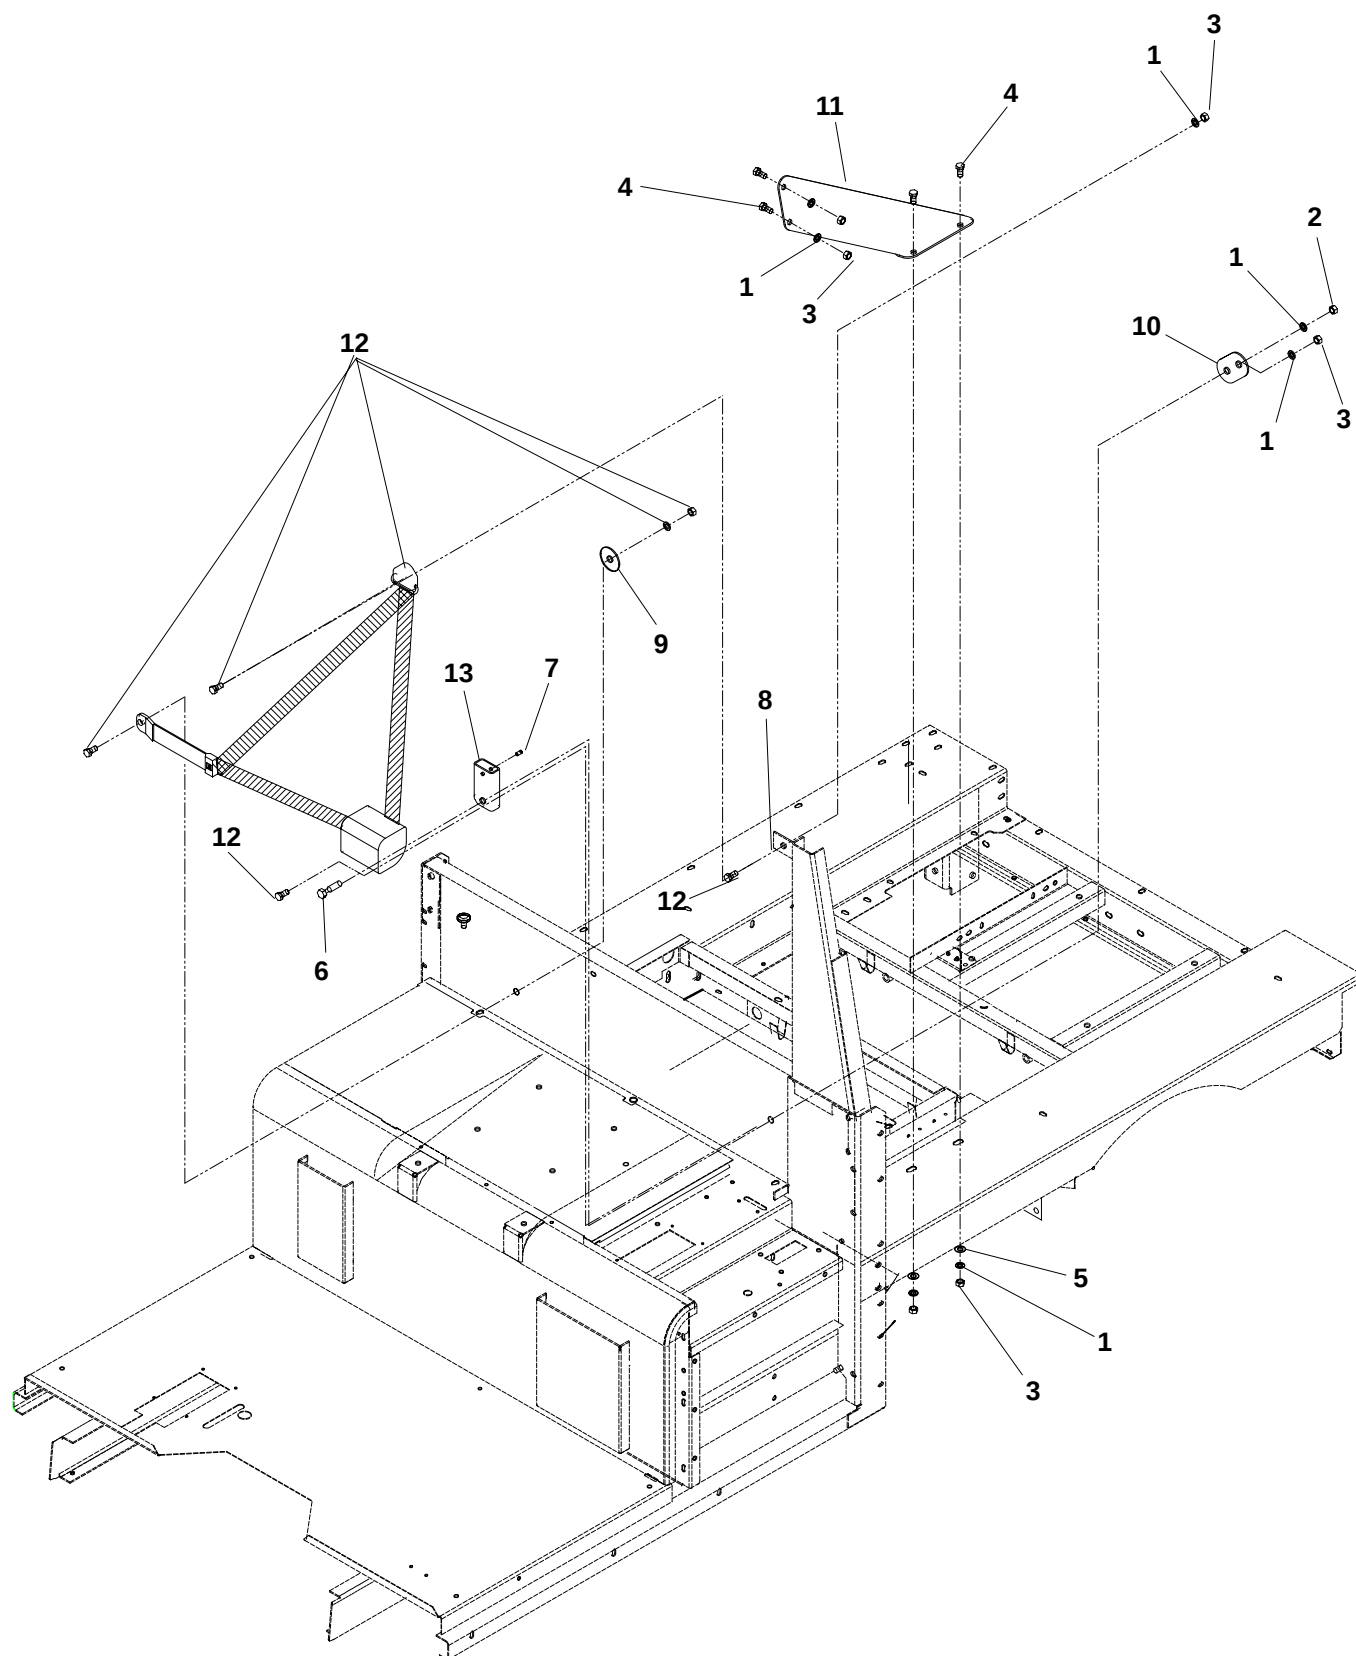

Ref. No.	Part No.	Description	No. Req'd	Notes
1	120177	Lockwaasher, 3/8	4	
2	304364	Nut, 7/16-14	1	
3	306562	Nut, 3/8-16	4	
4	306834	Screw, 3/8-16 x 3/4	4	
5	306981	Washer, 13/32	2	
6	311395	Screw, 7/16-14 x 1 3/4	1	
7	316942	Pin, spirol, 1/4 x 1/2	1	
8	821702	Washer, 29/64	4	
9	831783	Washer, 17/32	1	
10	843081	Plate, reinforcement	1	
11	843173	Brace, seat belt	1	
12	843182	Seat belt	1	
13	845082.7	Spacer, seat belt interior	1	


6.51 CLAMPS, GROMMETS, BUSHINGS & CABLE TIES

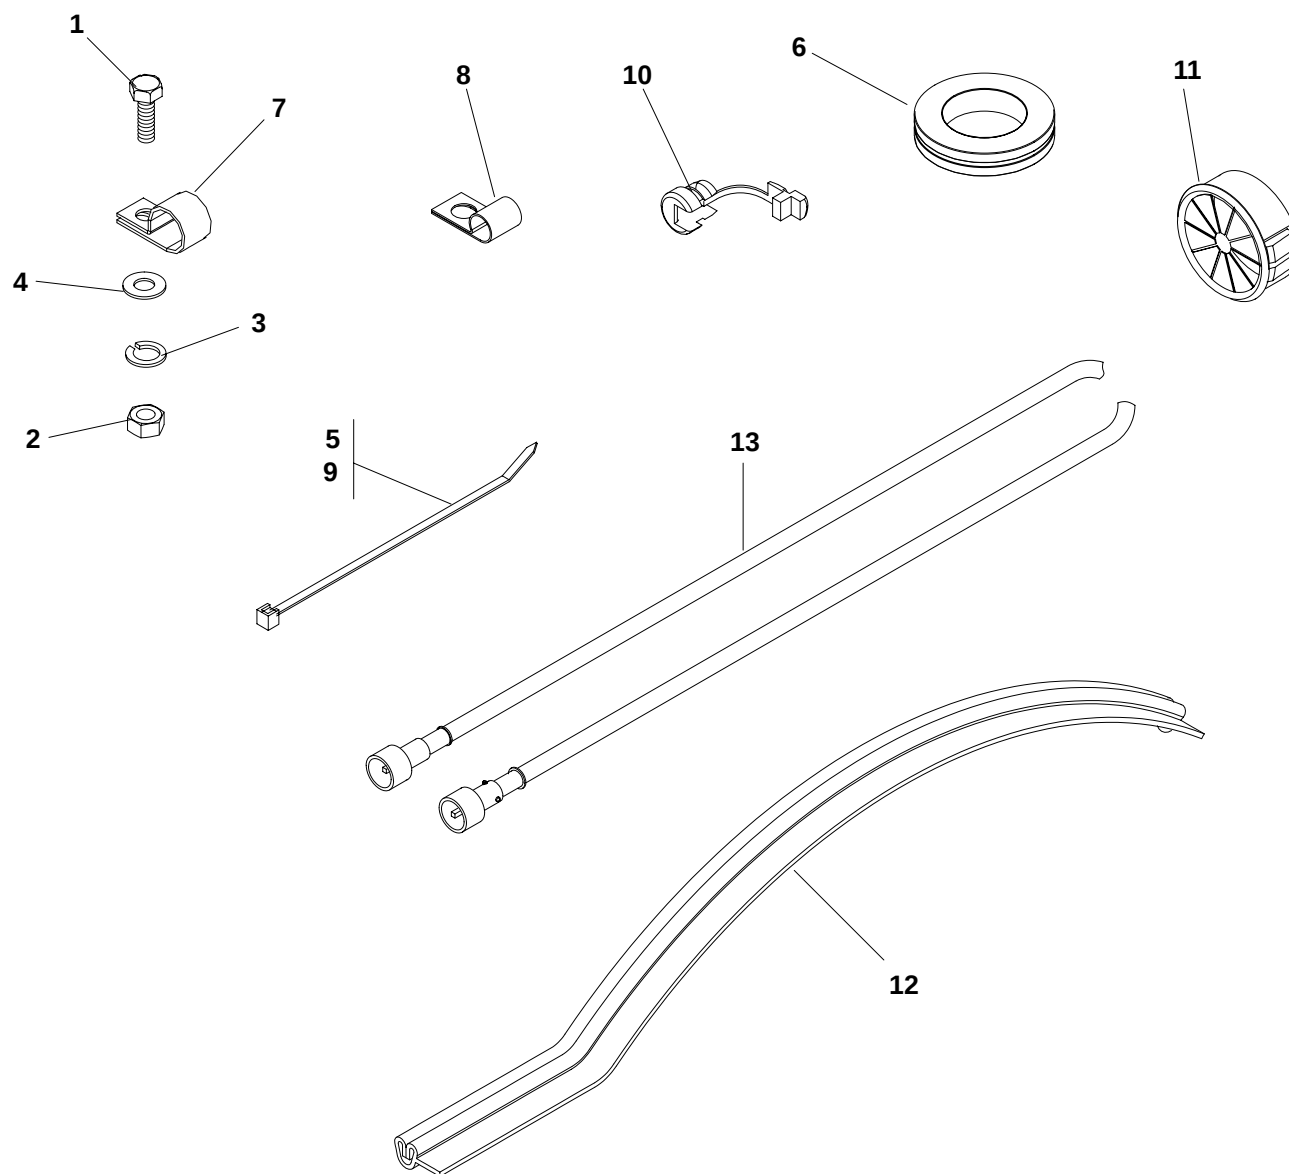

CLAMPS, GROMMENTS, BUSHINGS & CABLE TIES 6.51


Ref. No.	Part No.	Description	No. Req'd	Notes
1	300646	Screw, 1/4–20 x 3/4	2	
2	306375	Nut, 1/4–20	2	
3	306396	Lockwasher, 1/4	2	
4	308090	Washer, 1/4	2	
5	320107	Tie, wire 7 1/2" (191 mm)	10	
6	809206	Grommet	1	
7	814924	Clamp	2	
8	815058	Clamp	1	
9	823549	Tie, cable 15 1/2" (394 mm)	1	
10	825900	Bushing, strain relief	2	
11	825917	Grommet	3	
12	825924	Seal, push-on	2	
13	884823	Cable, speedometer	1	

6.52 CAB WITH SLIDING DOORS

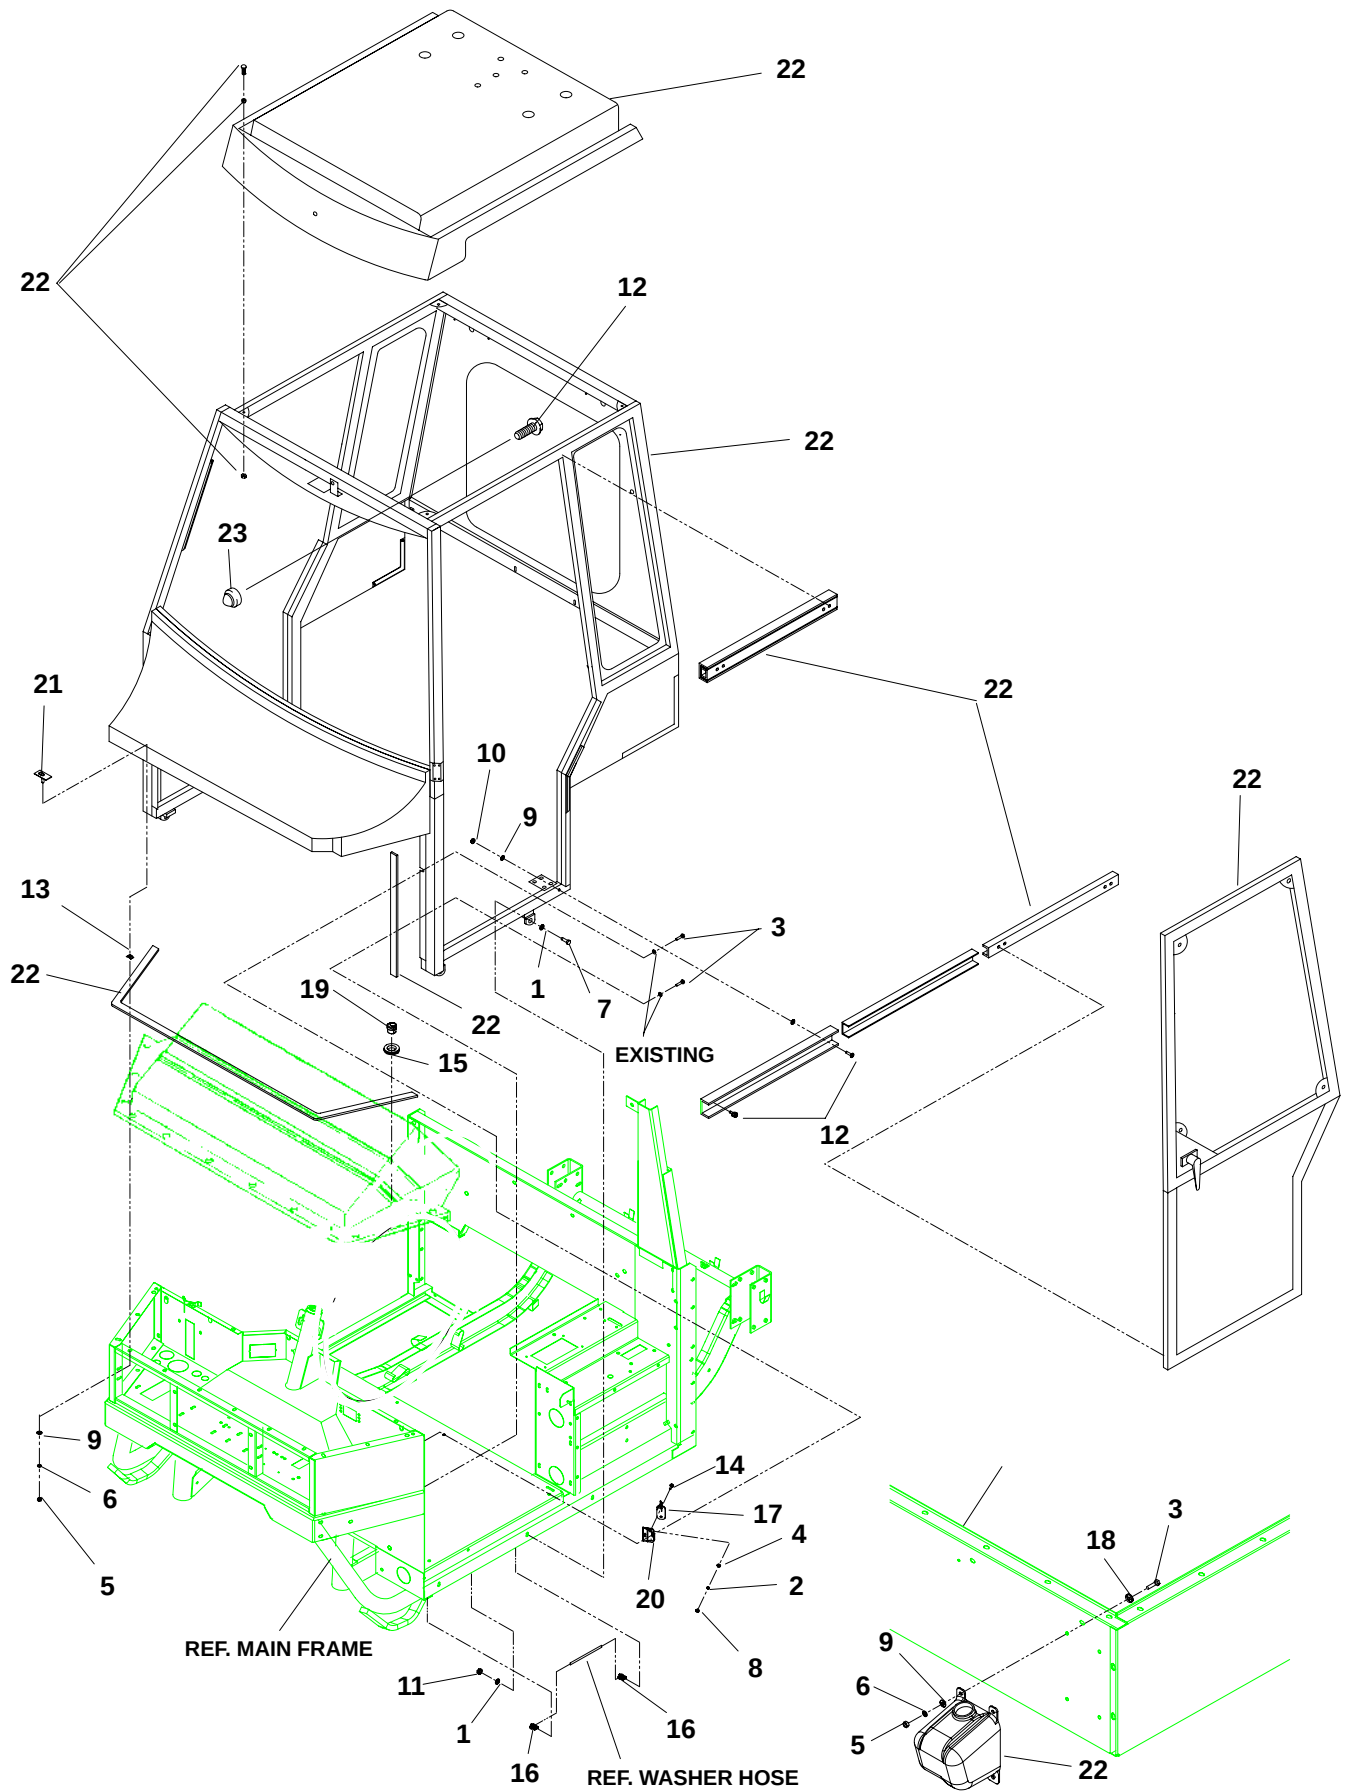

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103687	Washer, 5/16	8	Not illustrated.
2	120052	Lockwasher, #10	4	
3	302288	Screw, 1/4-20 x 1	8	
4	303952	Washer, #10	4	
5	306375	Nut, 1/4-20	8	
6	306396	Lockwasher, 1/4	8	
7	306416	Screw, 5/16-18 x 1	4	
8	306531	Nut, #10-24	4	
9	308090	Washer, 1/4	16	
10	548910	Nut, 1/4-20	4	
11	548911	Nut, 5/16-18	5	
12	800017	Screw, 1/4-20	4	
13	800167	Nut, 1/4-20	8	
14	800296	Screw, #10-24 x 3/4	4	
15	809206	Grommet	1	
16	813840	Clip	4	
17	821304	Handle holder	2	
18	821427	Washer, sealing, 1/4	4	
19	825893	Bushing, strain	1	
	845083	Bracket, chalk holder, LEFT	1	
20	845084	Bracket, chalk holder, RIGHT	1	
21	888641	Stud	4	
22		Cab, sliding door	1	
23	523126	Bumper, rubber	1	


6.53 CAB

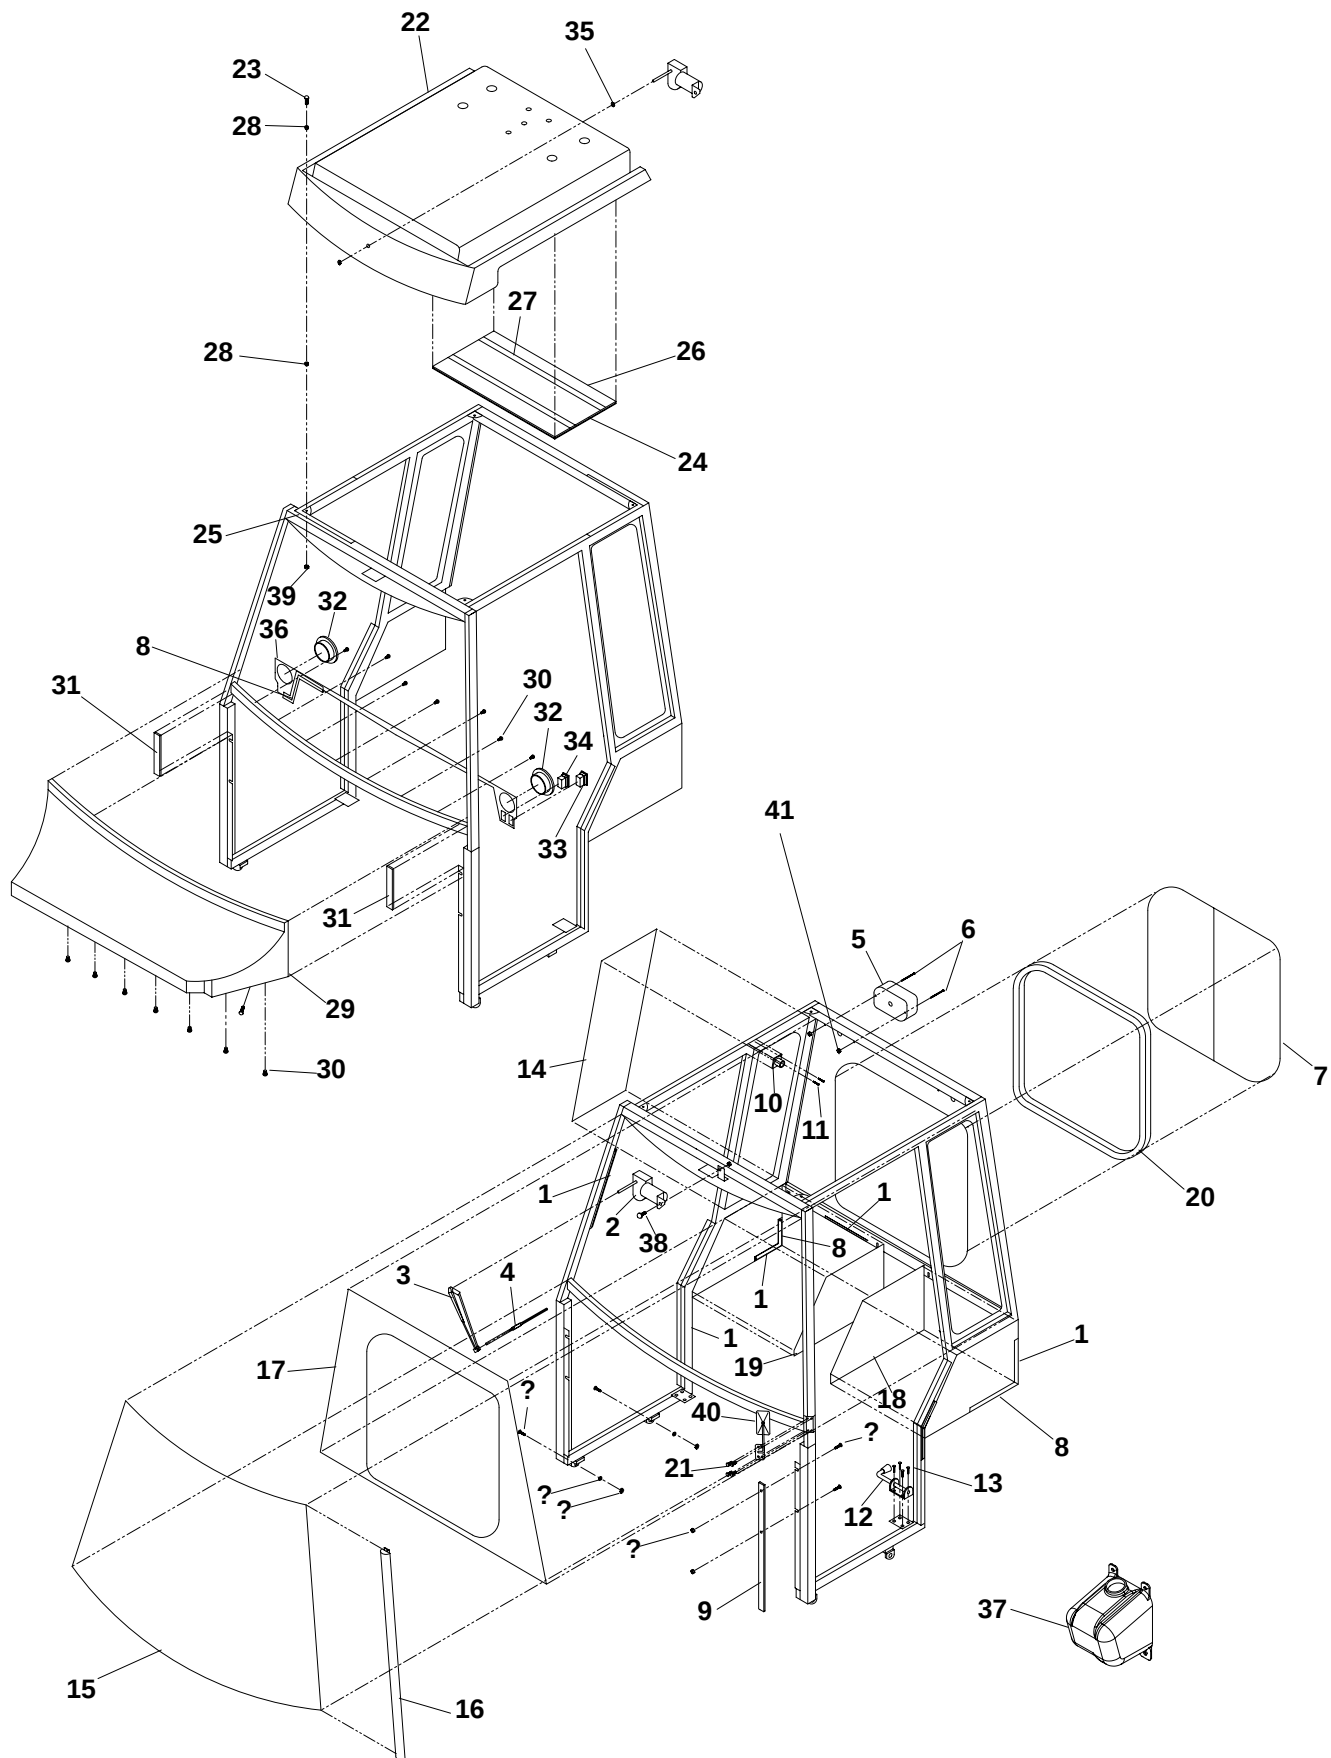

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2700647	Cab with sliding doors	1	
2	2700648	•Weather strip, push-on, 90°	As Req'd.	
3	2700649	•Motor, wiper	1	
4	2700650	•Arm, wiper, 16"	1	
5	2700651	•Blade, wiper, 16"	1	
6	2700652	•Light, tail turn & stop	2	
7	2700653	•Screw, #10-24 x 2 1/4	4	
8	2700654	•Window, rear sliding	1	
9	2700655	•Weather strip, push-on, 180°	As Req'd.	
10	2700656	•Foam, front panel cab	2	
11	2700657	•Light, dome	1	
12	2700658	•Screw, #8 x 1, socket head	2	
13	2700659	•Latch, door	2	
14	2700660	•Screw, #10-24 x 3/4	8	
15	2700661	•Window, side	2	
16	2700662	•Windshield, bent laminate	1	
17	2700663	•Trim, windshield edge	As Req'd.	
18	2700664	•Carpet, rear panel	1	
19	2700665	•Carpet, left panel	1	
20	2700666	•Carpet, right panel	1	
21	2700667	•Seal, rear sliding window	1	
22	2700668	•Screw, #10-24 x 1, socket head	8	
23	2700669	•Roof, cab	1	
24	2700670	•Screw, 1/4 x 1, step	4	
25	2700671	•Carpet, removable headliner	1	
26	2700672	•Foam, cab roof	1	
27	2700673	•Panel, removable headliner	1	
28	2700674	•Strip, velcor, 1"	As Req'd.	
29	2700675	•Grommet, 1/4, rubber	8	
30	2700676	•Hood, cab	1	
31	2700677	•Screw, #8 x 1/2, socket head	14	
32	2700678	•Foam, hood	2	
33	2700679	•Vent, adjustable	2	
34	2700680	•Switch, wiper	1	
35	2700681	•Switch, wiper washer	1	
36	2700682	•Nut, wiper motor	2	
37	2700698	•Panel, dash	1	
38	2700699	•Bottle, washer	1	
39	302288	•Screw, 1/4-20 x 1	1	
40	548910	•Nut, 1/4-20	6	
	894212	•Harness, tail light	1	Not illustrated.
	894864	•Mirror, outside	2	
	894876	•Harness, wiper	1	Not illustrated.
	894941	•Harness, cab	1	Not illustrated.
41	2700700	•Nut, #10-24 w/XT lockwasher	4	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.54 SLIDING DOORS

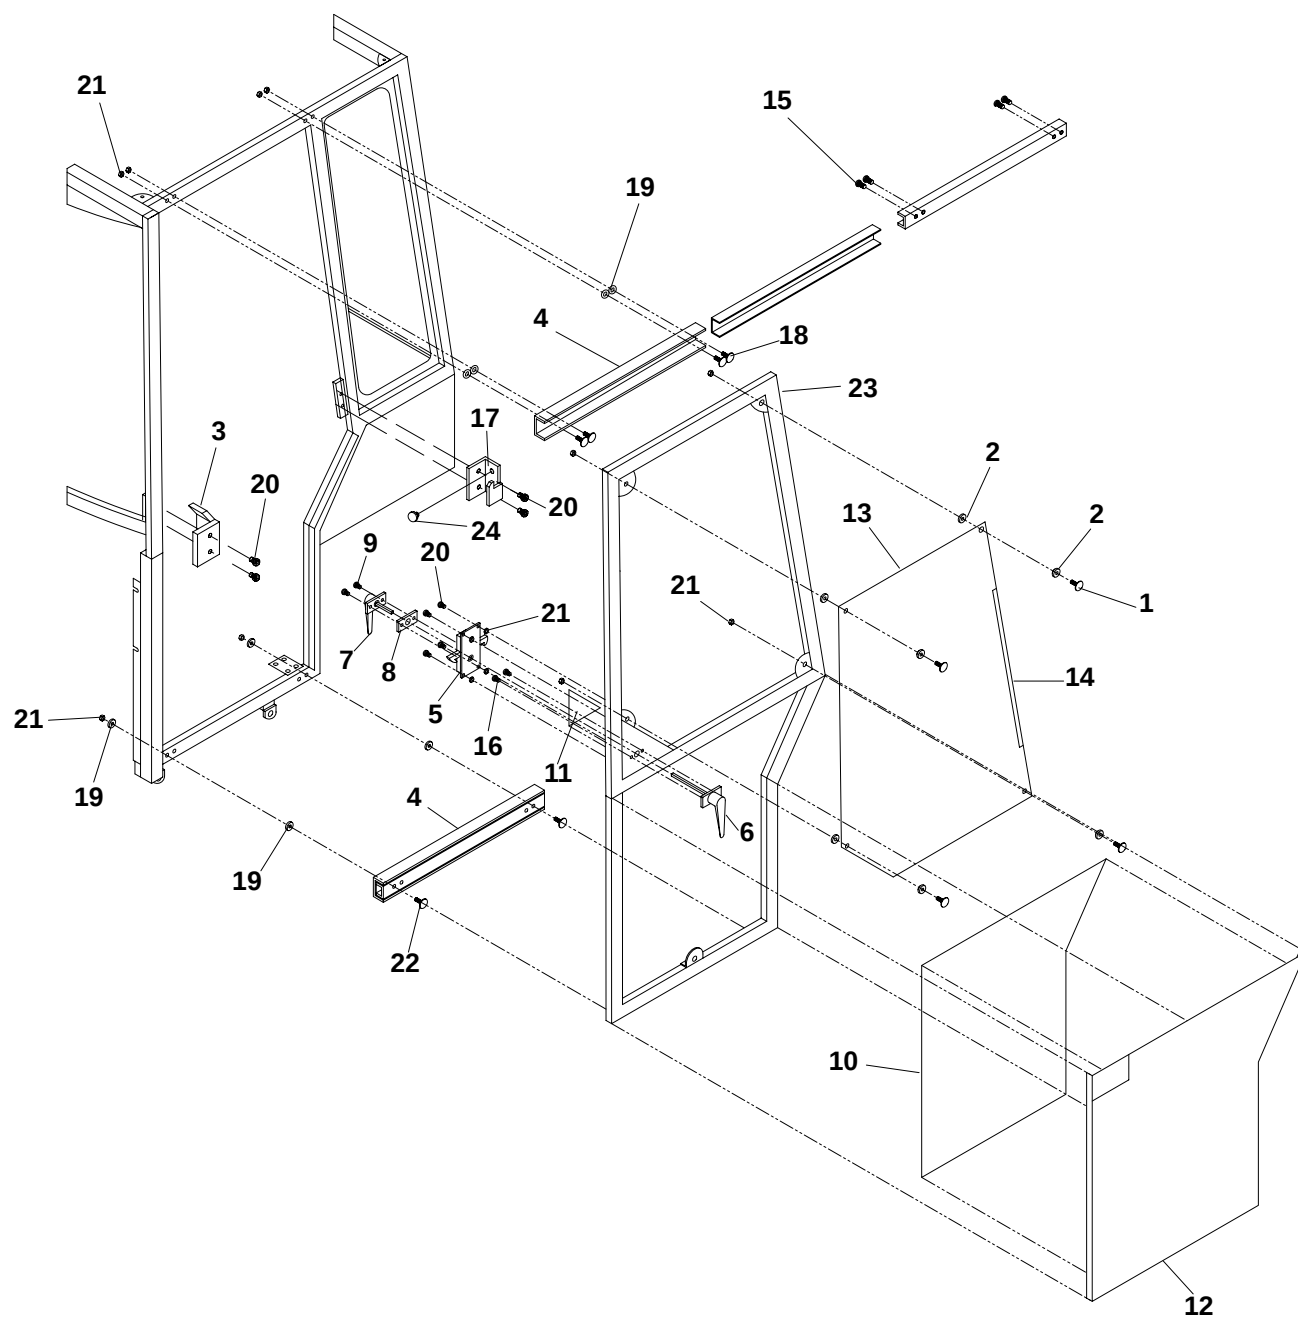


Ref. No.	Part No.	Description	No. Req'd	Notes
1	2700669	Cab, sliding door	1	Not illustrated.
2	2700674	•Screw, 1/4 x 1	8	
3	2703063	•Grommet, 1/4", rubber	16	
3	2703064	•Striker, front, LEFT	1	
4	2703064	•Striker, front, RIGHT	1	
4	2700683	•Track, door	4	
5	2700684	•Latch, double slam door	2	
6	2700685	•Handle, outer locking	2	
7	2700686	•Handle, inner locking	2	
8	2700687	•Spacer	2	
9	2700688	•Bolt, inner handle	4	Not illustrated.
10	2700689	•Carpet, door panel, LEFT	1	
10	2700701	•Carpet, door panel, RIGHT	1	Not illustrated.
11	2700690	•Carpet, door latch	2	
12	2700691	•Panel, fiber glass door, LEFT	1	Not illustrated.
12	2700702	•Panel, fiber glass door, RIGHT	1	
13	2700692	•Window, door	2	Not illustrated.
14	2700693	•Weather stripe, 3/8", 90°	As Req'd.	
15	2700694	•Screw, #12–24 x 3/4, socket head	16	
16	2700695	•Screw, #10–24 x 1/2, socket head	4	
17	2700696	•Striker, LEFT, rear	1	
17	2700697	•Striker, RIGHT, rear	1	
18	300646	•Screw, 1/4–20 x 3/4	4	
19	308090	•Washer, 1/4	8	
20	548827	•Screw, 1/4–20 x 1/2	16	
21	548910	•Nut, 1/4–20	19	
22	800017	•Screw, 1/4–20 x 1	4	Not illustrated.
23	2700703	•Door, LEFT	1	
23	2700704	•Door, RIGHT	1	
24	810149	•Bumper	2	

• INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

6.55 MODIFICATION REAR BOX & LID


MODIFICATION 53747

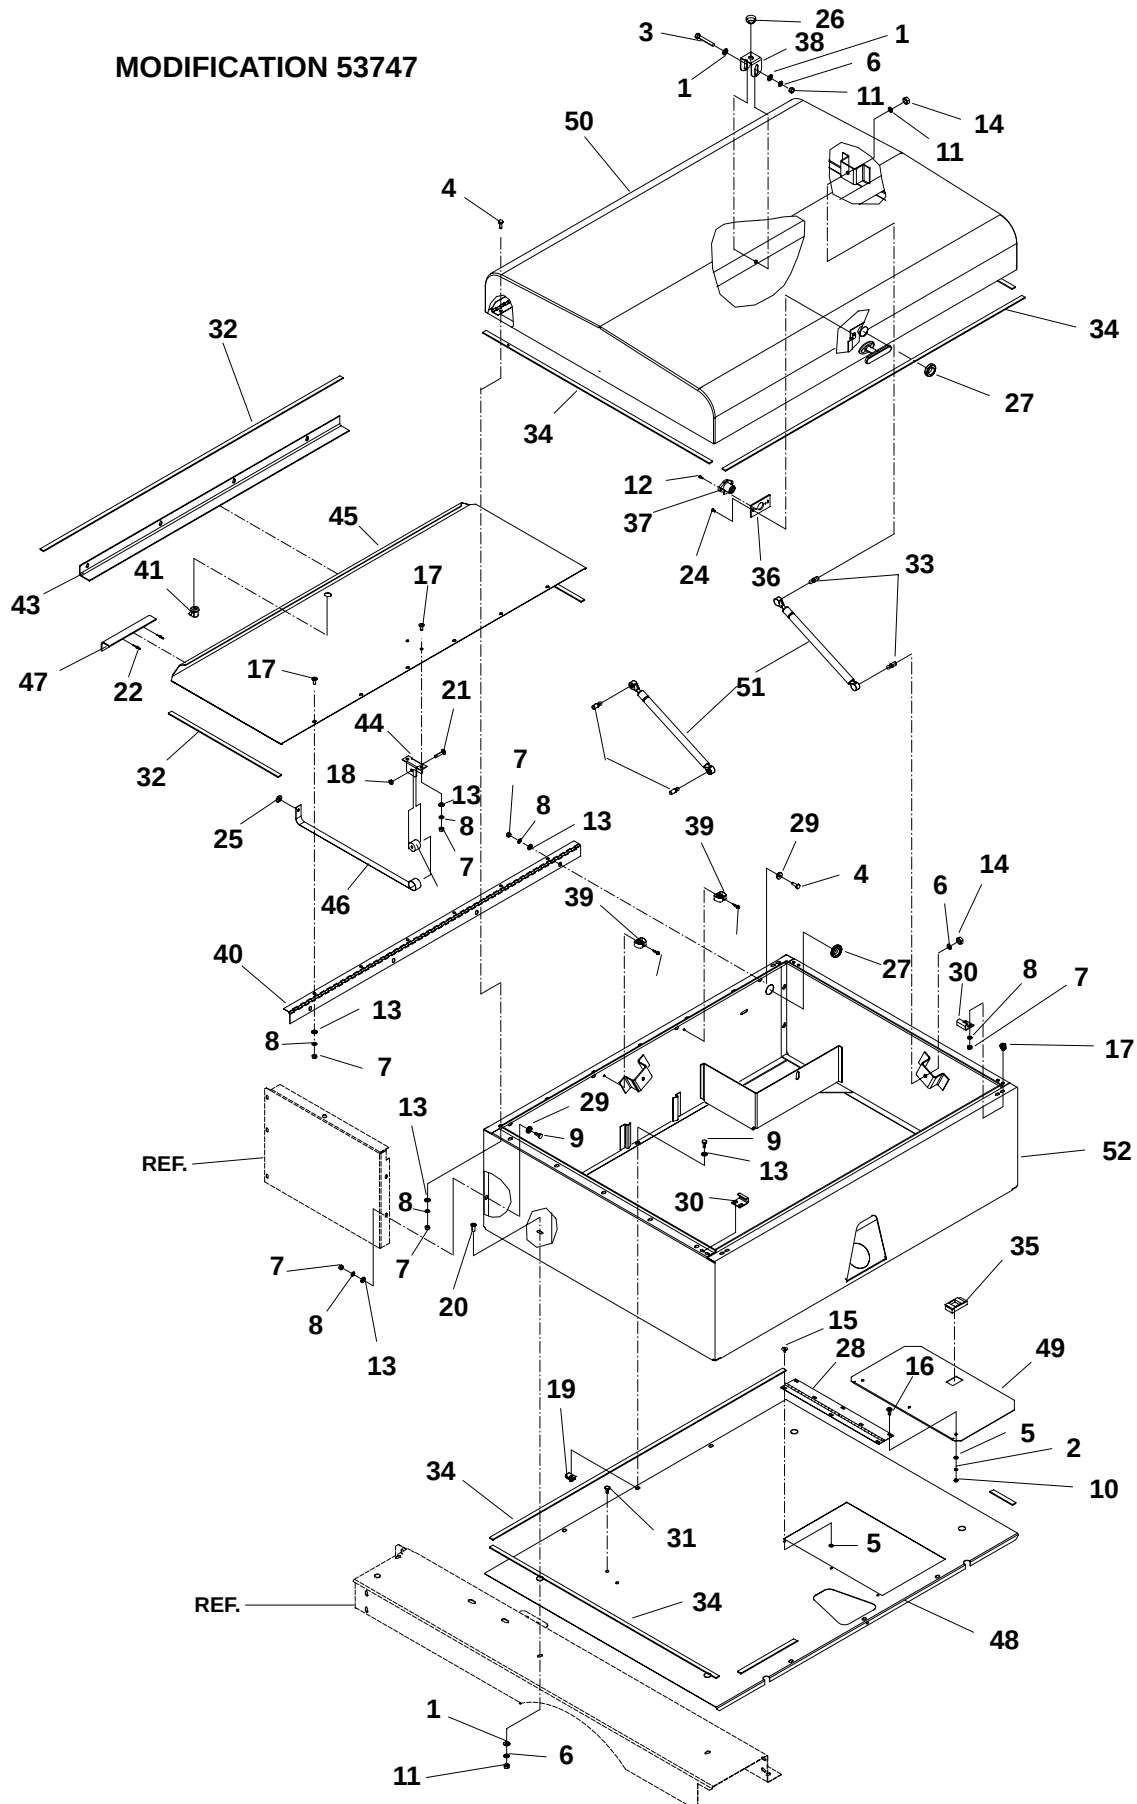

MODIFICATION 53747


Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16"	6	
2	120052	Lockwasher, #10	3	
3	130167	Screw, 5/16-18 x 2 1/4"	1	
4	300646	Screw, 1/4-20 x 3/4"	11	
5	303952	Washer, 13/64	3	
6	306325	Lockwasher, 5/16"	11	
7	306375	Nut, 1/4-20	21	
8	306396	Lockwasher, 1/4"	21	
9	306487	Screw, 1/4-20 x 5/8	9	
10	306531	Nut, #10-24	3	
11	306932	Nut, 5/16-18	7	
12	307136	Screw, #6-32 x 5/16	2	
13	308090	Washer, 1/4"	19	
14	450324	Nut, M8	4	
15	548238	Rivet, pop, 3/16	3	
16	800021	Screw, #10-32 x 1/2	3	
17	800026	Screw, 1/4-20 x 3/4"	12	
18	800059	Nut, lock, 1/4-20	1	
19	800169	Nut, lock, 1/4-20	5	
20	800177	Screw, P.T.H., 5/16-18 x 3/4"	4	
21	800263	Screw, P.T.H., 1/4-20 x 1 1/4"	1	
22	800390	Rivet, pop, 1/8	2	
23	800475	Rivet, pop, 13/64"	2	
24	800747	Screw, #8-32 x 3/8	2	
25	809183	Washer, 1/4"	1	
26	810149	Bumper, rubber	1	
27	810441	Grommet	2	
28	812208	Hinge, continuous	1	
29	821427	Washer, sealing 1/4	11	
30	824576	Plate	2	
31	825919	Plug, hole	2	
32	828378	Weatherstripping	As Req'd	
33	828879	Stud, ball, 10mm x 8mm x 1.25mm	4	
34	828976	Weatherstrip	As Req'd	
35	835213	Latch, slide	1	
36	837165	Plate	1	
37	837196	Lock	1	
38	838072	Support, box	1	
39	838225	Clip, spring	2	
40	840402	Hinge, cover	1	
41	840436	Lock, paddle handle w/key	1	
42	840438	Bushing, cover spring	1	
43	843169	Angle, cover mount	1	
44	843213	Bracket, spring bushing	1	
45	843217	Cover, box to cab	1	
46	843276	Spring, cover	1	
47	843474	Angle, platform support	1	
48	844417	Panel, floor	1	
49	844880	Door	1	
50	883835	Cover	1	
51	886257	Spring, gas	2	
52	894631	Box, lower	1	

6.56 MODIFICATION TRAFFIC LIGHT BAR

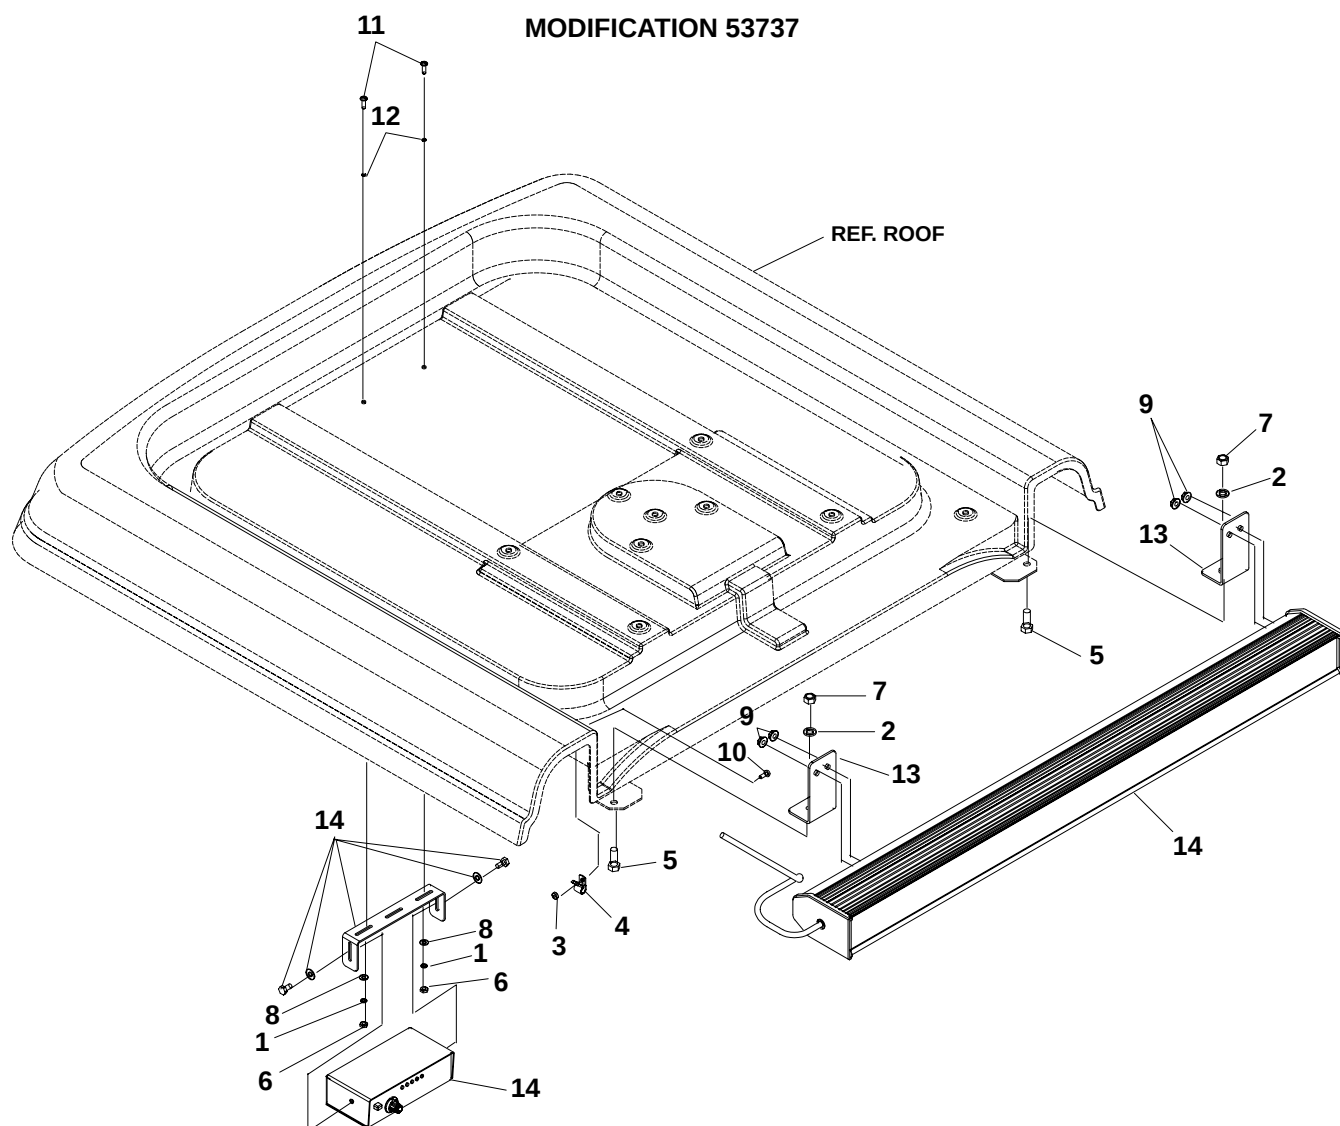


Ref. No.	Part No.	Description	No. Req'd	Notes
1	120052	Lockwasher, #10	2	Not illustrated.
2	120177	Lockwasher, 3/8	2	
3	133079	Nut, #8-32	1	
4	181361	Clamp, molded, 8 mm, I.D.	1	
5	306414	Screw, 3/8-16 x 1	2	
6	306531	Nut, #10-24	2	
7	306562	Nut, 3/8-16	2	
8	308089	Washer, #10	2	
9	548910	Nut, 1/4-20	4	
10	800178	Screw, #8-32 x 1/2	1	
11	800215	Screw, #10-24 x 5/8	2	
12	821068	'O' ring	2	
13	845095	Bracket, angle	2	
	895053	Harness, traffic light	1	
14	895062	Light, traffic control	1	

MODIFICATION AMBER FLASHING LIGHT 6.57

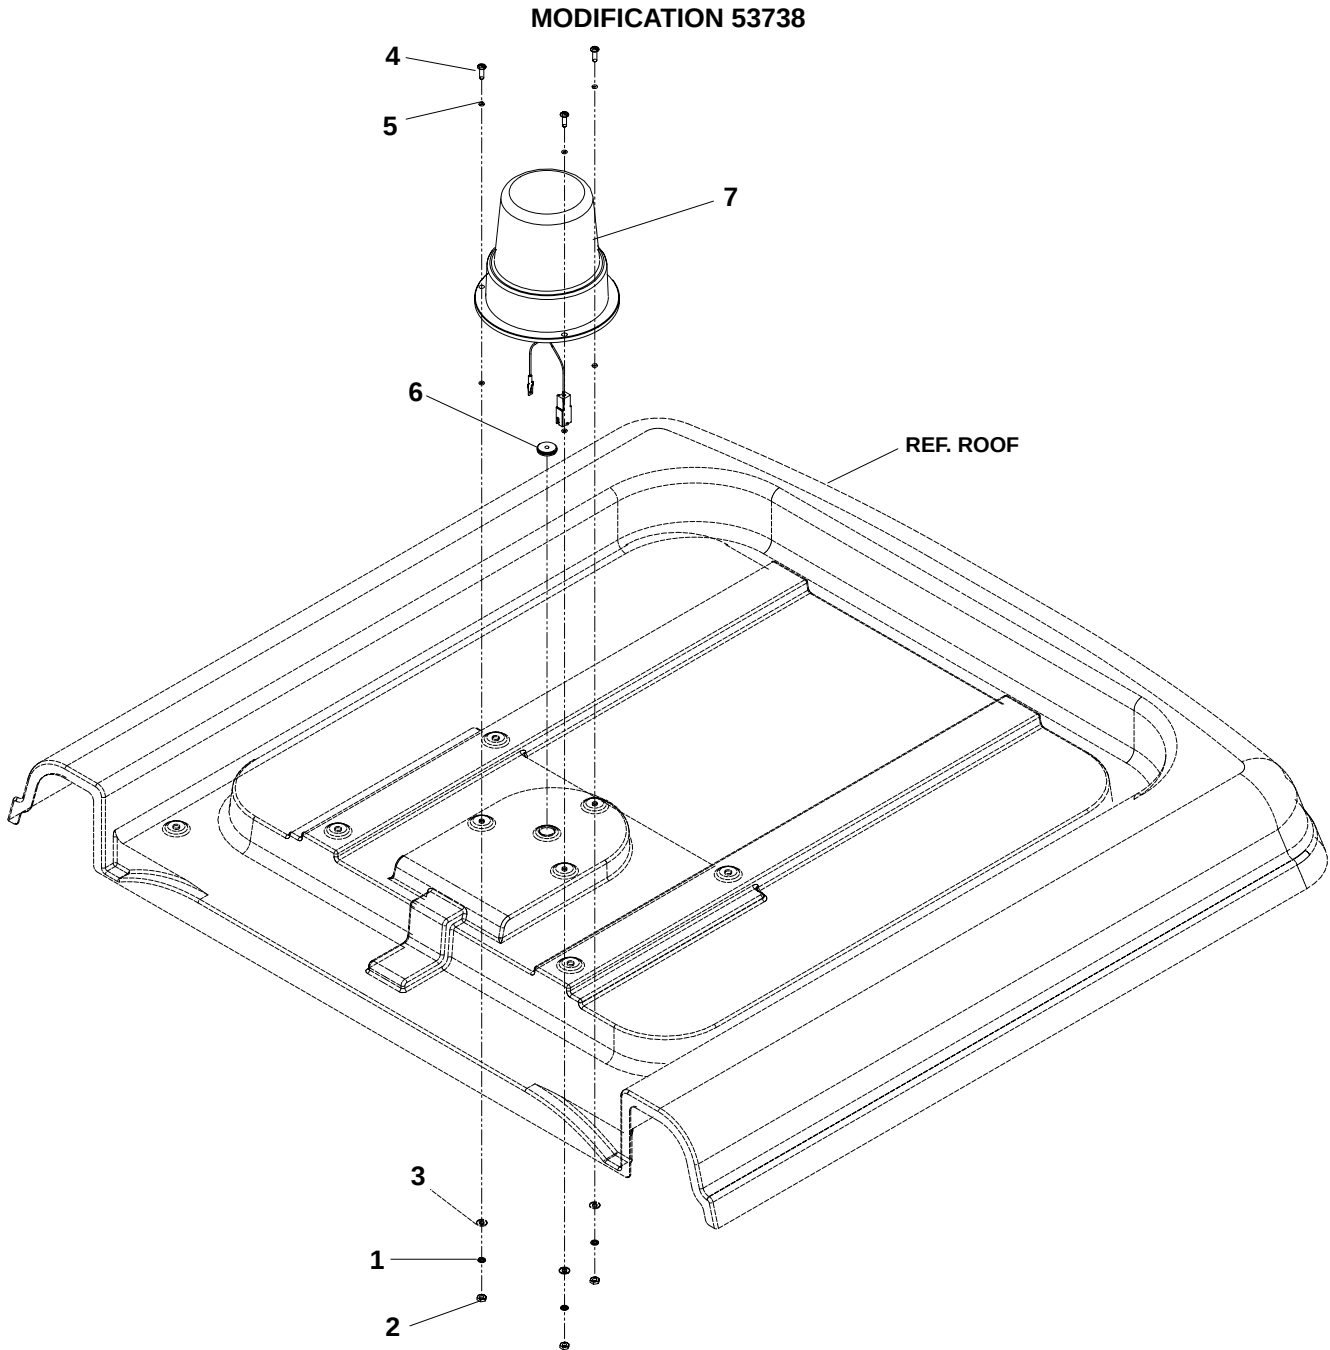


Ref. No.	Part No.	Description	No. Req'd	Notes
1	120052	Lockwasher, #10	3	Not illustrated.
2	306531	Nut, #10-24	3	
3	308089	Washer, #10	3	
4	800215	Screw, #10-24 x 5/8	3	
5	821068	'O' ring	6	
6	839168	Grommet	1	
7	894710	Light, flashing	1	
	894944	Wire	1	

6.58 MODIFICATION FLASHING LIGHT BAR

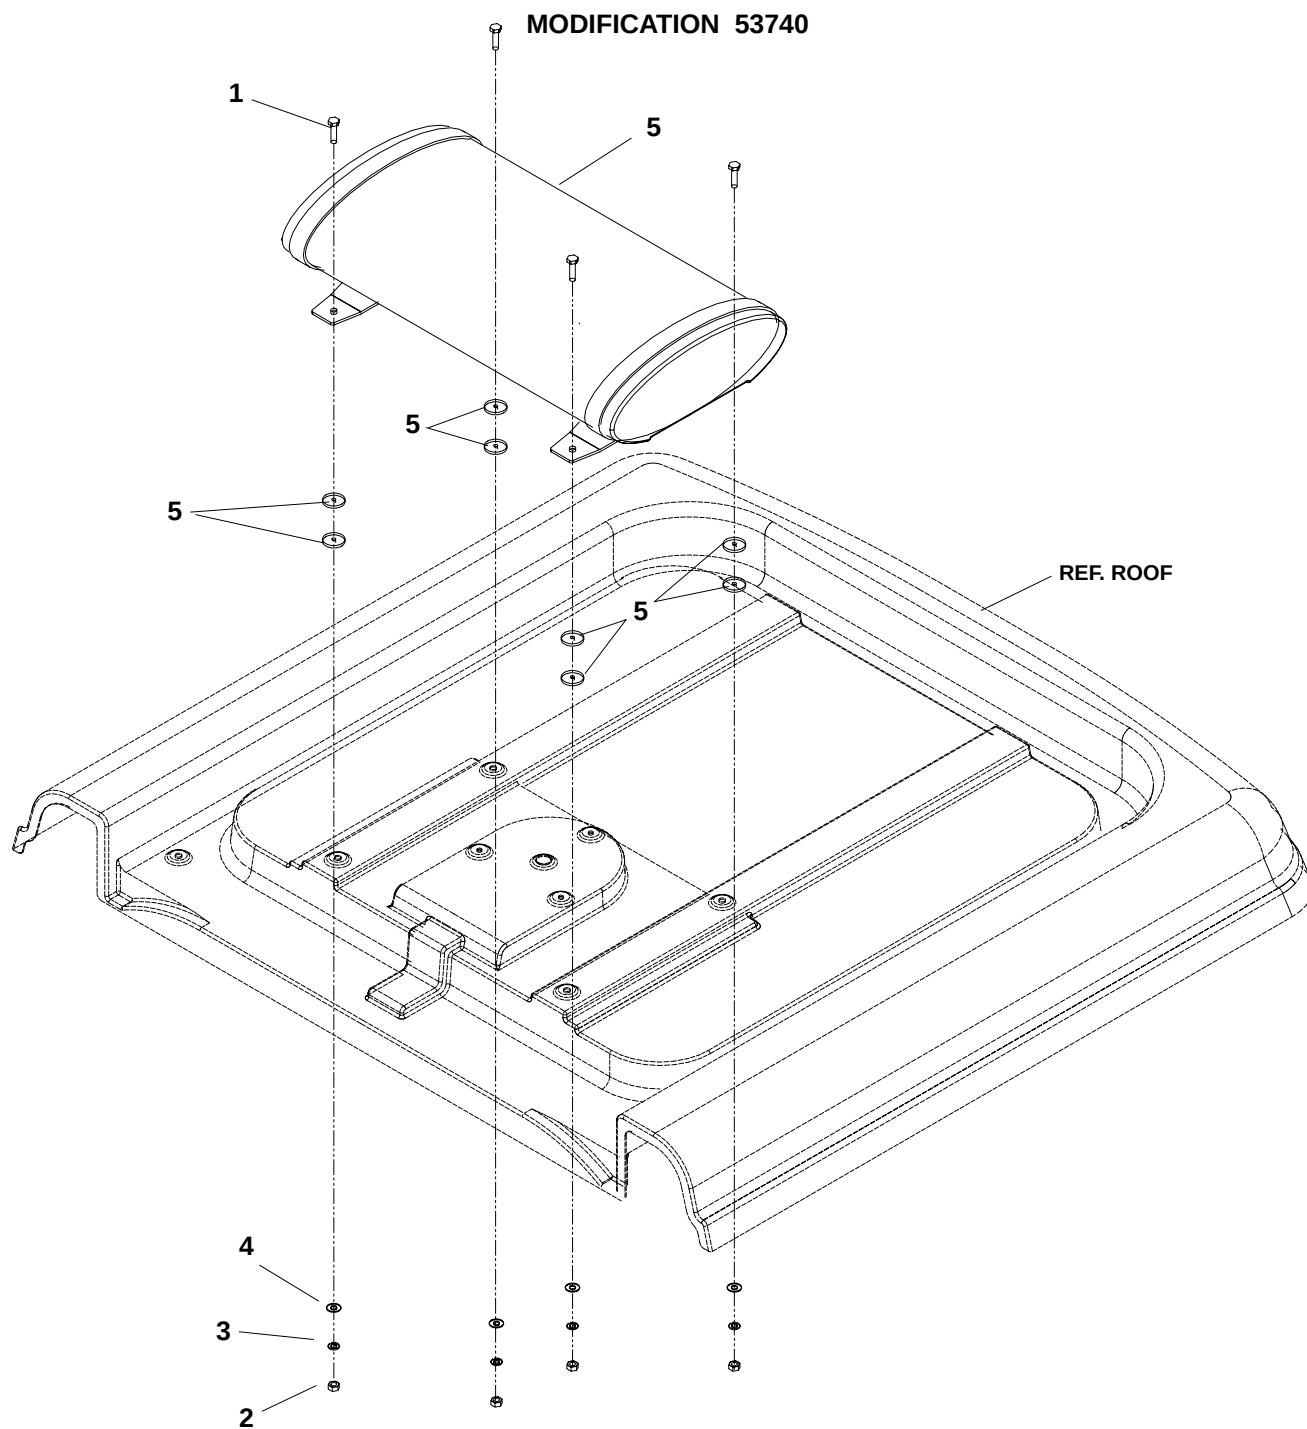


Ref. No.	Part No.	Description	No. Req'd	Notes
1	302288	Screw, 1/4-20 x 1	4	Not illustrated.
2	306375	Nut, 1/4-20	4	
3	306396	Lockwasher, 1/4	4	
4	308090	Washer, 1/4	4	
	894944	Wire	1	
5	895054	Light, rotating	1	

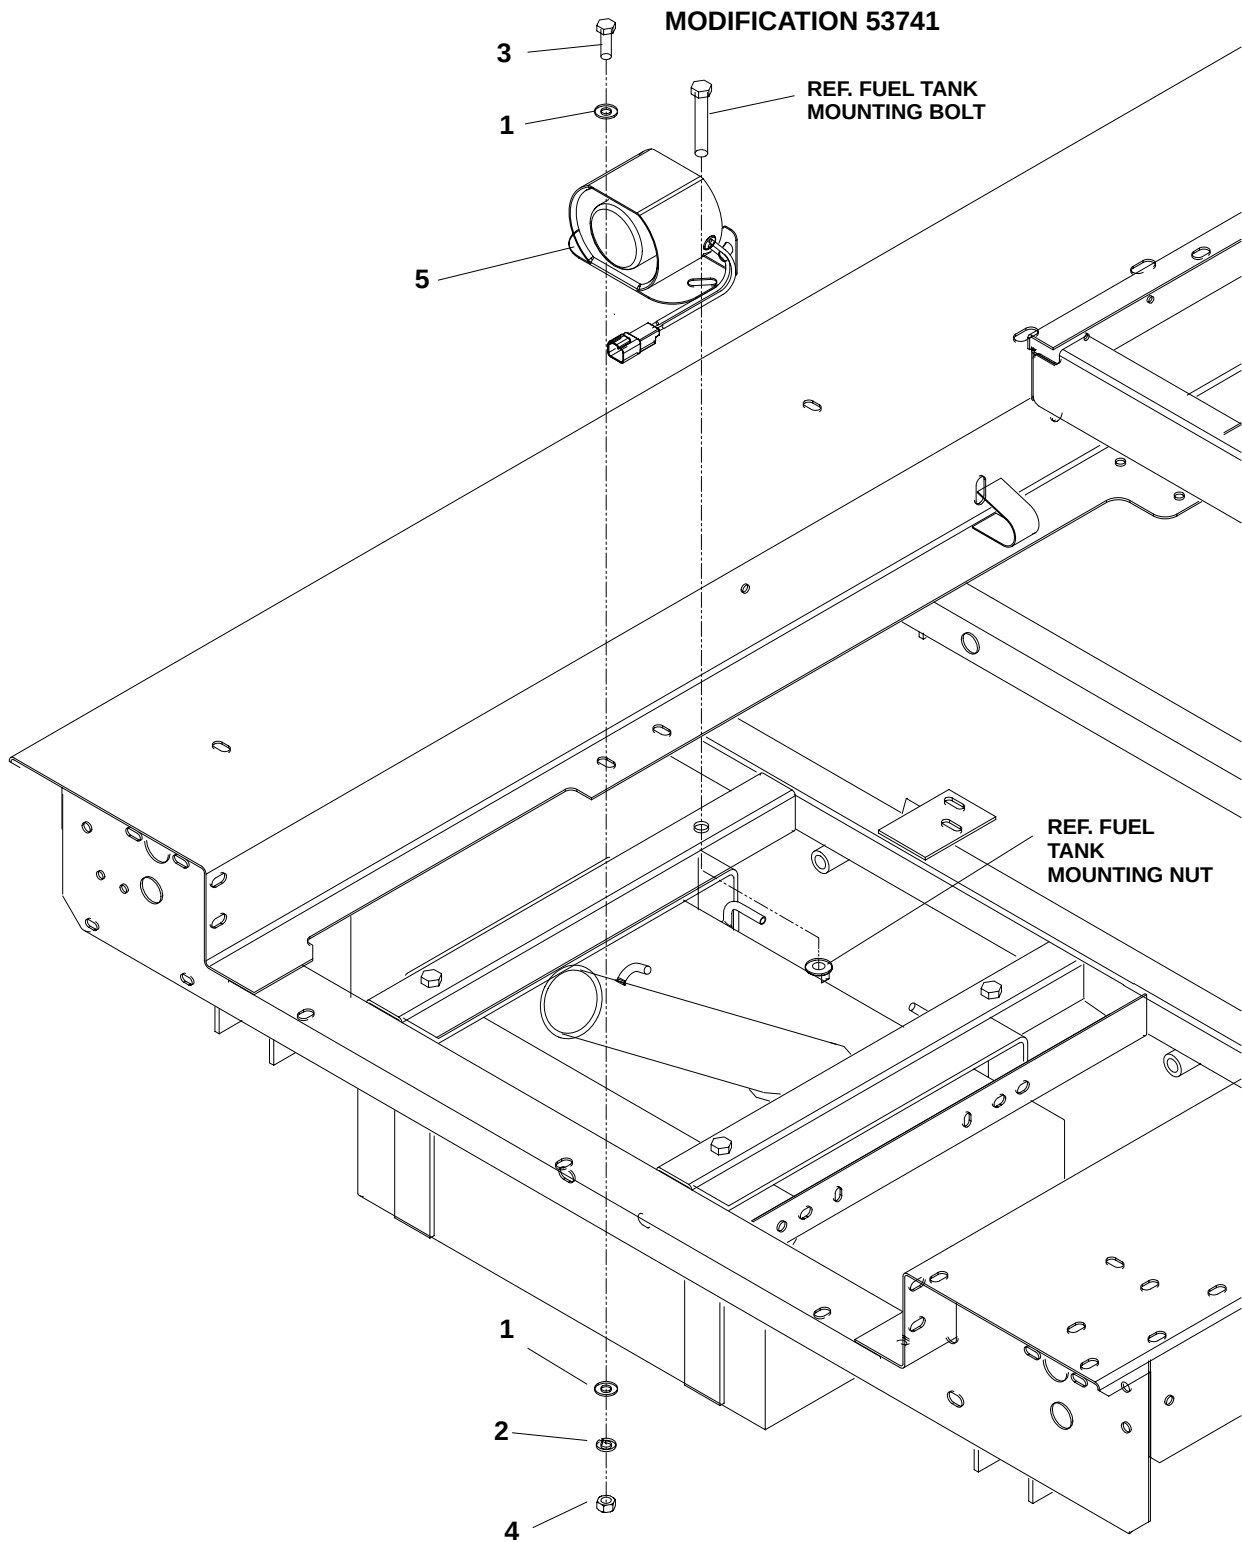

Ref. No.	Part No.	Description	No. Req'd	Notes
1	103867	Washer, 5/16	2	
2	306325	Lockwasher, 5/16	1	
3	306416	Screw, 5/16-18 x 1	1	
4	306932	Nut, 5/16-18	1	
5	894814	Alarm, back-up	1	

6.60 TURN SIGNAL FLASHER, TIRE & RIM

TURN SIGNAL FLASHER

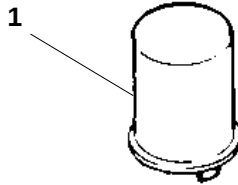

Ref. No.	Part No.	Description	No. Req'd	Notes
1	2700872 822867	Harness, flasher 1 Flasher, hazard warning 12V 1		Not Illustrated.

TIRE & RIM

Ref. No.	Part No.	Description	No. Req'd	Notes
	893172 844173	Tire & rim 1 •Rim 1		Not illustrated. Not illustrated.

•INDENTED PART NAMES INDICATE THESE PARTS ARE INCLUDED IN PRECEDING ASSEMBLY.

INDEX

	PAGE		PAGE
G		Clamps, Grommets, Bushings & Ties . . .	114–115
General Information	2	Cooling System	88–89
I		Decals	104–105
Identification		Differential	84–87
Engine Serial Number	3	Doors, sliding	120–121
Model Number	3	Electrical Components	
Serial Number	3	Front	106–107
Vehicle	3	Main	108–109
M		Engine	
Maintenance	6	Air Filter	92–93
Air Cleaner	12	Camshaft	26–27
Checking Element	12	Crankshaft	24–25
Installing Element	12	Cylinder Block	22–23
Servicing Element	12	Cylinder Head	20–21
Automatic Transmission	13	Driveshaft	40–41
Battery	10	Exhaust Manifold	33
Jump Starting with Booster Battery	10	Gaskets	18–19
Bulbs, Fuses & Flasher	8	Hoses	92–93
Changing the Front Wheel	14	Intake Manifold	30–31
Changing the Rear Wheel	14	Oil Fill	94
Differential	13	Oil Filter	94
Engine	8	Oil Pump	34–35
Access	9	Pistons	24–25
Cooling System	10	PVC Valve	32
Draining the Cooling System	11	Starter	38–39
Filling the Cooling System	11	Thermostat	36–37
Oil Level	9	Throttle	30–31
Extended Storage	15	Timing Belt & Cover	28–29
Fuses	8	Torque Converter	40–41
Guide	6	Water Pump & Outlet	36–37
Jacks, Jacking Locations	13	Engine Cover	62–63
Lubricating Brake Pedal Bushings	12	Exhaust System	80–81
Lubrication Chart	7	Frame	
Tire Replacement	15	Main	56–57
Modifications		Platform	58–59
Amber Flashing Light	125	Front Bumper	101
Back Up Alarm	127	Front Fork	66–67
Flashing Light Bar	126	Front Shock Absorber	98
Rear Box and Sides	122–123	Fuel System	82–83
Traffic Light Bar	124	Governor	90–91
P		Heater/Defroster	102–103
Parts		Horn	68–69
Alternator	90–91	Hub	
Axle, Front	76–77	Front	76–77
Body, Front	60–61	Rear	74–75
Brake, Hydraulic	78–79	Rear Box & Sides (Side Opening)	110–111
Brakes		Rear Bumper	99
Front	76–77	Rear Spring	64–65
Rear	74–75	Seat	62–63
Cab	118–119	Seat Belt	112–113
Cab with Sliding Doors	116–117	Shift Cable	72–73
		Shifter	72–73
		Steering Gear	68–69
		Steering Wheel	68–69
		Throttle Pedal	70–71
		Tires, Front & Rear	100

INDEX

	PAGE		PAGE
Transmission	42–43	S	
Brake Band	52–53	Specifications	
Clutch	48–49	Battery	4
Dipstick	44–45	Brake Fluid	4
Gaskets	44–45	Capacities	4
Input Shaft	48–49	Dimensions	4
Oil Pump	46–47	Engine	5
Output Shaft	50–51	Engine Oil	4
Pan	44–45	Fuel	4
Planetary Gears	50–51	Gear Ratios	5
Shift Shaft	52–53	Lubrication	4
Shift Switch	46–47	Vehicle	4
Solenoids	46–47	T	
Tubes	46–47	Tire & Rim	128
Valve	54–55	Torque Chart	16
Turn Signal Switch	96–97		
Wheel Cylinder, Rear	74–75		

PART NUMBER INDEX

Part No.	Page No.		
09119-10039	81	2700698	119
11610-60C01	95	2700699	119
11640-53F20	95	2700701	121
13701-53F20	93	2700702	121
13780-79201	93	2700703	121
14183-82050	81	2700704	121
14492-82001	81	2700819.7	89
181361	124	2700867	107
2700031	37, 93	2700904	107
2700161	83	2700918	107
2700166	83	2701043	89
2700178	83	2701045.8	81
2700335	91	2701089	81
2700503	91	2701105.7	109
2700511	109	2701115.7	71
2700615.7	59	2701129	91
2700616.7	59	2701236	91
2700647	119	2701326	71
2700648	119	2701329	105
2700649	119	2701409.7	61, 107
2700650	119	2701419.7	57
2700651	119	2701434.7	91
2700653	119	2701442	93
2700654	119	2701459.7	57
2700655	119	2701466	85
2700656	119	2701477.12	63
2700658	119	2701480	71
2700660	119	2701482	63
2700661	119	2701483	63
2700662	119	2701498	63
2700663	119	2701508	79
2700664	119	2701509.7	79
2700665	119	2701510	91
2700666	119	2701511	91
2700668	119	2701512.7	93
2700670	119	2701513	37, 93
2700671	119	2701514.7	95
2700672	119	2701516	93
2700673	119	2701517	91
2700674	119, 121	2701625	63
2700675	119	2701626	63
2700677	119	2701627	63
2700678	119	2701629	63
2700679	119	2701636	95
2700680	119	2701637	37
2700683	121	2701640	95
2700684	121	2701652	93
2700685	121	2701776	19, 21
2700686	121	2701777.5	19
2700687	121	2701795	19, 21
2700689	121	2701796	19, 31
2700690	121	2701797	19, 33
2700691	121	2701798	19, 21
2700692	121	2701799	19, 21
2700693	121	2701800	19, 35
2700696	121	2701801	19, 37
2700697	121	2701802	19, 37
		2701803	19, 31
		2701804	19, 31
		2701813	21
		2701814	21
		2701815	21
		2701816	21
		2701819	21, 23
		2701820	21, 23
		2701821	21
		2701824	21
		2701825	21
		2701826	21
		2701828	21
		2701830	21
		2701831	21
		2701832	21
		2701833	21
		2701835	21
		2701837	23
		2701838	23
		2701849.7	107
		2701865.7	107
		2701869	107
		2701870	95
		2701897	83
		2701898	83
		2701899	83
		2701900	23
		2701902	23
		2701904	23
		2701905	23
		2701906	23
		2701908	95
		2701911	23
		2701913	23
		2701915	23
		2701916	23
		2701918	23
		2701919	23
		2701920	23
		2701922	25
		2701923	25
		2701924	25
		2701925	25
		2701926	25
		2701927	25
		2701928	25
		2701929	25
		2701930	25
		2701932	25
		2701933	25
		2701934	25
		2701935	25
		2701936	25
		2701937	25
		2701938	25
		2701939	25
		2701940	25
		2701942	25
		2701943	25

Part No.	Page No.				
2701945	25	2702476	31	2702785	51
2701946	25	2702477	31	2702786	51
2701947	27	2702478	31	2702787	51
2701949	25, 35	2702479	31	2702788	51
2701952	25	2702480	31	2702789	51
2701954	25	2702481	31	2702790	51
2701955	27	2702484	32	2702792	51
2701956	27	2702485	32	2702793	51
2701957	27	2702488	32	2702795	51
2701958	27	2702489	32	2702796	53
2701959	27	2702490	32	2702797	53
2701960	27	2702491	32	2702798	53
2701966	27	2702492	33	2702800	53
2701967	27	2702496	33	2702801	53
2701969	27	2702497	33	2702804	53
2701970	27	2702501	33	2702805	53
2701971	27	2702515	35	2702806	45
2701972	27	2702516	35	2702808	45
2701973	29	2702518	35	2702809	45
2701974	29	2702522	37	2702810	45
2701975	29	2702525	37	2702811	45
2701976	29	2702539	37	2702813	45
2701979	29	2702542	37	2702814	45
2701980	29	2702543	37	2702816	45
2701981	29	2702594	105	2702817	45
2701982	29	2702662	43	2702821	55
2701983	29	2702683	43	2702822	47
2701984	29	2702690	43	2702823	47
2701985	29	2702697	41	2702824	47
2701986	29	2702698	41	2702825	55
2701988	29	2702699	41	2702828	55
2701990	29	2702700	41	2702829	55
2701995	31	2702701	41	2702830	55
2702000	31	2702748	45	2702831	55
2702003	63	2702749	45	2702832	55
2702004	63	2702750	43	2702833	55
2702037	93	2702751	43	2702841	55
2702082	79	2702752	43	2702842	55
2702136.7	109	2702754	43	2702843	47
2702138	107	2702759	43	2702845	47
2702199	63	2702760	43	2702861	105
2702236	57	2702761	43	2702863	77
2702267	95	2702763	43	2702881	47
2702268	95	2702765	47	2702882	47
2702277.12	59	2702766	47	2702885	47
2702300.7	95	2702768	47	2702896	39
2702301	93	2702769	49	2702897	39
2702303	83	2702770	49	2702898	39
2702374.7	81	2702771	49	2702899	39
2702388	83	2702772	49	2702900	39
2702429	31	2702773	49	2702903	39
2702431	31	2702774	49	2702904	39
2702432	31	2702775	49	2702906	39
2702433	31	2702777	51	2702907	39
2702467	31	2702778	51	2702909	39
2702468	31	2702779	51	2703063	121
2702473	31	2702780	51	2703064	121
2702474	31	2702781	51	2703090	95
		2702782	51	2703091	95
		2702784	51	2703282.12	63

Part No.	Page No.				
2703283.12	63	814474	85	825877	97
2703303	63	814475	87	825893	107, 117
2703306	105	814476	85	825894	97
2703307	105	814477	85	825900	107
2703335	107	814481	87	825933	57
320122	85	814482	87	825934	59
385174	77	814483	87	825994	103
386767	87	814484	87	826284	41
515268	71	814488	85	826285	41
523126	117	814585	111	826294	59
524643	71	815403	87	826491	69
548482	41	815794	87	826590	47, 83, 93
800128	67	815847	59	826726	97, 107
800130	67	816045	85	827018	87
800356	85	816447	69	827486	87
800789	89	816455	69	828231	107
800929	103	816456	69	828378	59, 111, 123
805189	67	816515	85	828577	57
805320	85	816653	69	828613	107
805321	85	816654	69	828879	123
805322	85	816659	69	828946	65
805875	85	816660	69	828976	111, 123
807332	98	816674	69	828998	57
807439	65	816675	69	829285	67
807442	67	816697	67	829754	109
807630	77	816823	87	829787	37
808018	75	816824	87	829815	103
808076	67	816825	87	829880	57
808088	77	816991	105	829954	83
808303	85	817019	73	830135	107
808969	67	817307	79	830140	91
809092	109	817309	107	830167	69
809206	117	818226	85	830168	69
809229	77	819923	97	830175	95
809231	89	820889	89, 93, 103	830176	95
809255	67, 69	821068	124, 125	830355	61, 103
809257	75	821153	75	830366	107
809268	77	821304	117	830369	69
810149	67, 111, 121, 123	821606	57	830370	69
810152	57	821893	79, 103	830557	87
810441	59, 111, 123	822819	105	830762	57
811650	75, 77	822867	128	830790	61
812098	67	823549	93	830908	61
812167	67	823621	98	830920	95
812208	59, 111, 123	823752	79	830929	95
812218	65, 87	824060	77	830930	79, 93
812335	85	824484	111	831004	111
812445	79	824576	111, 123	831225	109
813840	117	824833	75, 77	831603	81
813850	65	824925	75	831604	81
814226	85	825358	93, 97, 107	831909	71
814465	85	825403	67	832033	89, 103
814466	85	825477	79	832115	105
814467	85	825502	105	832130	105
814468	85	825624	37, 47, 83, 89, 95	832555	69
814469	85	825629	105	832649	109
814470	85	825679	67	832804	103, 105
814471	85	825681	67	833512	89
		825682	67	833607	105
		825779	89, 103	833846	103

Part No.	Page No.		
833850	75, 77	840230	57
833851	103	840233	57
833857	103	840394	105
833858	103	840395	105
833862	103	840402	123
833879	75	840403	59
833891	75	840404	59
833912	75, 77	840436	111, 123
833916	75, 77	840438	111, 123
833918	75	840565	97
833939	103	840566	97
833940	103	840679	107
833943	61	841982	81
833949	103	842140	79
833958	103	842598	79
833974	103	842740	47, 73, 91
833984	103	842767	109
833985	103	842782	89
833986	103	842784	73
833993	75, 77	842849	73
834036	83	842854	73
834099	87	842863	61
834161	75	842868	57
834582	83	842884	81
834888	79	842944	89, 95, 103
834979	65, 87	842990	105
835062	91	843013	91
835072	77	843025	75
835213	59, 111, 123	843026	75, 77
835805	89	843081	113
835905	100	843167	107
836024	103	843169	111, 123
836206	95	843172	57
836389	57	843173	113
837165	123	843182	113
837196	123	843200	103
837298	107	843206	59
837303	61	843208	61
837462	109	843209	61
837690	57	843210	61
837960	111	843211	61
837961	111	843212	61
837962	111	843213	111, 123
838053	111	843217	111, 123
838072	111, 123	843218	59
838223	111	843219	57
838225	123	843251	73
838340	89	843276	111, 123
838354	107	843306	107
838355	75, 77	843360	71
838402	75	843399	95
838403	75	843420	95
838404	75	843439	105
838409	65	843440	105
838688	57	843441	105
839168	107, 125	843443	105
839197	97, 107	843474	111, 123
840187	97	843561	71
		843562	71
		843563	71
		843857	37, 93
		843858	79
		843942	107
		844167	79
		844173	128
		844223	71
		844327	103
		844417	111, 123
		844637.7	83
		844641	83
		844654.7	83
		844670	83
		844748	83
		844829	107
		844830	107
		844831	107
		844847	105
		844853	59
		844858	59
		844880	111, 123
		844890	71
		845050	107
		845066	79
		845067	79
		845072.7	89
		845073.7	89
		845074	89
		845075.7	89
		845078.7	103
		845079	79
		845081	79
		845082.7	113
		845083	117
		845084	117
		845095	124
		845218	109
		845219	109
		845224	37, 93, 95
		845345.7	91
		845365	37
		845380	79
		845409	37, 93
		879476	85
		879748	85
		879945	109
		880365	69
		883835	123
		883883	59, 99
		884022	77
		884183	59
		884750	69
		884823	75
		885033	87
		885034	87
		885833	61
		885927	111
		885964	107
		886015	65
		886016	65
		886090	107

Part No.	Page No.		
886204	87	889445	101
886205	87	889596	103
886257	111, 123	889930	75
886600	67	890000	107
886670	107	891046	77
886706	87	891058	77
886735	100	891068	77
886883	69	891250	111
886999	87	891764	67
887175	81	891765	67
888089	109	891767	67
888090	109	891811	75
888497	89	891812	75
888524	77	892471	75
888610	77	892528	97
888641	117	892766	79
888777	75	892807	69
888793	75	893172	100, 128
888856	103	893395	109
888861	75	893876	91
889050	89	894057	57
889051	89	894159	71
889065	87	894212	119
889159	61	894456	79
889350	75	894511	103
		894590	89
		894594	95
		894631	111, 123
		894706	91
		894708	91
		894710	125
		894814	127
		894832	107
		894847	79
		894851	107
		894853	107
		894854	107
		894864	119
		894876	119
		894899	77
		894901	89
		894941	119
		894944	125, 126
		895053	124
		895054	126
		895062	124
		895112.7	41
		895113	79
		895125	41
		895126	41
		900047	57
		900048	57
		900051.7	103
		900052.7	103